


Air Cleaner Element

INTAKE (INDUCTION)


2. Air Cleaner Element

A: REMOVAL

- 1) Remove the clips from air cleaner case (front).

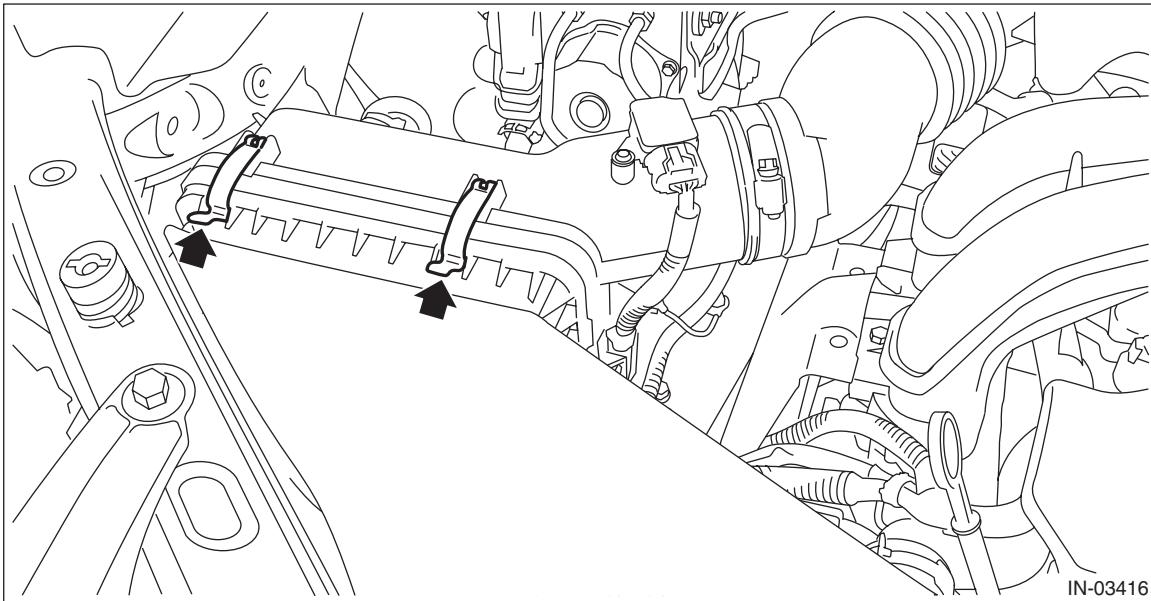

- 2) Open the air cleaner case, and remove the air cleaner element.

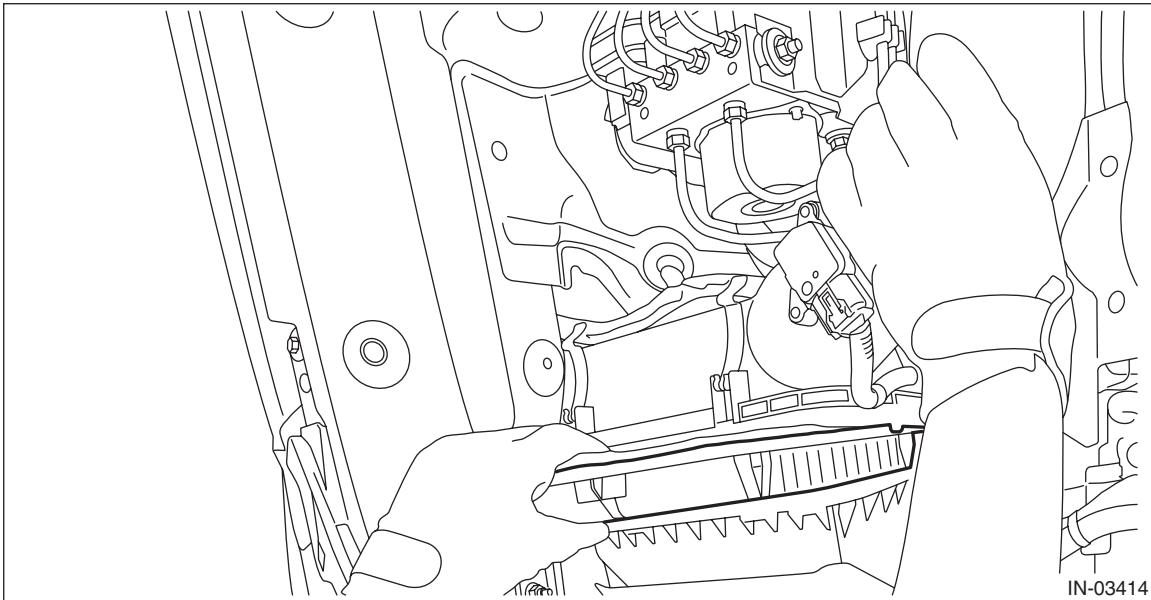

B: INSTALLATION


Install in the reverse order of removal.

CAUTION:

Be sure to use SUBARU genuine air cleaner element depending on the engine type when replacing the air cleaner elements. Using other air cleaner element may affect the engine performance.

NOTE:

- Check that there are no foreign objects in the air cleaner case.
- When installing the air cleaner case (rear), align the protrusion of the air cleaner case (rear) to the hole on the air cleaner case (front) to install.

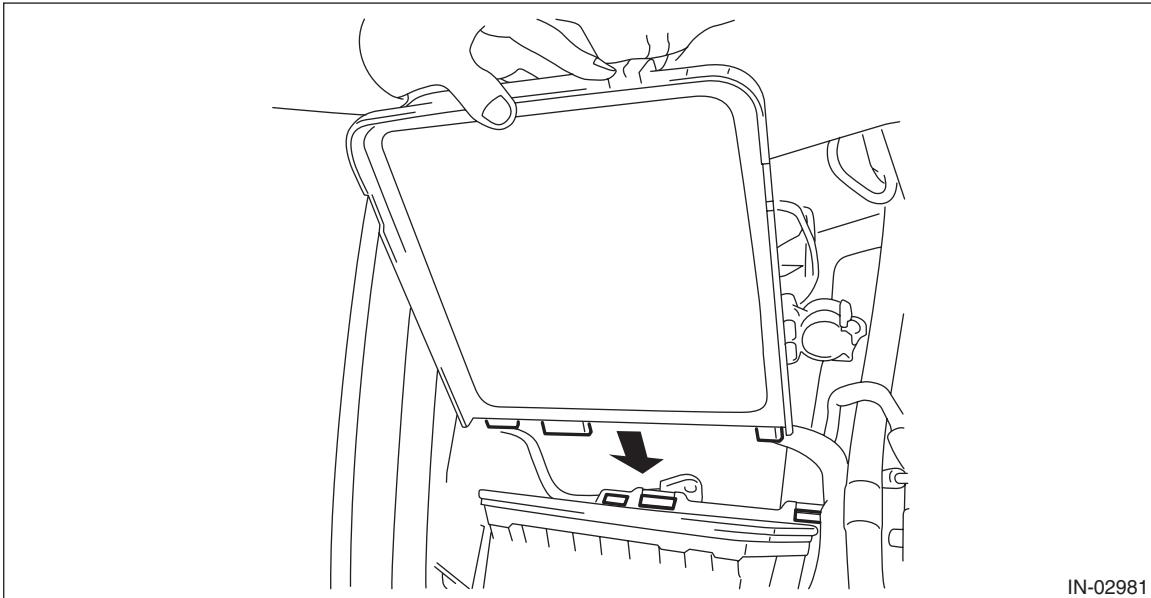

C: INSPECTION

- 1) Check that the air cleaner element has no deformation, cracks or other damages.
- 2) Check the air cleaner element for excessive dirt.
- 3) Replace the air cleaner case (rear) if the HC absorption filter is damaged.