

6. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4DO)-6, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4DO)-8, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

Resonator Chamber

INTAKE (INDUCTION)

MECHANICAL

ME(H4DO)

	Page
1. General Description	2
2. Compression	28
3. Idle Speed	30
4. Ignition Timing	31
5. Intake Manifold Vacuum	32
6. Engine Oil Pressure	34
7. Fuel Pressure	35
8. Cam Clearance	40
9. Engine Assembly	51
10. Engine Mounting	87
11. Preparation for Overhaul	88
12. V-belt	89
13. Crank Pulley	97
14. Chain Cover	106
15. Timing Chain Assembly	124
16. Cam Sprocket	146
17. Crank Sprocket	154
18. Rocker Cover	156
19. Camshaft	169
20. Cam Carrier	170
21. Cylinder Head	218
22. Cylinder Block	261
23. Intake and Exhaust Valve	367
24. Piston	368
25. Connecting Rod	369
26. Crankshaft	370
27. Engine Trouble in General	371
28. Engine Noise	377