

4. Oil Pump

A: SPECIFICATION

The oil pump cannot be disassembled.

Refer to "Chain Cover" for removal and installation procedures. <Ref. to ME(H4DO)-106, REMOVAL, Chain Cover.> <Ref. to ME(H4DOTC)-92, REMOVAL, Chain Cover.> <Ref. to ME(H4DO)-111, INSTALLATION, Chain Cover.> <Ref. to ME(H4DOTC)-99, INSTALLATION, Chain Cover.>