


11. Reservoir Tank

A: REMOVAL

- 1) Disconnect the over flow hose (A) connected to the radiator filler neck from the reservoir tank.
- 2) Pull out the reservoir tank to the arrow direction while pushing the claw (B).

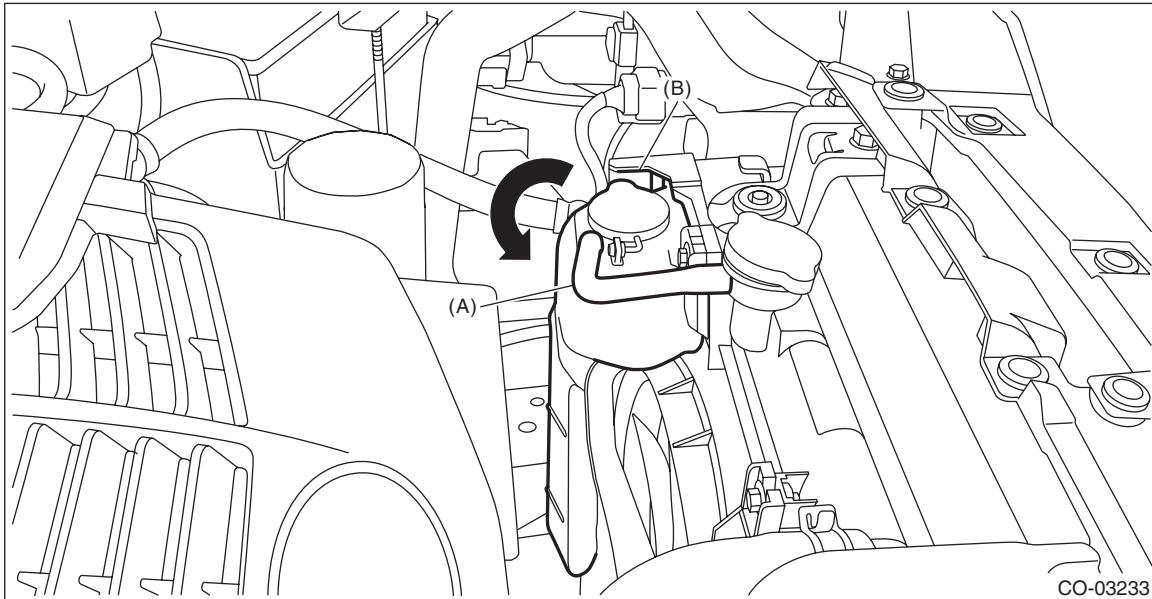


CO-03233

B: INSTALLATION

Install in the reverse order of removal.

C: INSPECTION

- 1) Check that the reservoir tank does not have deformation, cracks or damage.
- 2) Make sure the over flow hoses are not cracked, damaged or loose.
- 3) Make sure the engine coolant level is between "FULL" and "LOW".

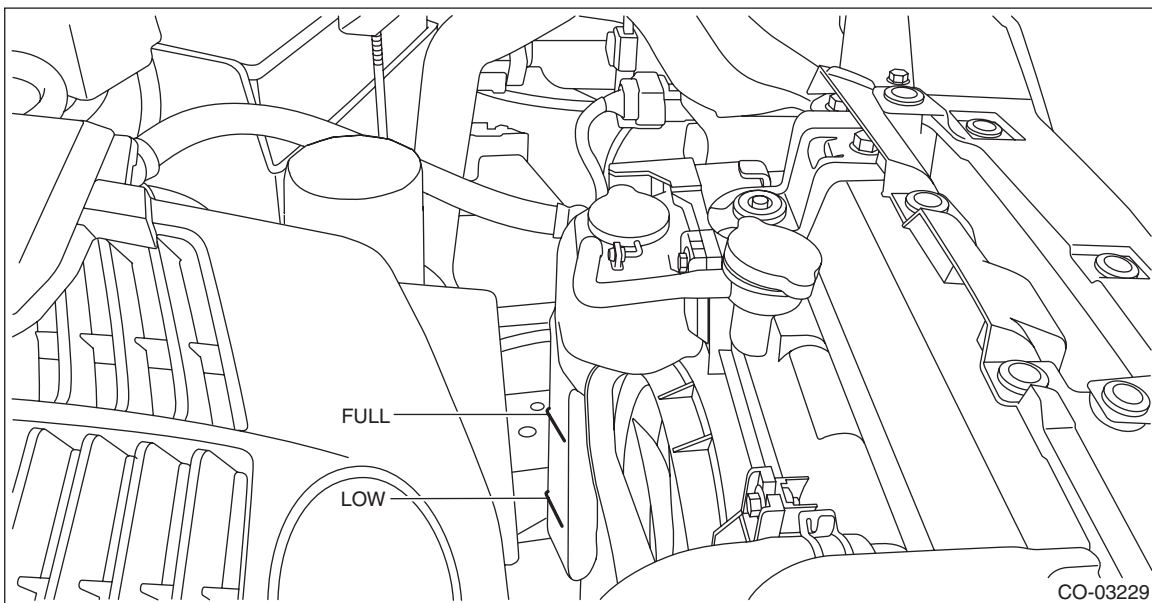

CO-03229