


PCV Connector

EMISSION CONTROL (AUX. EMISSION CONTROL DEVICES)


14.PCV Connector

A: REMOVAL

- 1) Remove the clip (A), lift the front of the collector cover in the direction of arrow, and then remove the collector cover.

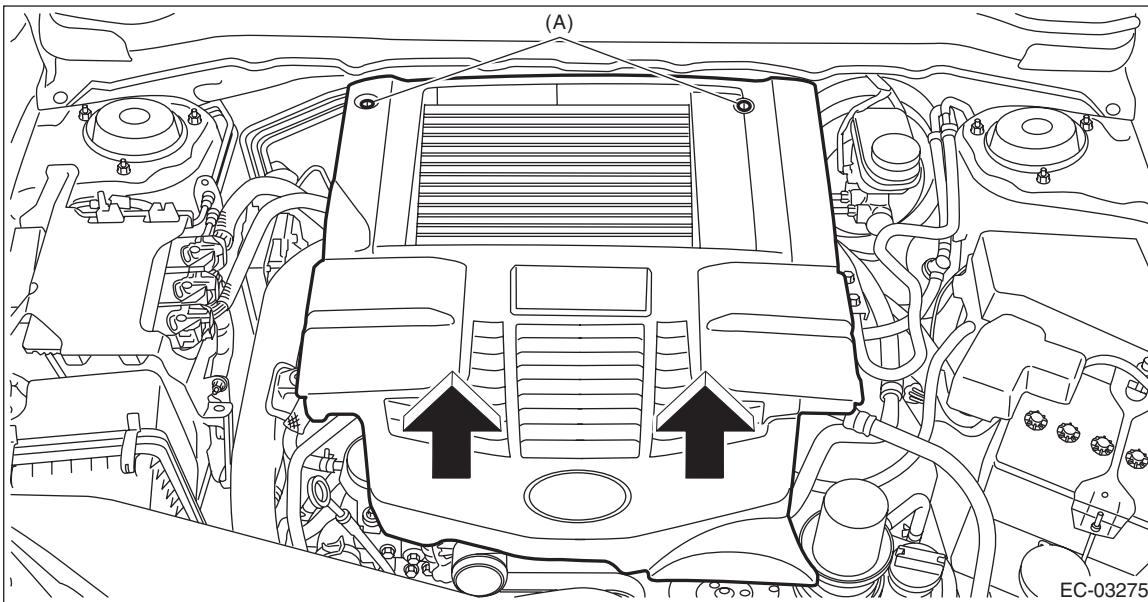

- 2) Collect the refrigerant from A/C system. <Ref. to AC-28, Refrigerant Recovery Procedure.>
- 3) Disconnect the ground cable from battery.
- 4) Drain engine coolant. <Ref. to CO(H4DOTC)-13, DRAINING OF ENGINE COOLANT, REPLACEMENT, Engine Coolant.>
- 5) Remove the A/C compressor. <Ref. to AC-54, REMOVAL, Compressor.>
- 6) Disconnect the preheater hose and PCV pipe from the PCV connector, and remove the PCV connector from the cylinder block LH.

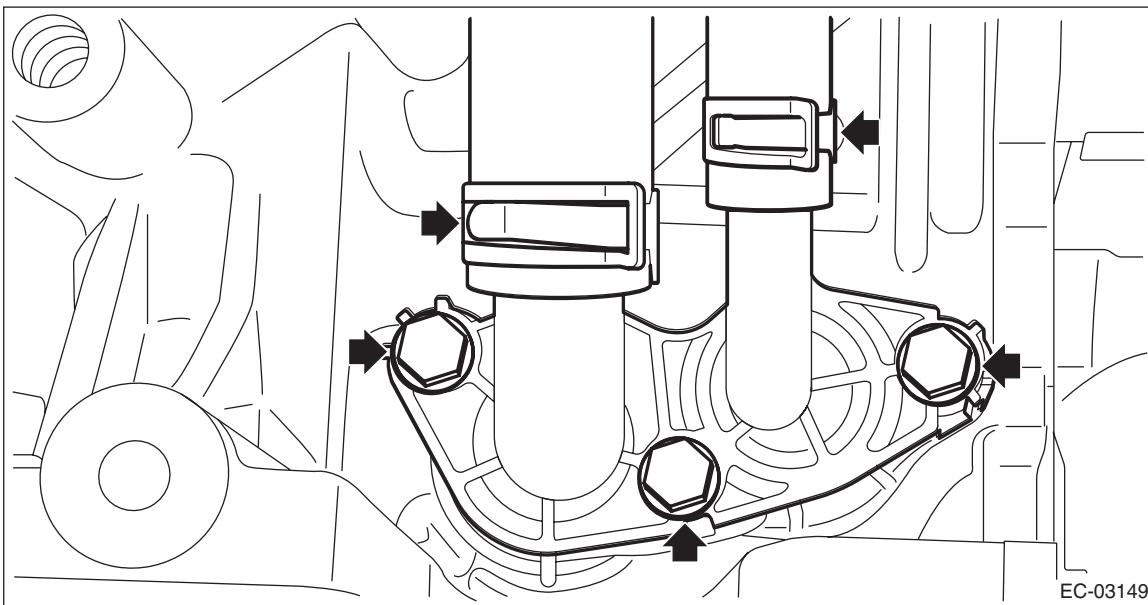

B: INSTALLATION

Install in the reverse order of removal.

NOTE:

Use new O-rings.

Tightening torque:

6.4 N·m (0.7 kgf-m, 4.7 ft-lb)

C: INSPECTION

Check that the PCV connector has no deformation, cracks or other damages.