

18.Throttle Position Sensor

A: SPECIFICATION

Throttle body is a non-disassembled part, so do not remove the throttle position sensor from throttle body. Refer to "Throttle Body" for removal and installation procedure. <Ref. to FU(H4DOTC)-16, REMOVAL, Throttle Body.> <Ref. to FU(H4DOTC)-17, INSTALLATION, Throttle Body.>