


30. Fuel Pump Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the glove box. <Ref. to EI-61, REMOVAL, Glove Box.>
- 3) Remove the fuel pump relay.

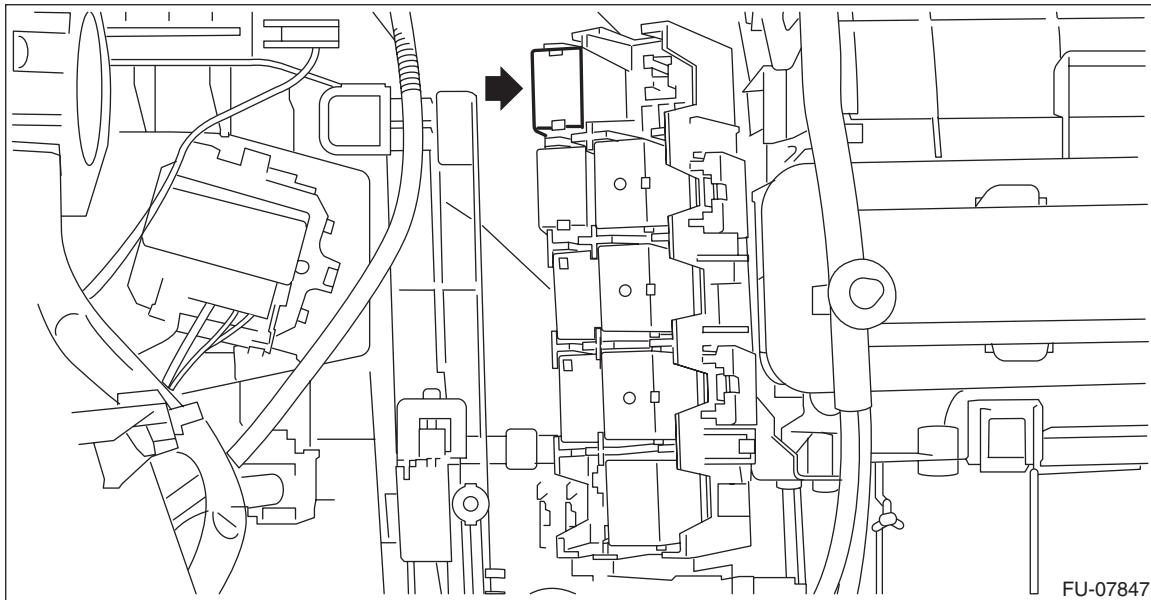

B: INSTALLATION


Install in the reverse order of removal.

Fuel Pump Relay

FUEL INJECTION (FUEL SYSTEMS)

C: INSPECTION


- 1) Check that the fuel pump relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel pump relay terminals.

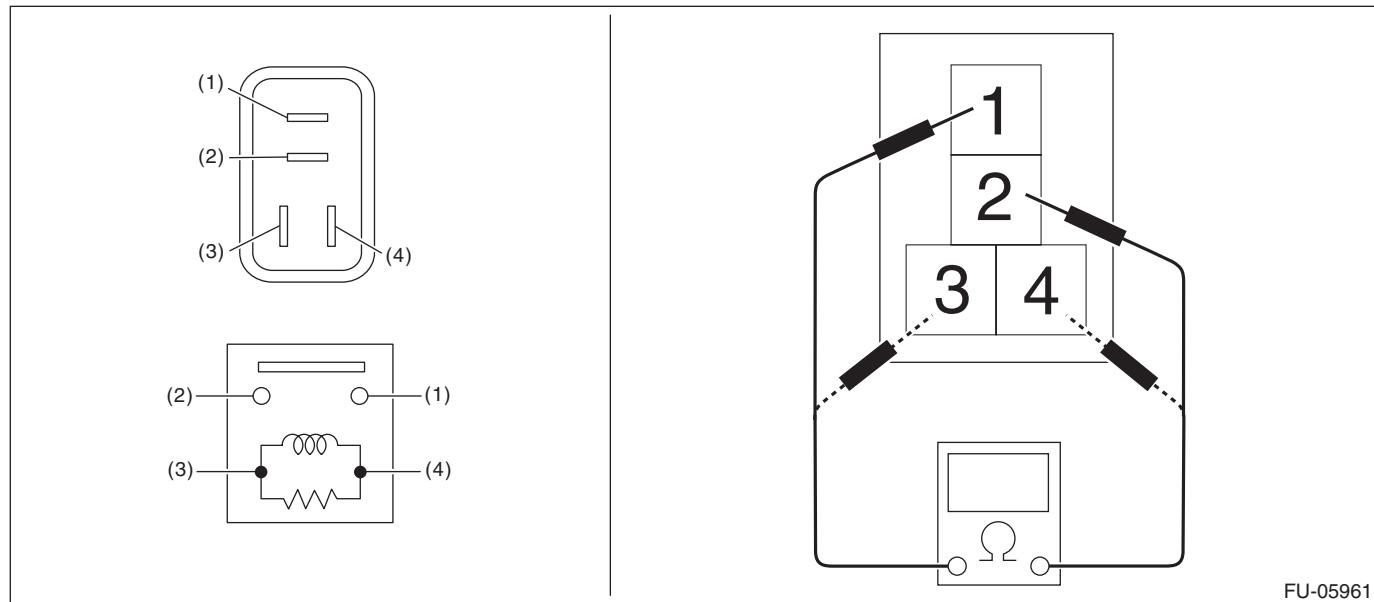

FU-05961

| Terminal No. | Standard |
|--------------|-----------------------------------|
| 1 and 2 | 1 MΩ or more |
| 3 and 4 | 93.8 — 136.4 Ω (when 20°C (68°F)) |

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel pump relay terminals.

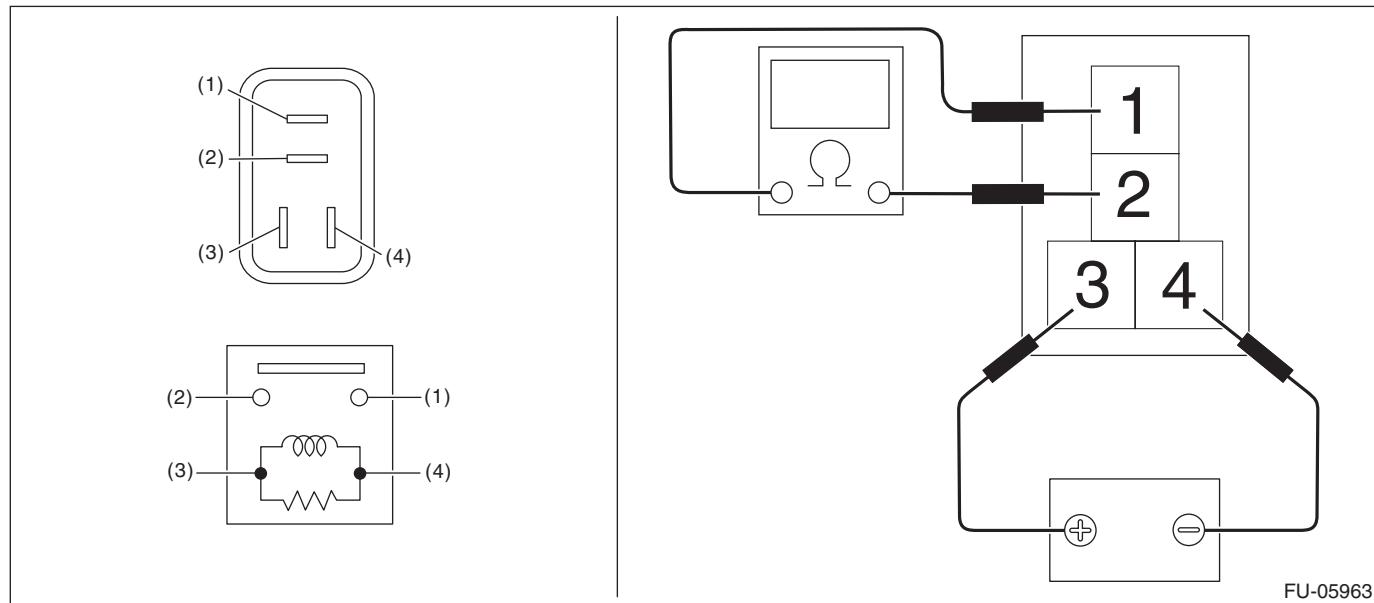

FU-05963

| Terminal No. | Standard |
|--------------|---------------|
| 1 and 2 | Less than 1 Ω |