



31. Fuel Injector Relay

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover from the relay block on the front side of the front strut RH.

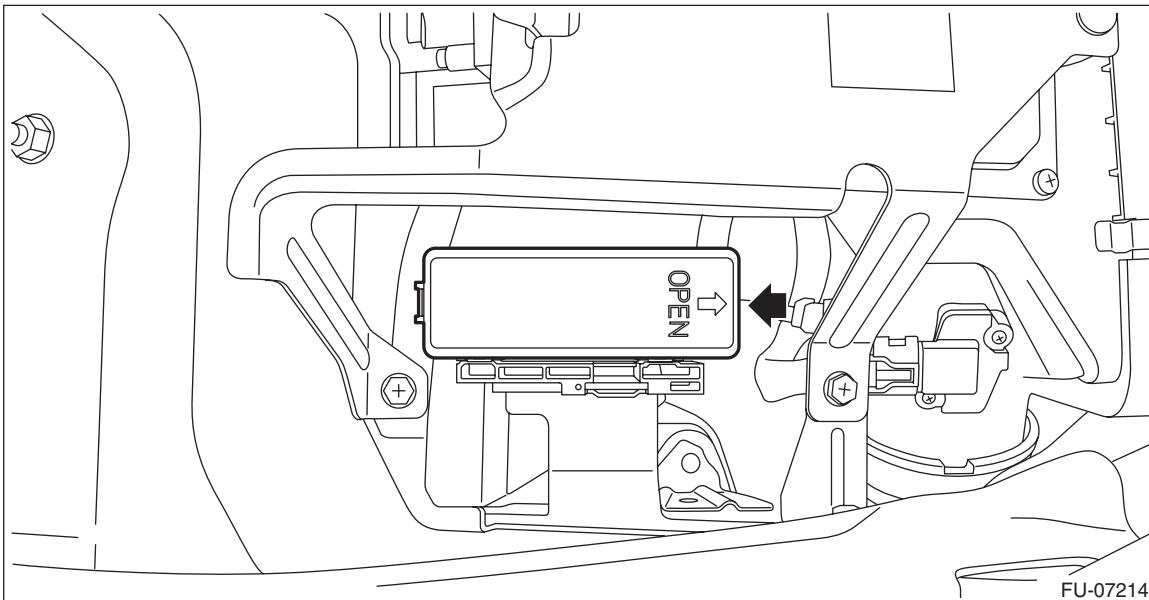

- 3) Remove the fuel injector relay from relay block.

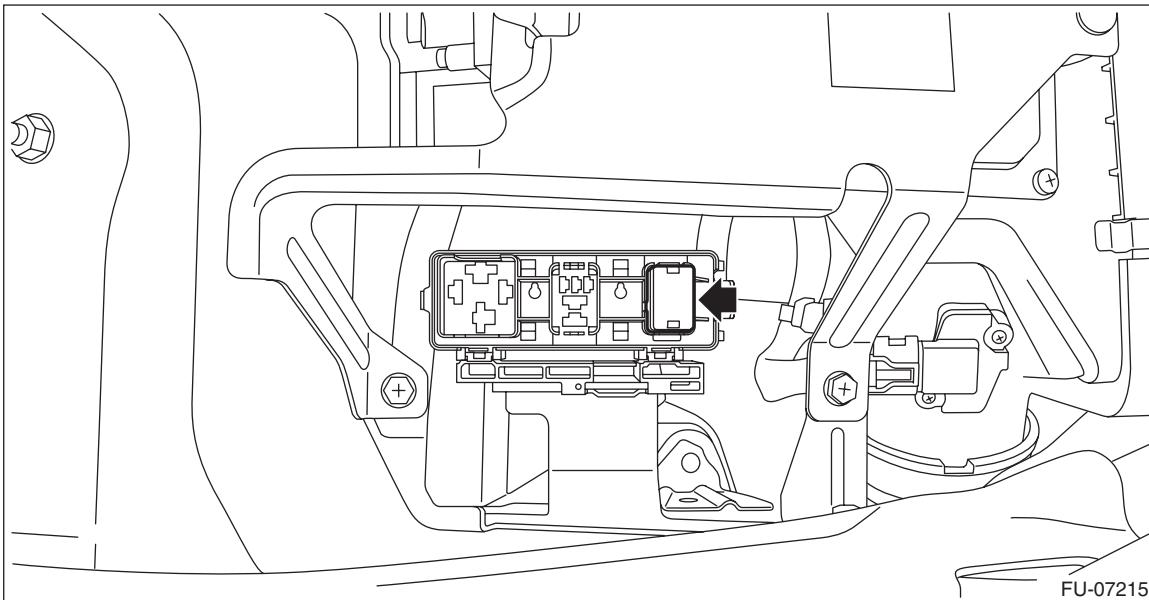

B: INSTALLATION


Install in the reverse order of removal.

Fuel Injector Relay

FUEL INJECTION (FUEL SYSTEMS)


C: INSPECTION

- 1) Check that the fuel injector relay has no deformation, cracks or other damages.
- 2) Measure the resistance between fuel injector relay terminals.

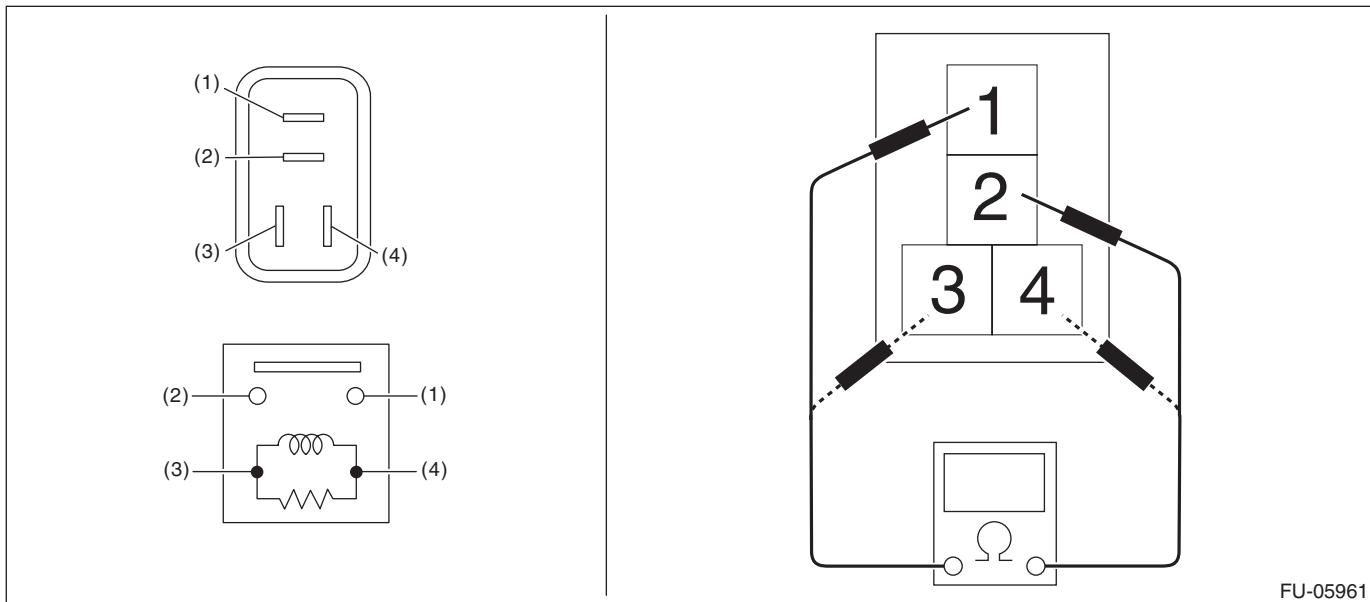

Terminal No.	Standard
1 and 2	1 MΩ or more
3 and 4	93.8 — 136.4 Ω (when 20°C (68°F))

- 3) Connect battery positive terminal to terminal No. 3 and battery ground terminal to terminal No. 4, and measure the resistance between the fuel injector relay terminals.

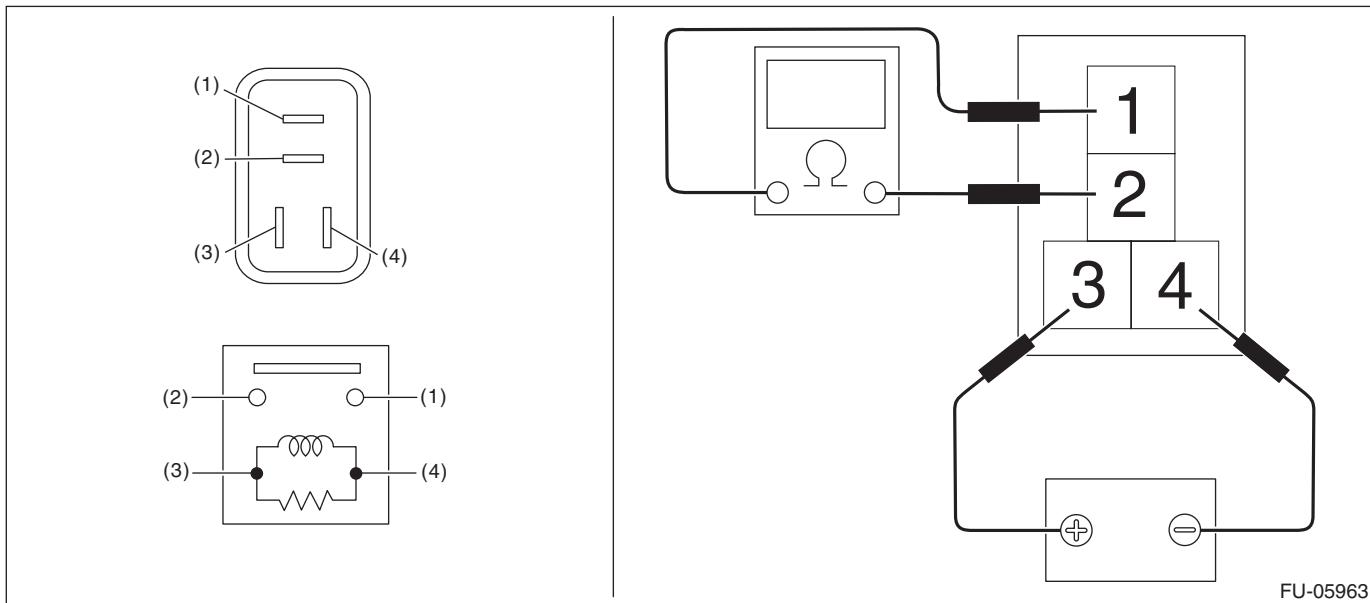

Terminal No.	Standard
1 and 2	Less than 1 Ω