


## 32. Fuel Pump Control Unit

### A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the right side rear quarter trim. <Ref. to EI-102, REMOVAL, Rear Quarter Trim.>
- 3) Disconnect the connector (A), and remove the fuel pump control unit.

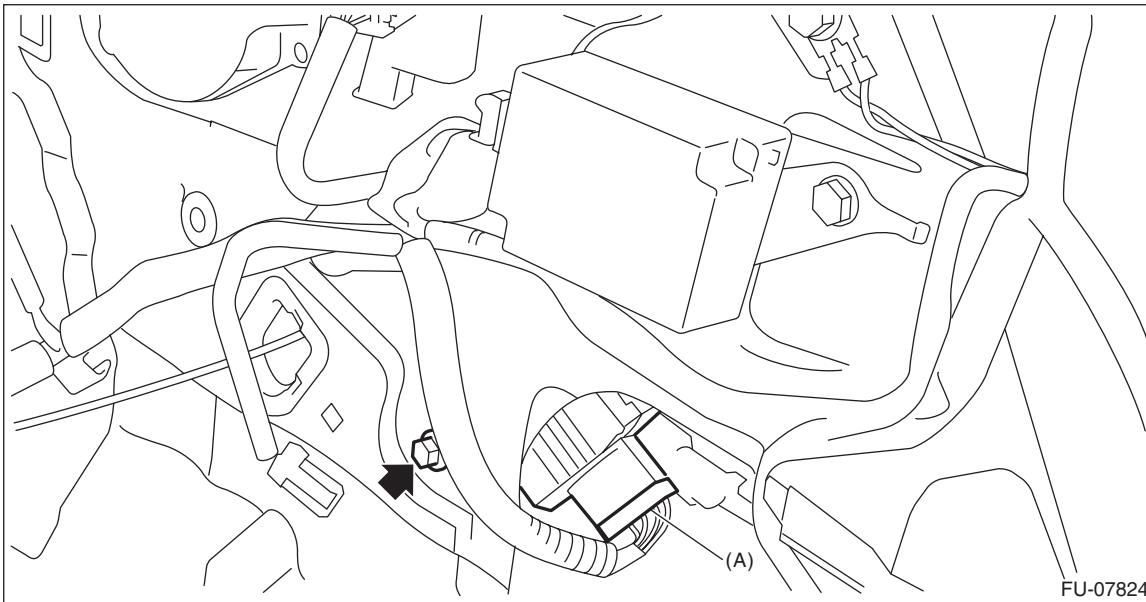

### B: INSTALLATION

Install in the reverse order of removal.

#### ***Tightening torque:***

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

### C: INSPECTION

Check that the fuel pump control unit has no deformation, cracks or other damages.