

12. Resonator Chamber

A: REMOVAL

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for removal procedure. <Ref. to IN(H4DOTC)-9, REMOVAL, Air Cleaner Case.>

B: INSTALLATION

The resonator chamber and air cleaner case are integrated into one unit; therefore, refer to "Air Cleaner Case" for installation procedure. <Ref. to IN(H4DOTC)-11, INSTALLATION, Air Cleaner Case.>

C: INSPECTION

Check that the resonator chamber has no deformation, cracks or other damages.

MECHANICAL

ME(H4DOTC)

	Page
1. General Description	2
2. Compression	22
3. Idle Speed	24
4. Ignition Timing	25
5. Intake Manifold Vacuum	26
6. Engine Oil Pressure	28
7. Fuel Pressure	29
8. Cam Clearance	34
9. Engine Assembly	46
10. Engine Mounting	75
11. Preparation for Overhaul	76
12. V-belt	77
13. Crank Pulley	84
14. Chain Cover	92
15. Timing Chain Assembly	114
16. Cam Sprocket	139
17. Crank Sprocket	147
18. Rocker Cover	149
19. Camshaft	173
20. Cam Carrier	174
21. Cylinder Head	217
22. Cylinder Block	266
23. Intake and Exhaust Valve	352
24. Piston	353
25. Connecting Rod	354
26. Crankshaft	355
27. Engine Trouble in General	356
28. Engine Noise	362