

## 19.Camshaft

### A: REMOVAL

#### 1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft RH. <Ref. to ME(H4DOTC)-174, CAM CARRIER RH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DOTC)-202, CAM CARRIER RH, DISASSEMBLY, Cam Carrier.>

#### 2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as removing as a unit. Refer to “Cam Carrier” for removal procedures of camshaft LH. <Ref. to ME(H4DOTC)-177, CAM CARRIER LH, REMOVAL, Cam Carrier.> <Ref. to ME(H4DOTC)-204, CAM CARRIER LH, DISASSEMBLY, Cam Carrier.>

### B: INSTALLATION

#### 1. CAMSHAFT RH

The camshaft RH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft RH. <Ref. to ME(H4DOTC)-205, CAM CARRIER RH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DOTC)-182, CAM CARRIER RH, INSTALLATION, Cam Carrier.>

#### 2. CAMSHAFT LH

The camshaft LH and cam carrier are designed as installing as a unit. Refer to “Cam Carrier” for installation procedures of camshaft LH. <Ref. to ME(H4DOTC)-209, CAM CARRIER LH, ASSEMBLY, Cam Carrier.> <Ref. to ME(H4DOTC)-191, CAM CARRIER LH, INSTALLATION, Cam Carrier.>