

25. Connecting Rod

A: SPECIFICATION

Refer to "Cylinder Block" for removal and installation procedures of connecting rod.

<Ref. to ME(H4DOTC)-266, REMOVAL, Cylinder Block.> <Ref. to ME(H4DOTC)-279, INSTALLATION, Cylinder Block.>