

3. Idle Speed

A: INSPECTION

- 1) Before checking the idle speed, check the following item:
 - (1) Check the air cleaner element is free from clogging, ignition timing is correct, spark plugs are in good condition, and hoses are connected properly.
 - (2) Check the malfunction indicator light does not illuminate.
- 2) Warm up the engine.
- 3) Read the engine idle speed using Subaru Select Monitor.<Ref. to EN(H4DOTC)(diag)-37, DISPLAY CURRENT ENGINE DATA, OPERATION, Subaru Select Monitor.>

NOTE:

- Idle speed cannot be adjusted manually, because the idle speed is automatically adjusted.
- If idle speed is out of standard, refer to the General Diagnosis Table under "Engine Control System".<Ref. to EN(H4DOTC)(diag)-2, Basic Diagnostic Procedure.>
 - (1) Check the idle speed when no-loaded. (Headlight, blower fan, rear defroster, radiator fan, A/C and etc. are OFF)

Idle rpm (no load and select lever in "P" or "N" range):

Standard

700±100 rpm

- (2) Check the idle speed when loaded. (Turn the A/C switch to ON and operate the compressor for at least one minute before measurement.)

Idle speed (A/C ON and select lever in "P" or "N" range):

Standard

700 — 835±50 rpm