

14.CVTF**A: INSPECTION**

Refer to "CVT" section for CVTF inspection. <Ref. to CVT(TR580)-35, INSPECTION, CVTF.> <Ref. to CVT(TR690)-36, INSPECTION, CVTF.>

B: REPLACEMENT

Refer to "CVT" section for CVTF replacement. <Ref. to CVT(TR580)-37, REPLACEMENT, CVTF.> <Ref. to CVT(TR690)-38, REPLACEMENT, CVTF.>