

2. Schedule**A: MAINTENANCE SCHEDULE 1****1. U.S. MODELS**

		Maintenance interval [Number of months or km (miles), whichever occurs first]													Remarks
	Months	3	6	12	18	24	30	36	42	48	54	60	66	To be continued to the next table.	
	× 1,000 km	4.8	9.6	19.2	28.8	38.4	48	57.6	67.2	76.8	86.4	96	105.6		
	× 1,000 miles	3	6	12	18	24	30	36	42	48	54	60	66		
1	Engine oil		R	R	R	R	R	R	R	R	R	R	R		
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	R		
3	Spark plug											R			
4	V-belt						I						I		
5	Fuel line						I					I			Note (1)
6	Fuel filter														Note (1)
7	Air cleaner element						R					R			Note (2)
8	Cooling system						I					I			
9	Engine coolant	Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter													
10	Clutch system			I		I		I		I		I			
11	Transmission gear oil						I					I			
12	CVTF						I					I			
13	Front & rear differential gear oil						I					I			
14	Brake line			I		I		I		I					
15	Brake fluid						R					R			
16	Disc brake pad and disc			I		I		I		I		I			
17	Parking brake			I		I		I		I					
18	Suspension			I		I		I		I		I			
19	Wheel bearing											I			
20	Axle boots and joints			I		I		I		I		I			
21	Tire rotation		P	P	P	P	P	P	P	P	P	P	P		Note (3)
22	Steering system (Power steering)			I		I		I		I		I			
23	A/C filter	Replace every 12 months or 19,200 km (12,000 miles)													Note (4)

Schedule

PERIODIC MAINTENANCE SERVICES

		Maintenance interval [Number of months or km (miles), whichever occurs first]												
	Months	Continued from previous table	72	78	84	90	96	102	108	114	120	126	132	Remarks
	× 1,000 km		115.2	124.8	134.4	144	153.6	163.2	172.8	182.4	192	201.6	211.2	
	× 1,000 miles		72	78	84	90	96	102	108	114	120	126	132	
1	Engine oil		R	R	R	R	R	R	R	R	R	R	R	
2	Engine oil filter		R	R	R	R	R	R	R	R	R	R	R	
3	Spark plug											R		
4	V-belt					I					I			
5	Fuel line					I					I			Note (1)
6	Fuel filter		R											Note (1)
7	Air cleaner element					R					R			Note (2)
8	Cooling system					I					I			
9	Engine coolant		Replace after the first 11 years or 220,000 km (137,500 miles), and every six years or 120,000 km (75,000 miles) thereafter											
10	Clutch system		I		I		I		I		I		I	
11	Transmission gear oil					I					I			
12	CVTF					I					I			
13	Front & rear differential gear oil					I					I			
14	Brake line		I		I		I		I		I		I	
15	Brake fluid					R					R			
16	Disc brake pad and disc		I		I		I		I		I		I	
17	Parking brake		I		I		I		I		I		I	
18	Suspension		I		I		I		I		I			
19	Wheel bearing										I			
20	Axle boots and joints		I		I		I		I		I		I	
21	Tire rotation		P	P	P	P	P	P	P	P	P	P	P	Note (3)
22	Steering system (Power steering)		I		I		I		I		I			
23	A/C filter		Replace every 12 months or 19,200 km (12,000 miles)											Note (4)

Symbol

R: Replace

I: Inspection

P: Perform

NOTE:

1. This inspection is not necessary to observe exhaust gas regulations or is the responsibility of the manufacturer under the current basic EPA regulations that must be observed by law.
2. Replace the air cleaner element more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.
3. Replace the tires if the tread-wear indicator has caused a bar-shaped cut across the tread. The indicator will appear when the remaining amount of tread is less than 1.6 mm (0.063 in).
4. Replace the A/C filter more frequently than the periodic replacement if the vehicle is being used in an excessively dusty environment.

Schedule

PERIODIC MAINTENANCE SERVICES

B: MAINTENANCE SCHEDULE 2

Item	Maintenance interval	Repeat short distance driving	Repeat driving on bumpy muddy road	Driving in extremely cold weather	Area where salt or other corrosive substance used, or coastal area	High humidity or mountain area	Repeat towing trailer
Engine oil	Every 3 months	R		R			R
	4,800 km						
	3,000 miles						
Engine oil filter	Every 3 months	R		R			R
	4,800 km						
	3,000 miles						
Fuel line	Every 6 months				I		
	Every 9,600 km						
	Every 6,000 miles						
Transmission gear oil	Every 15 months						R
	Every 24,000 km						
	Every 15,000 miles						
CVTF	Every 40,000 km						R
	Every 24,855 miles						
Front & rear differential gear oil	Every 15 months						R
	Every 24,000 km						
	Every 15,000 miles						
Brake line	Every 6 months	I	I		I		I
	Every 9,600 km						
	Every 6,000 miles						
Brake fluid Clutch fluid	Every 15 months					R	
	Every 24,000 km						
	Every 15,000 miles						
Disc brake pad and disc	Every 6 months	I	I		I		I
	Every 9,600 km						
	Every 6,000 miles						
Parking brake	Every 6 months	I	I		I		I
	Every 9,600 km						
	Every 6,000 miles						
Suspension	Every 6 months		I	I	I		I
	Every 9,600 km						
	Every 6,000 miles						
A axle boots and joints	Every 6 months	I	I	I	I		I
	Every 9,600 km						
	Every 6,000 miles						
Steering system (Power steering)	Every 6 months	I	I	I	I		I
	Every 9,600 km						
	Every 6,000 miles						

R: Replace

I: Inspection