

## 8. Clutch Fluid

### A: INSPECTION


#### CAUTION:

Be careful not to spill the brake fluid. Brake fluid spilled on the vehicle body will harm the paint surface; wash it off with water and wipe clean quickly if spilled.

- 1) Park the vehicle on a level surface.
- 2) Inspect the fluid level using the scale on the outside of the reservoir tank. If the level is below "MIN", add fluid to bring it up to "MAX", and also inspect for leakage.

#### Recommended brake fluid:

New FMVSS No. 116 DOT3 or DOT4

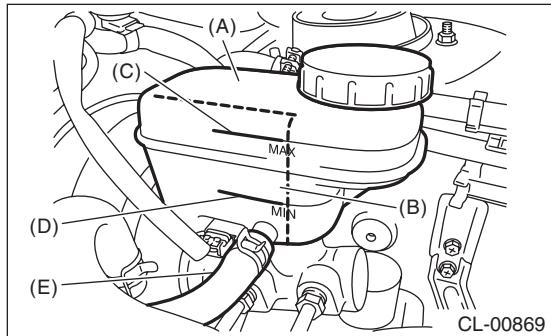

- (A) Reservoir tank
- (B) Clutch fluid chamber
- (C) MAX. level
- (D) MIN. level
- (E) Tank hose

#### CAUTION:

This reservoir tank has the brake fluid chamber and the clutch fluid chamber. When checking the fluid level, always check the fluid from the clutch fluid chamber side where the tank hose is connected.

### B: REPLACEMENT


#### CAUTION:

- Be careful not to spill the brake fluid. Brake fluid spilled on the vehicle body will harm the paint surface; wash it off with water and wipe clean quickly if spilled.
- Use new FMVSS No. 116 DOT3 or DOT4.
- Cover the air breather with cloth to prevent clutch fluid from being splashed on surrounding parts when loosening the breather.
- Avoid mixing clutch fluid of different brands to prevent fluid performance from degrading.
- Be careful not to allow dirt or dust to enter the reservoir tank.


#### NOTE:

- During bleeding operation, keep the clutch reservoir tank filled with clutch fluid to prevent entry of air.
- Clutch pedal must be operated very slowly.
- Bleed air from the oil line with help of a co-worker.
- The required amount of clutch fluid is approximately 150 mL (5.1 US fl oz, 5.3 Imp fl oz) for total clutch system.

- 1) Remove the clip (A) from the air intake boot.
- 2) Loosen the clamp (B) connecting the air intake boot and air cleaner case (rear).
- 3) Loosen the clamp (C) which connects the air intake boot and throttle body.

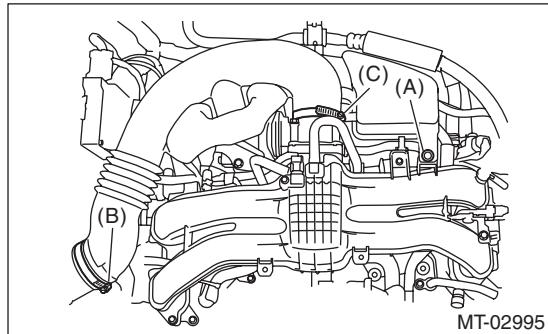

- 4) Remove the air intake boot from the throttle body, and move it to the left side wheel apron.

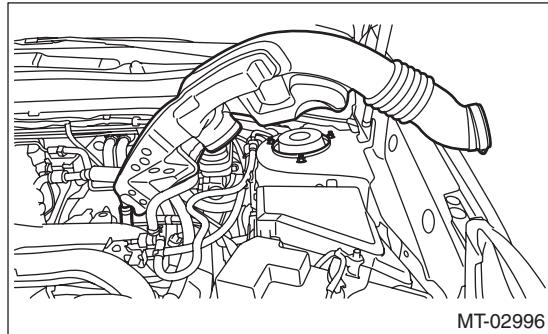

- 5) Drain the clutch fluid from the air breather of the operating cylinder.
- 6) Refill the reservoir tank with recommended clutch fluid.

#### Recommended clutch fluid:

New FMVSS No. 116 DOT3 or DOT4

- 7) If necessary, bleed air from the clutch fluid. <Ref. to CL-25, Clutch Fluid Air Bleeding.>
- 8) Install the air intake boot assembly. <Ref. to IN(H4DO)-11, INSTALLATION, Air Intake Boot.>