


## 11. Transmission Mounting System

### A: REMOVAL


#### 1. PITCHING STOPPER

- 1) Disconnect the ground cable from battery.
- 2) Remove the air intake boot assembly.<Ref. to IN(H4DO)-11, REMOVAL, Air Intake Boot.>
- 3) Remove the pitching stopper.

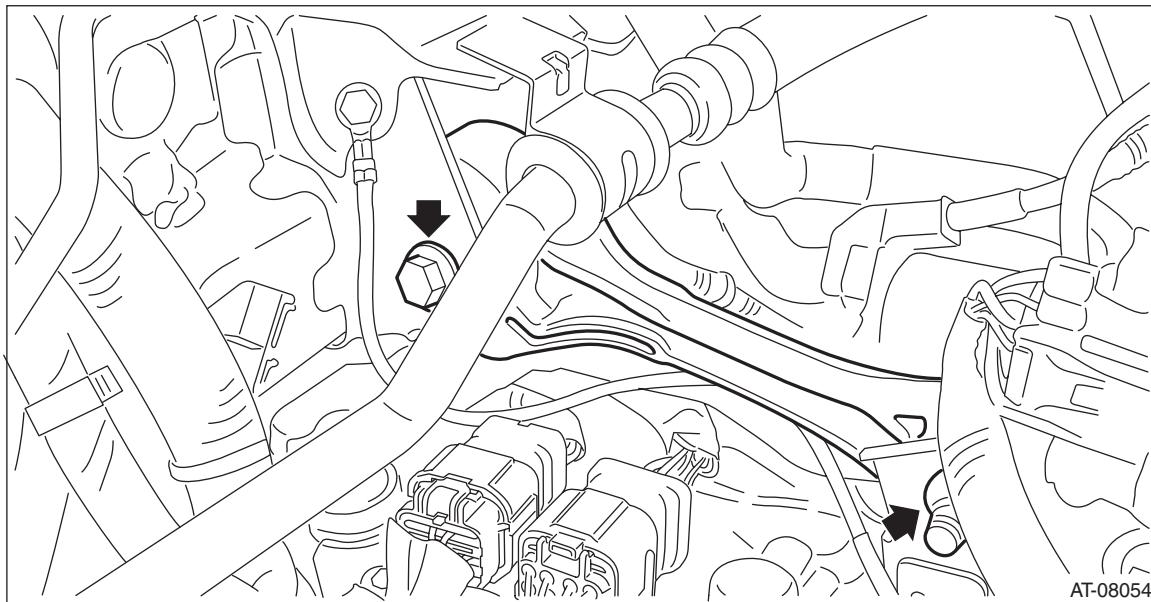

#### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

- 1) Disconnect the ground cable from battery.
- 2) Lift up the vehicle.
- 3) Remove the under cover front - transmission.
- 4) Remove the center exhaust pipe.<Ref. to EX(H4DO)-14, REMOVAL, Center Exhaust Pipe.>
- 5) Remove the center exhaust cover.

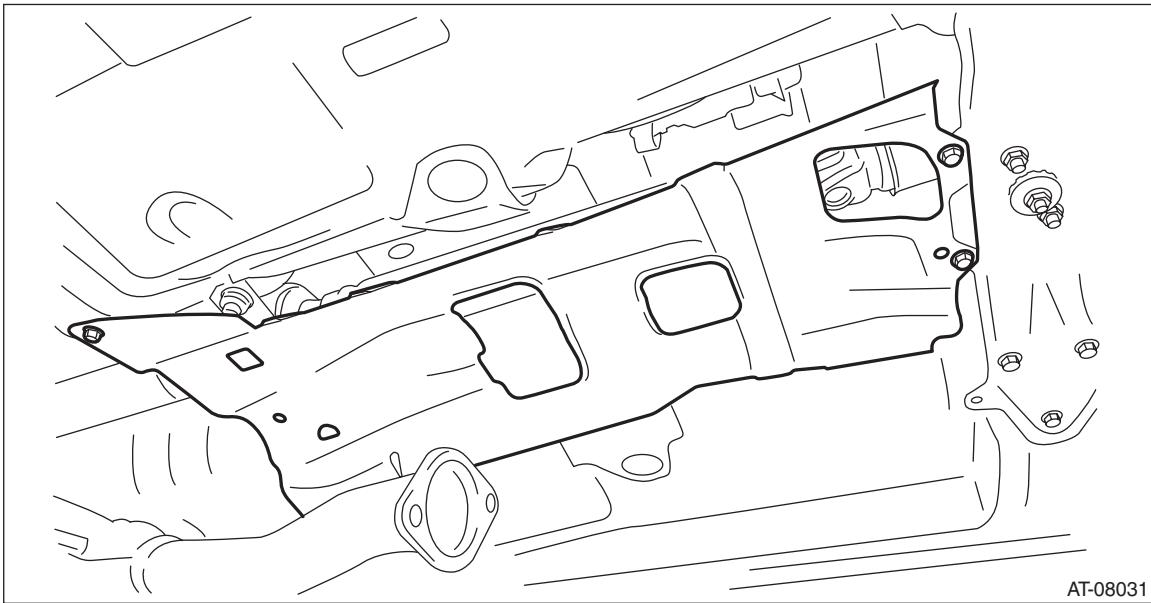


- 6) Set the transmission jack under the transmission. Make sure that the support plate of transmission jack does not touch the oil pan.


# Transmission Mounting System

## CONTINUOUSLY VARIABLE TRANSMISSION

7) Remove the transmission rear crossmember.

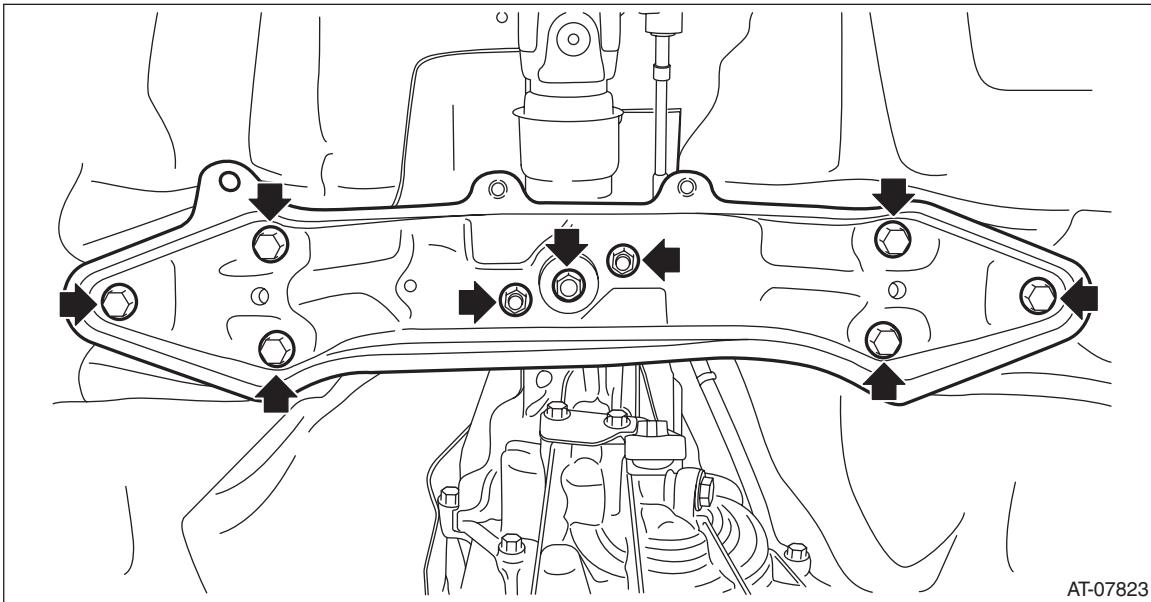

8) Remove the rear cushion rubber.

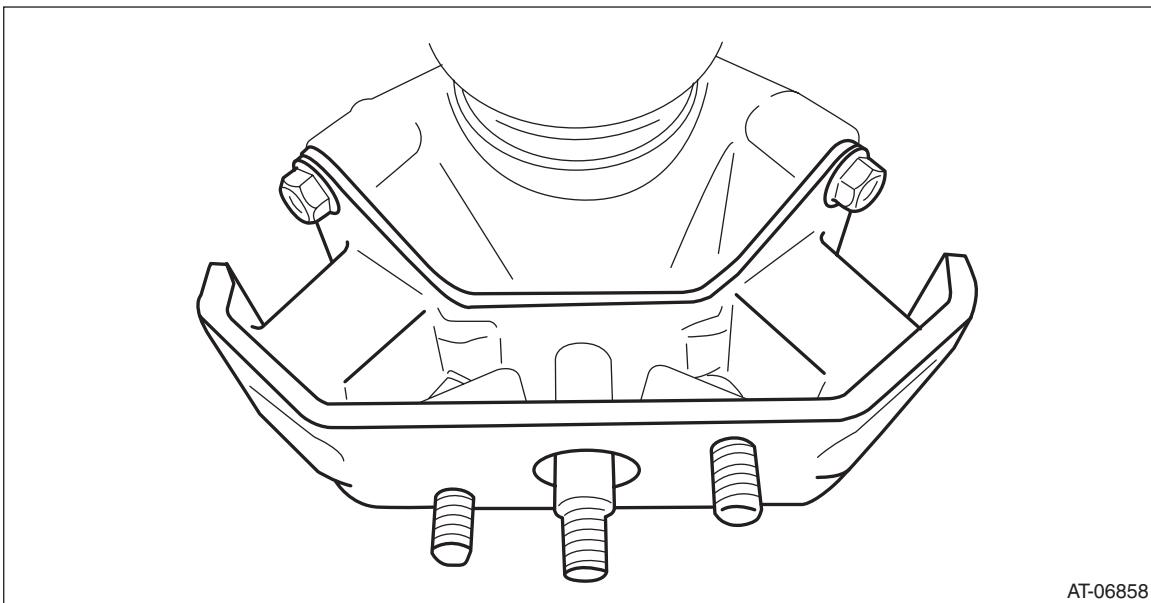

### B: INSTALLATION


#### 1. PITCHING STOPPER

- 1) Install the pitching stopper.

***Tightening torque:***

**T1: 50 N·m (5.1 kgf-m, 36.9 ft-lb)**

**T2: 58 N·m (5.9 kgf-m, 42.8 ft-lb)**

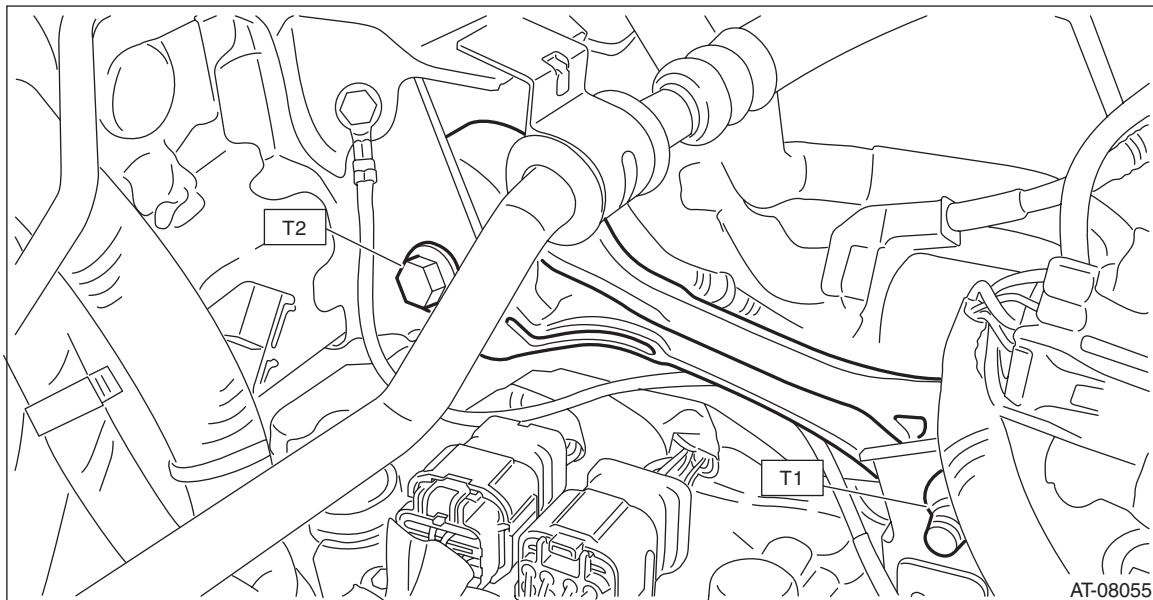


- 2) Install the air intake boot assembly. <Ref. to IN(H4DO)-11, INSTALLATION, Air Intake Boot.>
- 3) Connect the battery ground terminal.

#### 2. TRANSMISSION REAR CROSSMEMBER AND REAR CUSHION RUBBER

- 1) Attach the rear cushion rubber to the transmission.

***Tightening torque:***

**40 N·m (4.1 kgf-m, 29.5 ft-lb)**

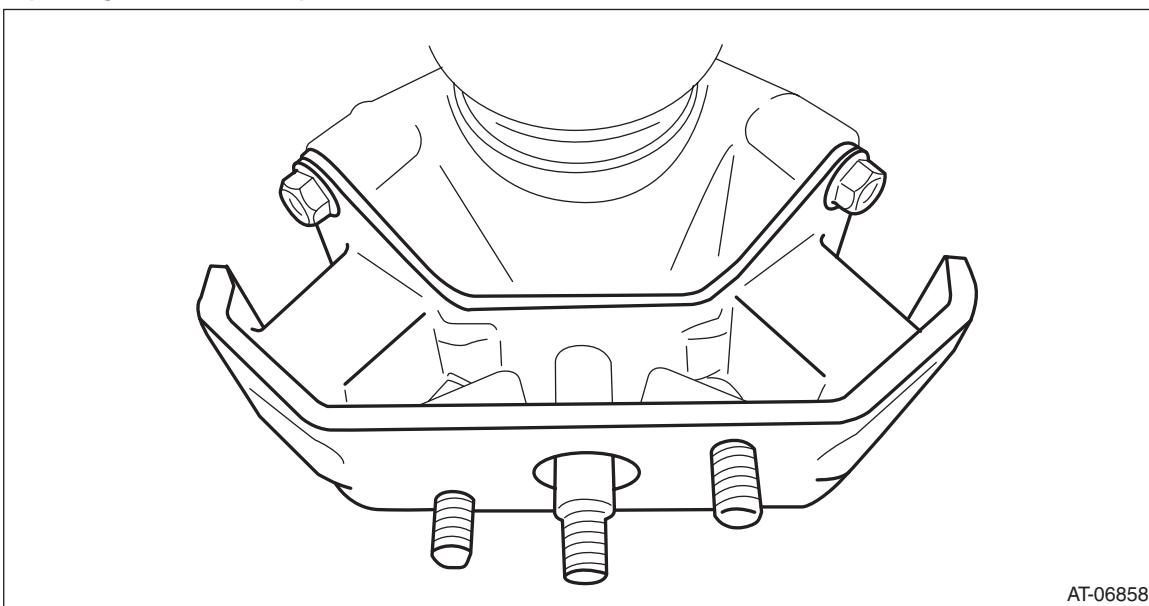

# Transmission Mounting System


## CONTINUOUSLY VARIABLE TRANSMISSION

- 2) Install the crossmember.

**Tightening torque:**

**T1: 35 N·m (3.6 kgf-m, 25.8 ft-lb)**


**T2: 70 N·m (7.1 kgf-m, 51.6 ft-lb)**

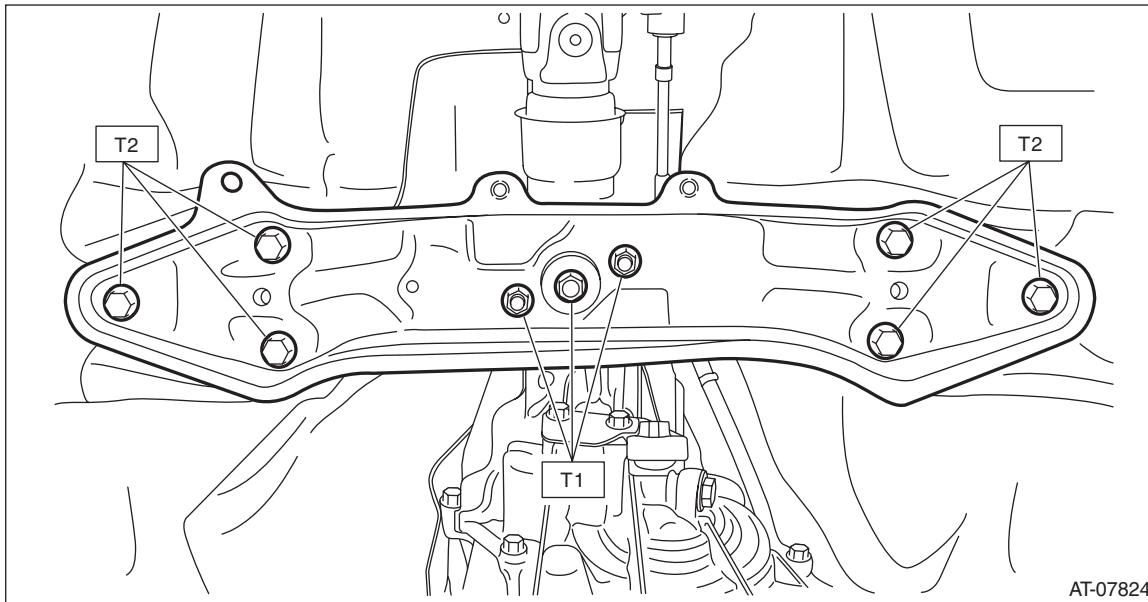

- 3) Remove the transmission jack.
- 4) Install the center exhaust cover.

**Tightening torque:**

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

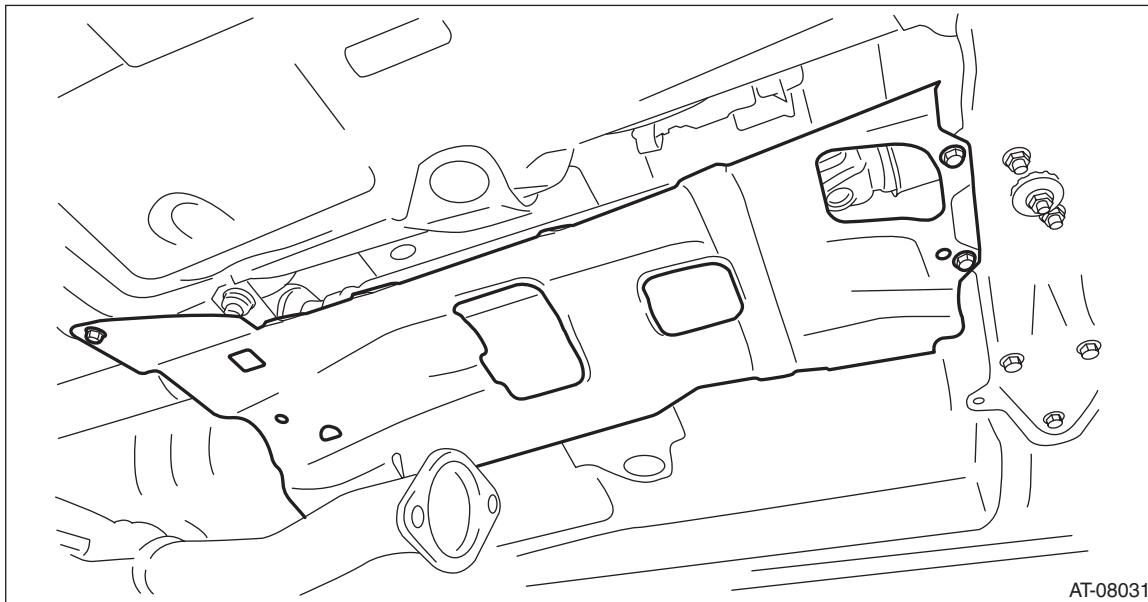

- 5) Install the center exhaust pipe.<Ref. to EX(H4DO)-15, INSTALLATION, Center Exhaust Pipe.>
- 6) Install the under cover front - transmission.

**Tightening torque:**

**18 N·m (1.8 kgf-m, 13.3 ft-lb)**

- 7) Connect the battery ground terminal.

## C: INSPECTION

- Check the crossmember for bends or damage.
- Check that the cushion rubber is not stiff, cracked or otherwise damaged.