

## 19.Oil Pan and Strainer

### A: REMOVAL


**CAUTION:**

- Directly after the vehicle has been running or the engine has been idling for a long time, the CVTF is hot. Be careful not to burn yourself.
- Be careful not to spill CVTF on the exhaust pipe to prevent it from emitting smoke or causing a fire. If the CVTF adheres, wipe it off completely.


- 1) Lift up the vehicle.
- 2) Clean the transmission exterior.
- 3) Remove the CVTF drain plug to drain CVTF.
- 4) Remove the oil pan.

**CAUTION:**

Be careful not to allow foreign matter such as dust or dirt to enter the oil pan.

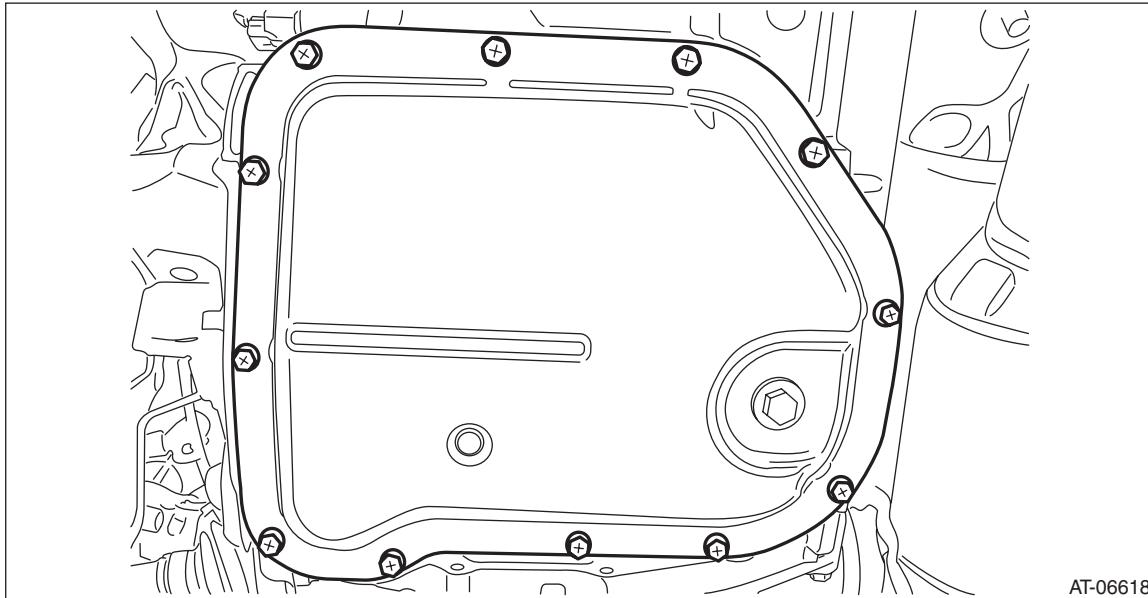


- 5) Remove the magnet.
- 6) Remove the oil strainer.

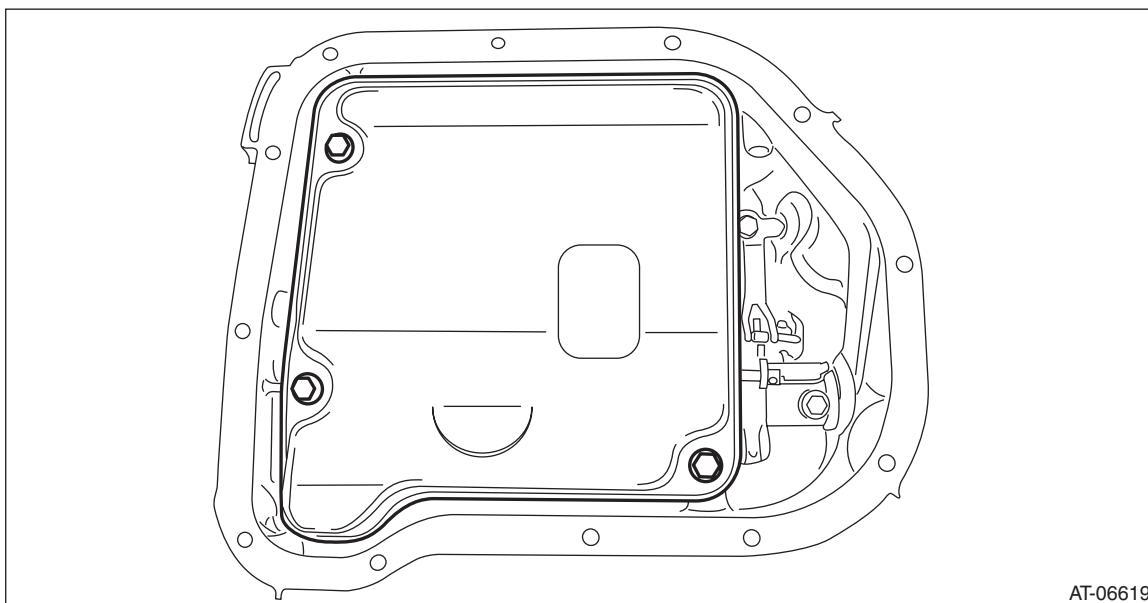

# **Oil Pan and Strainer**

## **CONTINUOUSLY VARIABLE TRANSMISSION**

7) Remove the O-ring from oil strainer.

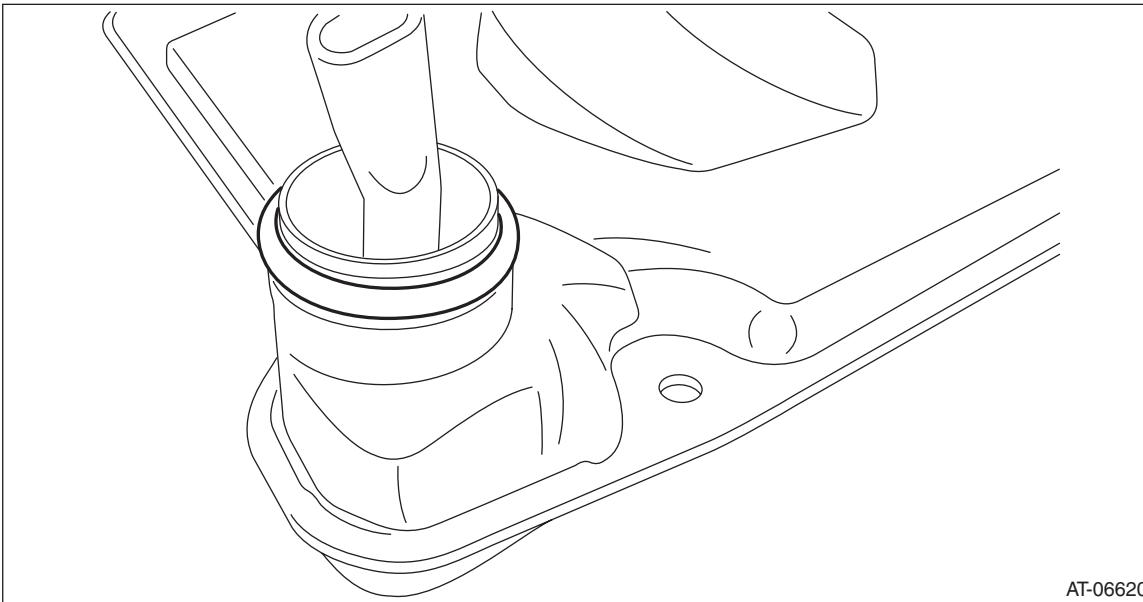


## **B: INSTALLATION**

- 1) Clean the mating surface of oil pan and transmission case.
- 2) Install the O-ring to the oil strainer.

NOTE:

- Use new O-rings.
- Apply CVTF to the O-ring.

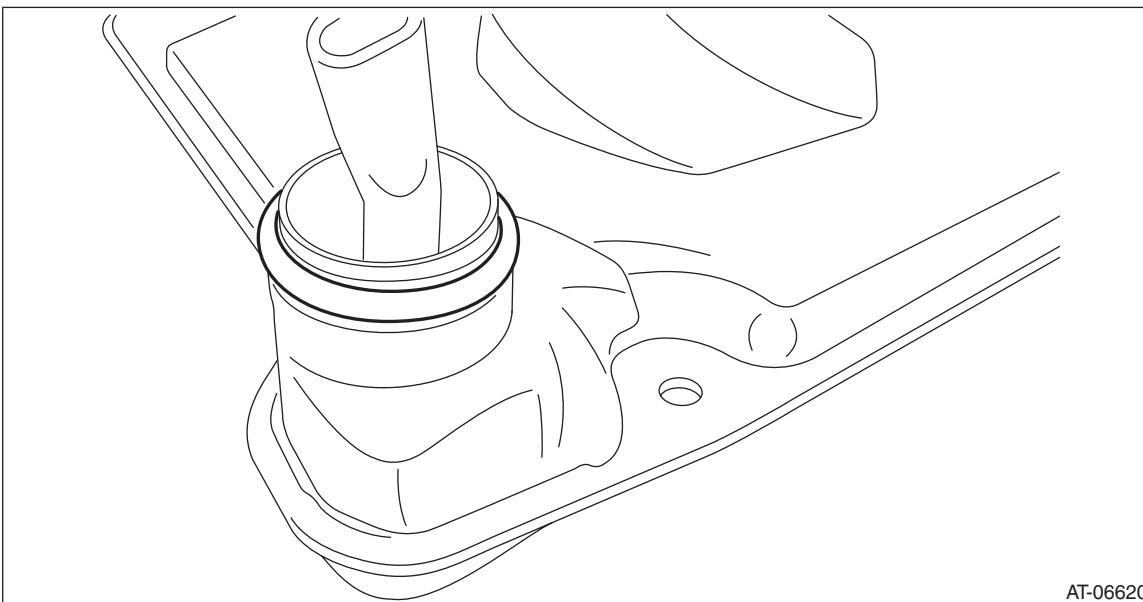


# Oil Pan and Strainer

CONTINUOUSLY VARIABLE TRANSMISSION

- 3) Install the oil strainer.

**Tightening torque:**

**9 N·m (0.9 kgf·m, 6.6 ft-lb)**

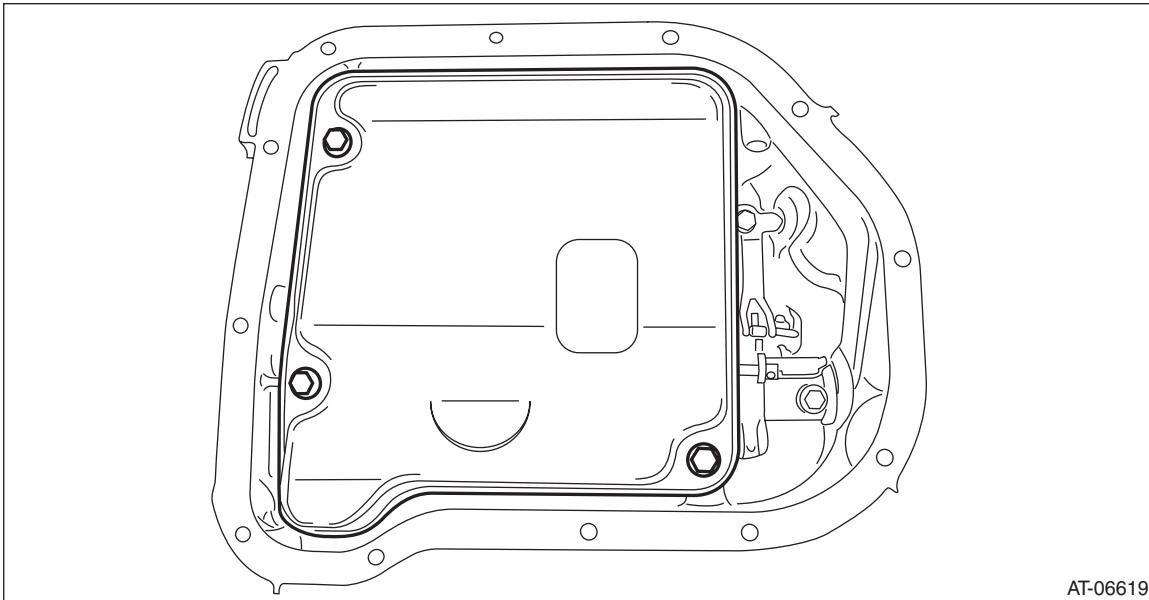


AT-06619

- 4) Clean the magnet.
- 5) Attach the magnet at the specified position of the oil pan.
- 6) Apply liquid gasket all around the oil pan mating surface seamlessly.

**Liquid gasket:**

**THREE BOND 1217B (Part No. K0877YA020) or equivalent**

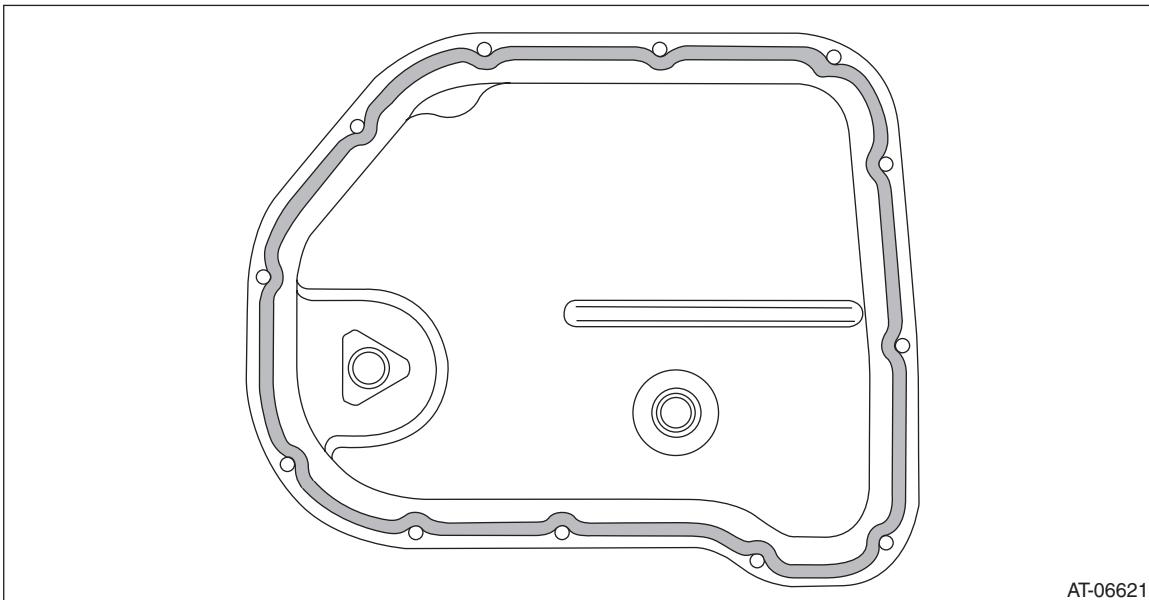

AT-06621


# Oil Pan and Strainer

## CONTINUOUSLY VARIABLE TRANSMISSION

- 7) Install the oil pan by equally tightening the bolts.

**Tightening torque:**

5 N·m (0.5 kgf-m, 3.7 ft-lb)

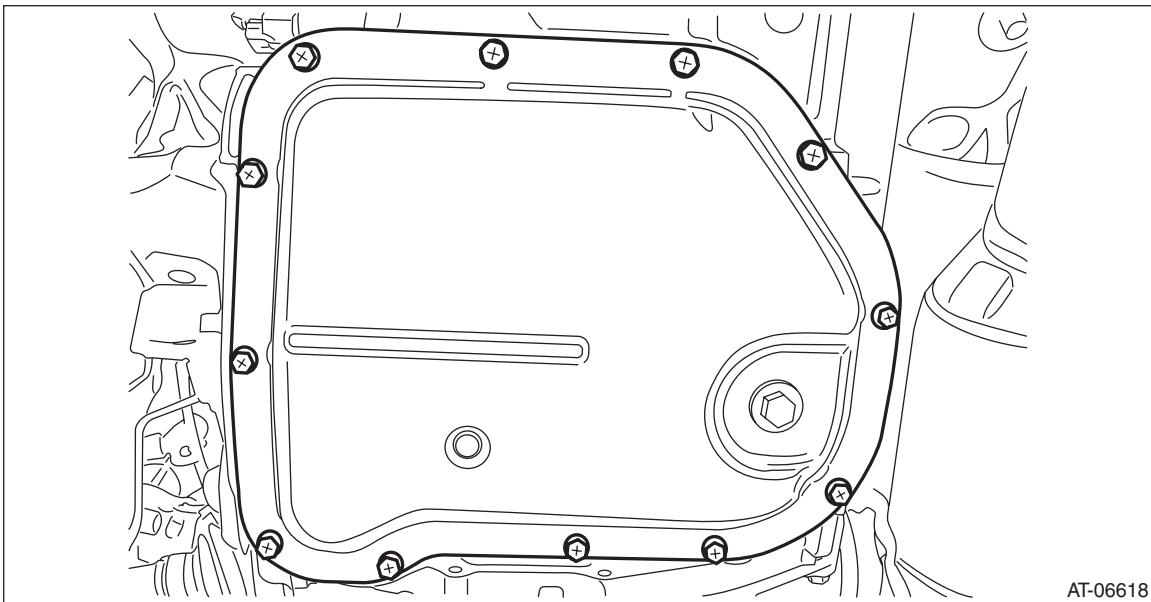

- 8) Refill CVTF and adjust the level. <Ref. to CVT(TR580)-37, REPLACEMENT, CVTF.>

## C: INSPECTION

- Check each part for damage or dust.
- Check oil strainer for clogging.