


## 25. Air Breather Hose

### A: REMOVAL

#### 1. FRONT DIFFERENTIAL SIDE


- 1) Remove the air intake boot assembly. <Ref. to IN(H4DO)-11, REMOVAL, Air Intake Boot.>
- 2) Remove the air breather hose.

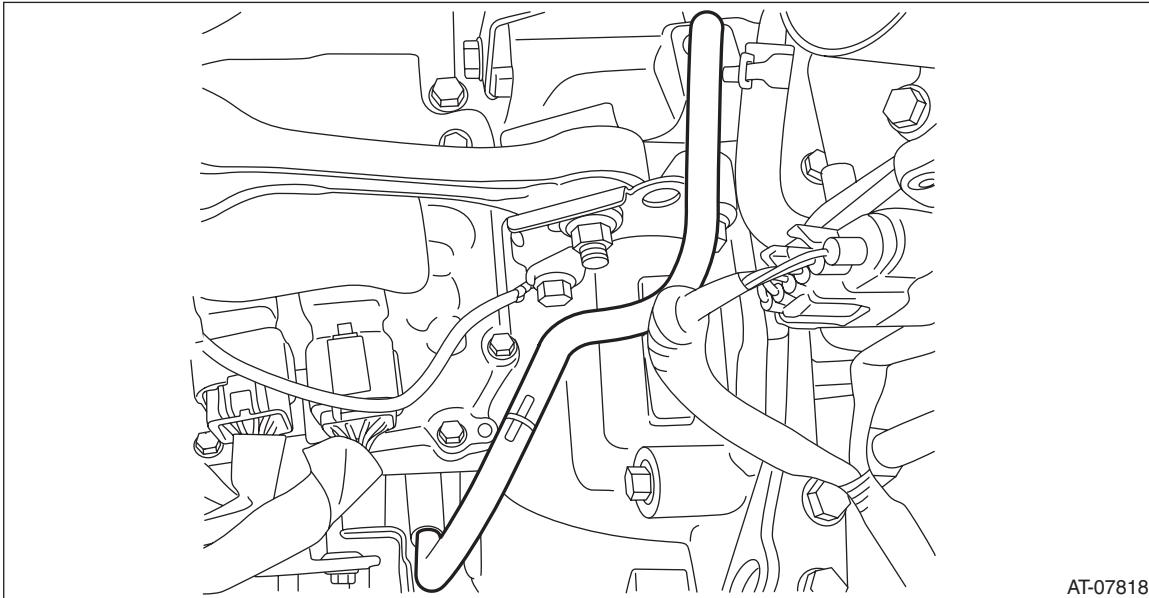

AT-07818

#### 2. TRANSMISSION CASE SIDE

- 1) Remove the transmission assembly. <Ref. to CVT(TR580)-57, REMOVAL, Automatic Transmission Assembly.>
- 2) Remove the transmission case cover.

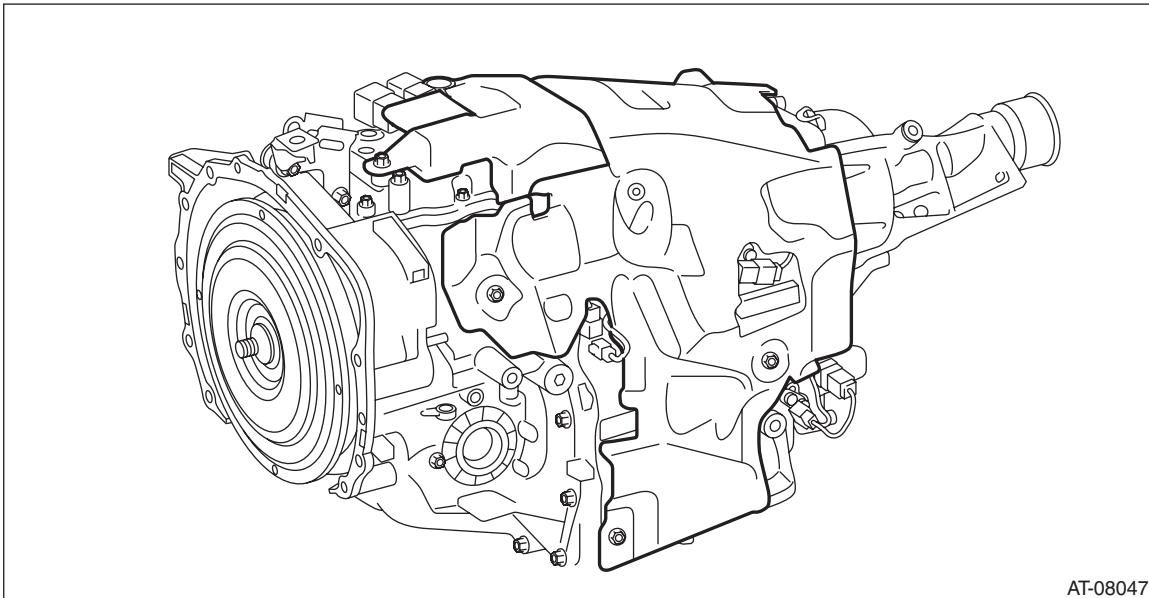


AT-08047

## Air Breather Hose

### CONTINUOUSLY VARIABLE TRANSMISSION

- 3) Remove the air breather hose.

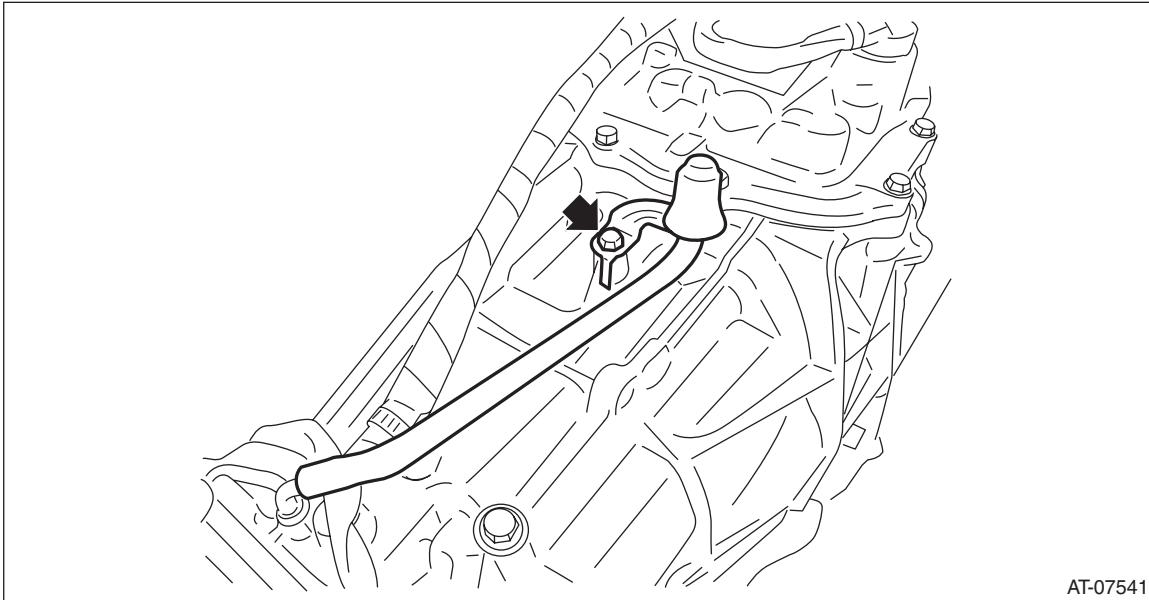

- 4) Remove the air breather cap.


## B: INSTALLATION

### 1. FRONT DIFFERENTIAL SIDE

Install in the reverse order of removal.

**NOTE:**

Securely insert the air breather hose until the hose end contacts the catch of the pitching stopper bracket.

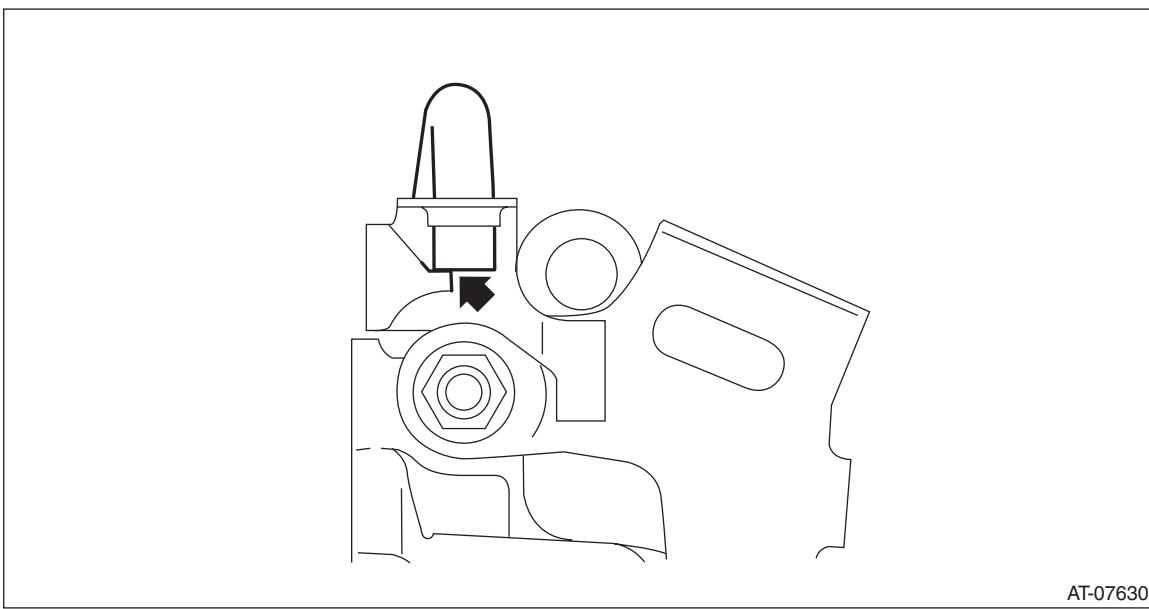

### 2. TRANSMISSION CASE SIDE

Install in the reverse order of removal.

#### ***Tightening torque:***

*Transmission case cover*

**8 N·m (0.8 kgf·m, 5.9 ft-lb)**

*Air breather hose*

**5 N·m (0.5 kgf·m, 3.7 ft-lb)**

### **C: INSPECTION**

Check the hose for peeling, crack or clogging.