

### 39. Variator Chain

#### A: REMOVAL

For removal of variator chain, refer to "Primary Pulley and Secondary Pulley". <Ref. to CVT(TR580)-221, REMOVAL, Primary Pulley and Secondary Pulley.>

#### B: INSTALLATION

For installation of variator chain, refer to "Primary Pulley and Secondary Pulley". <Ref. to CVT(TR580)-228, INSTALLATION, Primary Pulley and Secondary Pulley.>

#### C: INSPECTION

Check the variator chain for damage and wear.