



22.X MODE Switch

A: REMOVAL

- 1) Disconnect the ground cable from battery.
- 2) Remove the cover - shift lever. <Ref. to EI-65, REMOVAL, Console Box.>
- 3) Remove the screws which secure the X MODE switch from the cover - shift lever.

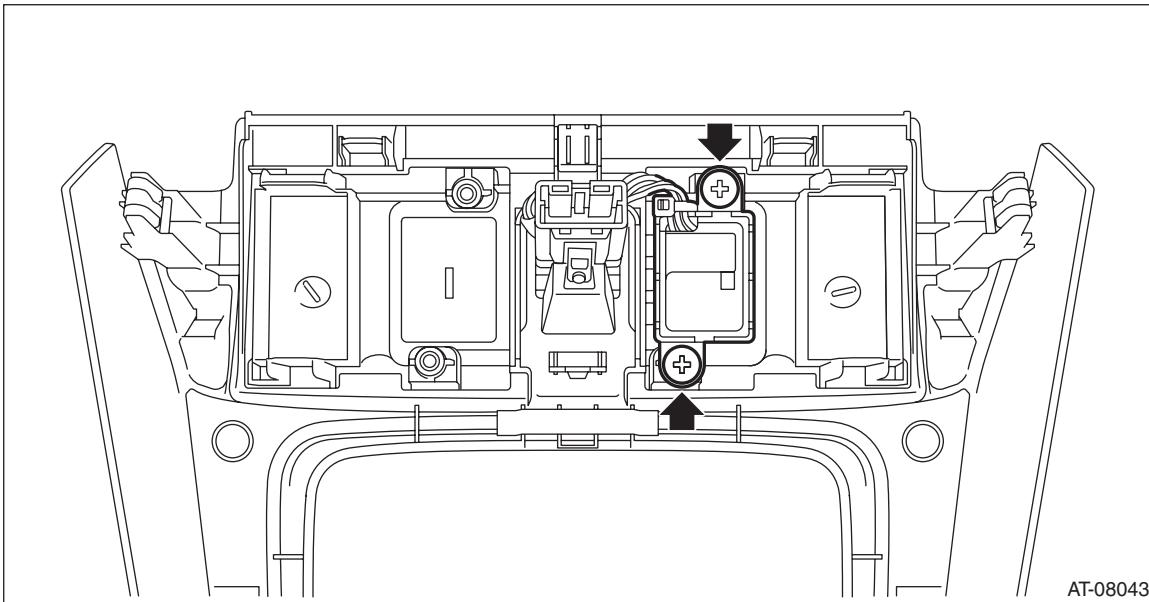

- 4) Disconnect the connector from the cover - shift lever and remove the X MODE switch.

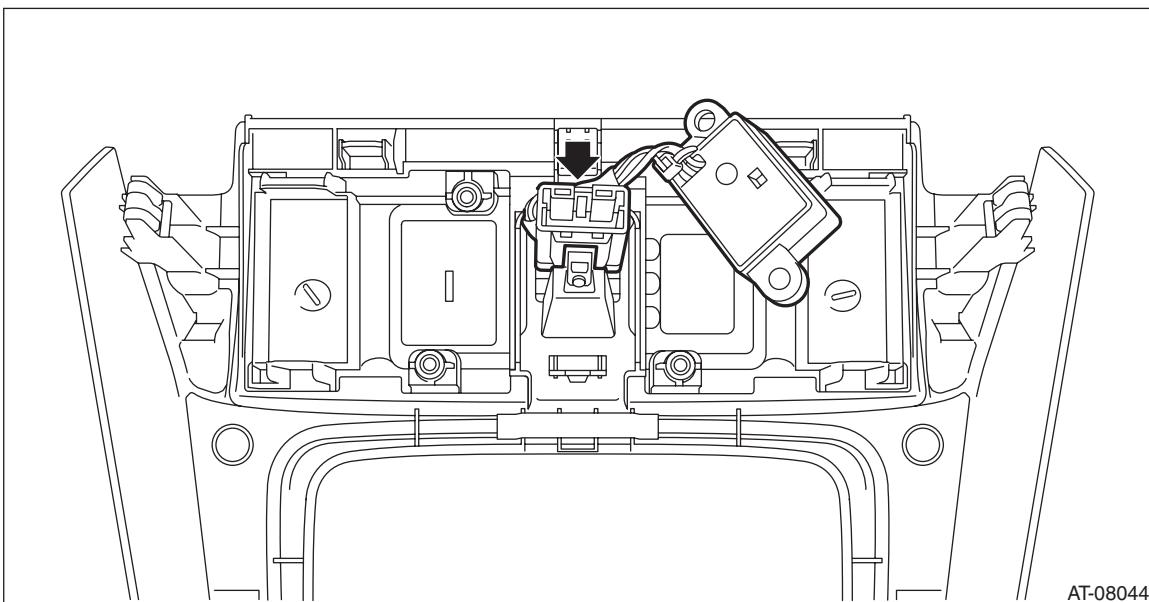

B: INSTALLATION

Install in the reverse order of removal.

X MODE Switch


CONTINUOUSLY VARIABLE TRANSMISSION

C: INSPECTION

1. CHECK SWITCH UNIT

Measure the resistance between harness connector terminals of the X MODE switch.

	Terminal No.	Standard
OFF (when measured without operating the switch)		1 MΩ or more
ON (when measured with the switch held down)	No. 4 — No. 5	Less than 1 Ω

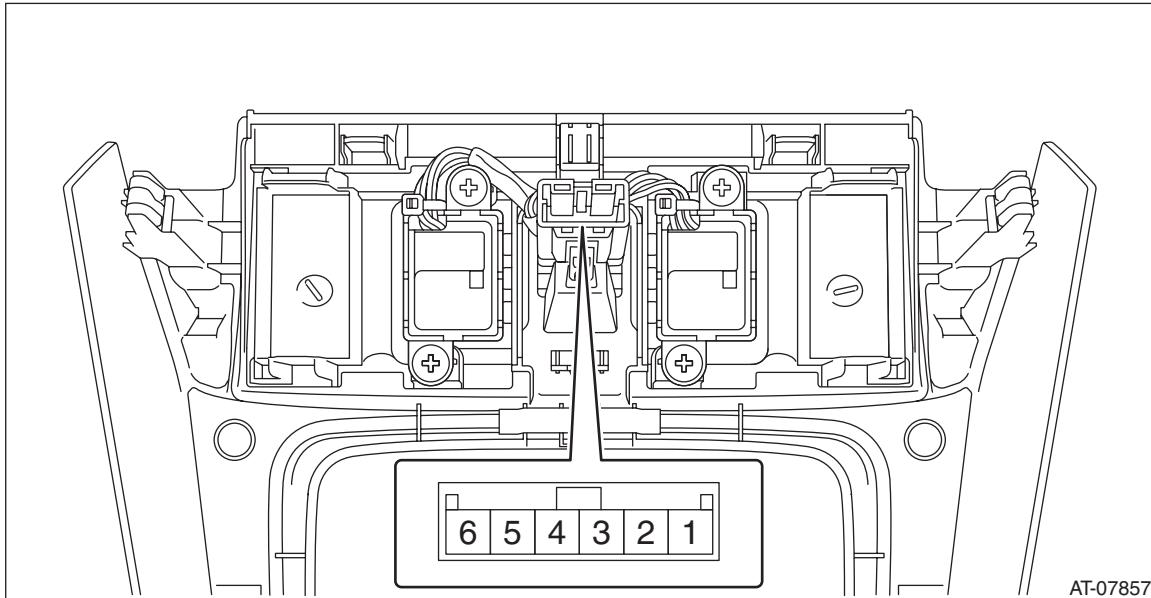

2. CHECK X MODE SYSTEM

Refer to "CVT (TR580)" section for X MODE system inspection. <Ref. to CVT(TR580)-138, CHECK X MODE SYSTEM, INSPECTION, X MODE Switch.>