

## 26. Drive Plate

### A: REMOVAL


1) Remove the transmission assembly from the vehicle.<Ref. to CVT(TR690)-56, REMOVAL, Automatic Transmission Assembly.>

2) Set the ST.

NOTE:

Set the ST to the drive plate referring to the illustration.

ST 498497300 CRANKSHAFT STOPPER

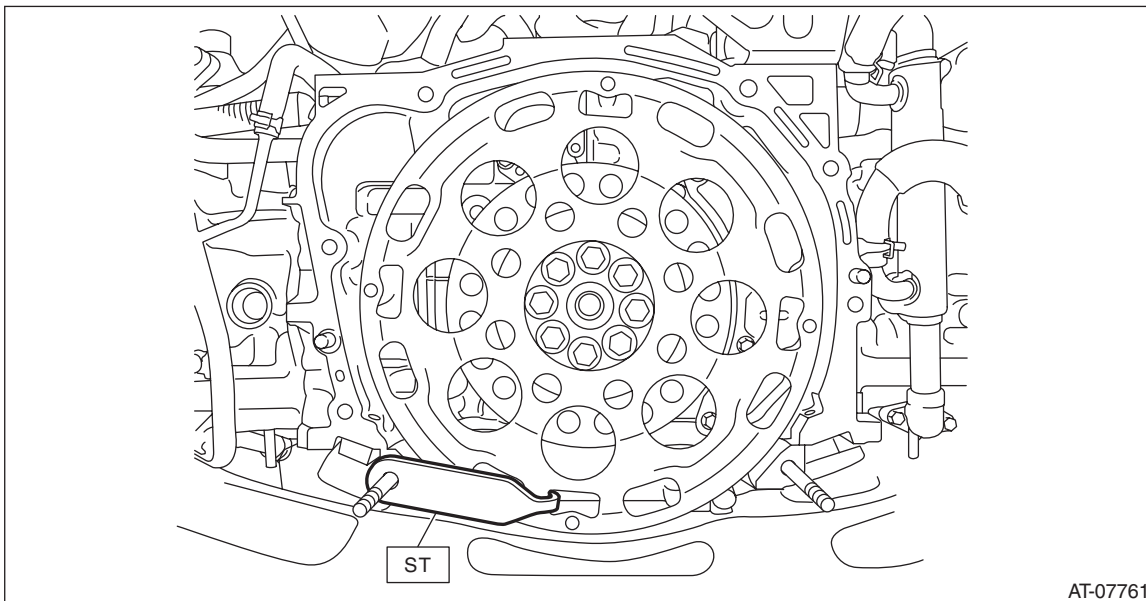

3) Remove the drive plate and reinforcement drive plate.

## Drive Plate

### CONTINUOUSLY VARIABLE TRANSMISSION


## B: INSTALLATION

- 1) Temporarily install the drive plate and reinforcement drive plate.
- 2) Set the ST.

#### NOTE:

Set the ST to the drive plate referring to the illustration.

ST 498497300 CRANKSHAFT STOPPER

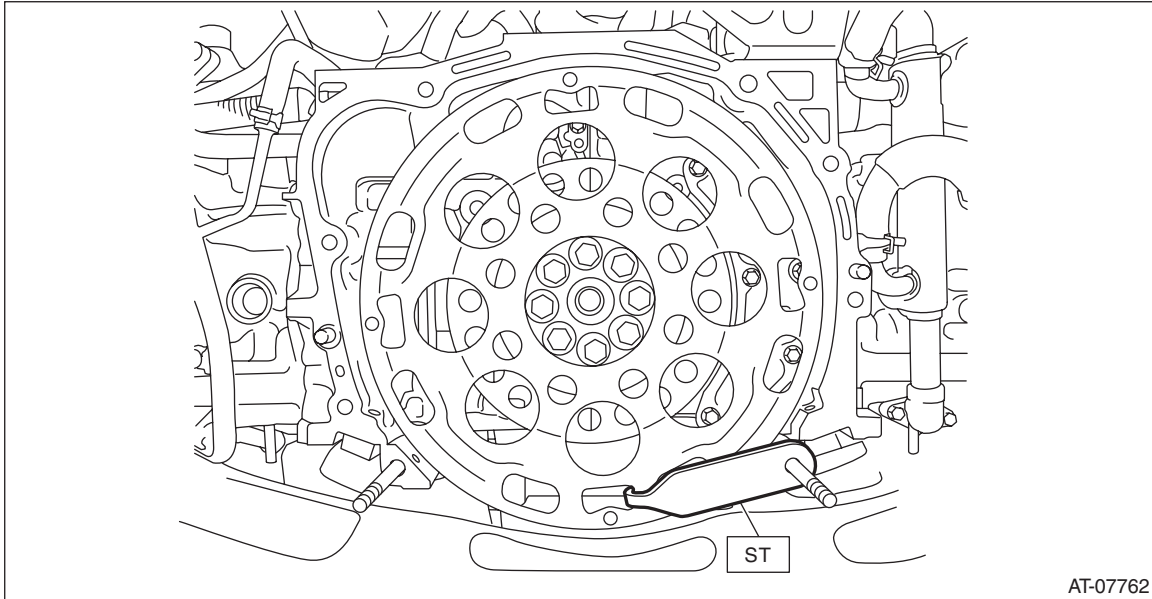

- 3) Tighten the drive plate mounting bolt in two stages.

#### NOTE:

Fix the engine unit.

- (1) Tighten the drive plate mounting bolt.

#### **Tightening torque:**

**30 N·m (3.1 kgf-m, 22.1 ft-lb)**

- (2) While checking the tightening angle with the angle gauge, tighten the drive plate mounting bolts to the specified angle.

#### **Tightening angle:**

**30° — 35°**

- 4) Install the transmission assembly to the vehicle.<Ref. to CVT(TR690)-69, INSTALLATION, Automatic Transmission Assembly.>

## C: INSPECTION

Check the drive cable for damage.