

## 45.Oil Pump

### A: REMOVAL

NOTE:

Refer to "Drive Pinion Shaft" for removal procedures. <Ref. to CVT(TR690)-247, REMOVAL, Drive Pinion Shaft Assembly.>

### B: INSTALLATION

NOTE:

Refer to "Drive Pinion Shaft" for installation procedures. <Ref. to CVT(TR690)-249, INSTALLATION, Drive Pinion Shaft Assembly.>

### C: INSPECTION

Check the following items.

- Check the oil pump for damage and wear.
- Rotate the oil pump by hand, and check that it rotates smoothly.

- 1) Measure the secondary pressure. <Ref. to CVT(TR690)-51, INSPECTION, Secondary Pressure (Line Pressure) Test.>
- 2) Remove the oil pan and oil strainer. <Ref. to CVT(TR690)-109, REMOVAL, Control Valve Body.>
- 3) Check oil strainer for clogging.

When oil strainer has no clogging, replace the oil pump.