


Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

4. Electrical Component Location

A: LOCATION



1. CONTROL MODULE

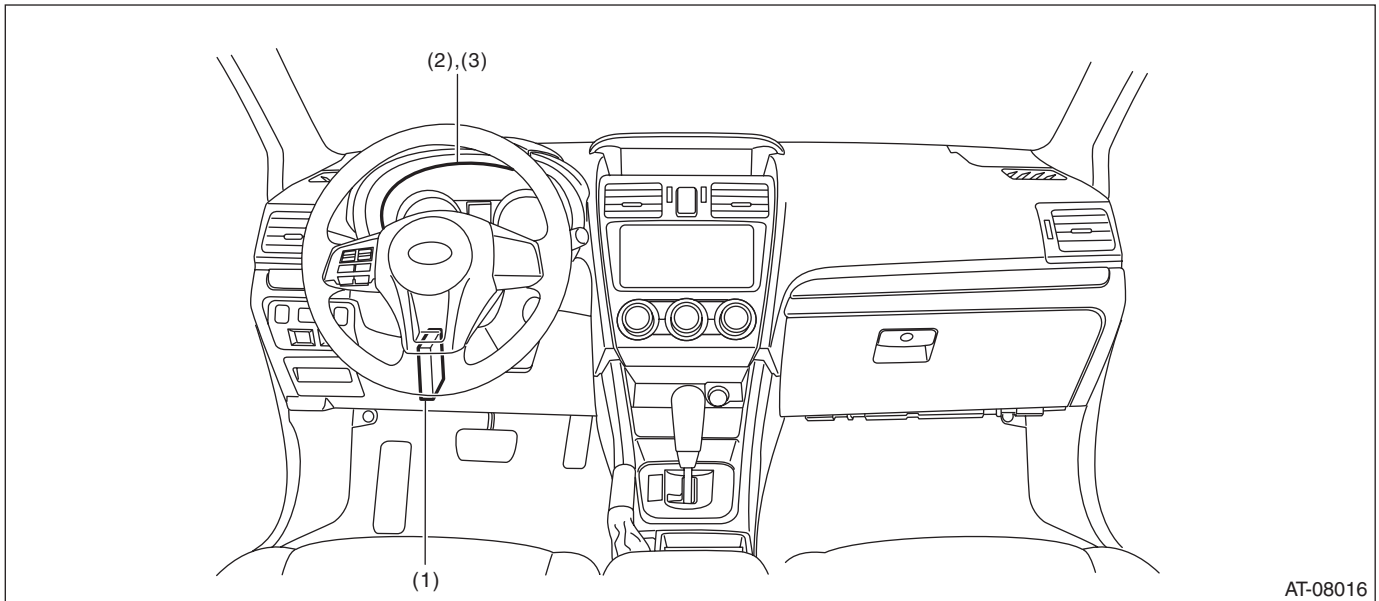

(1) Transmission control module (TCM)

(2) AT OIL TEMP light

(3) AWD light

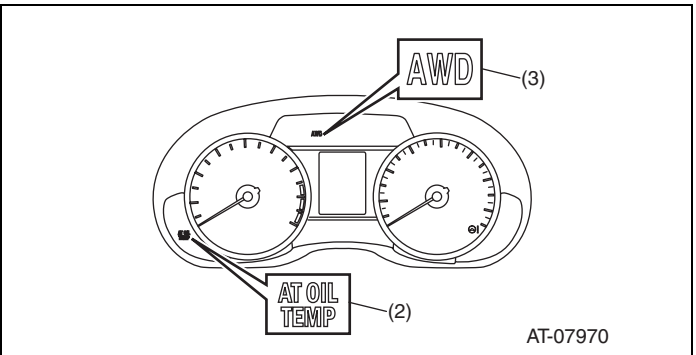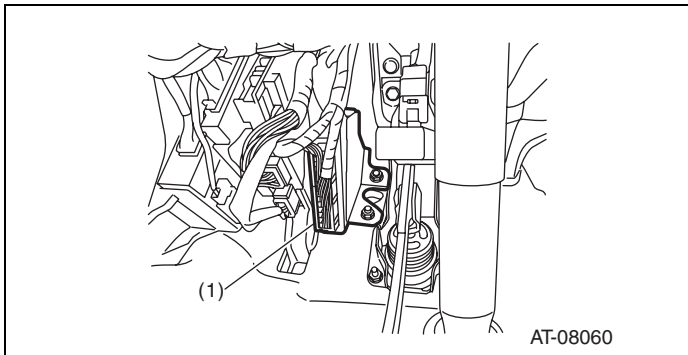


Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

2. SENSOR

- Non-turbo model

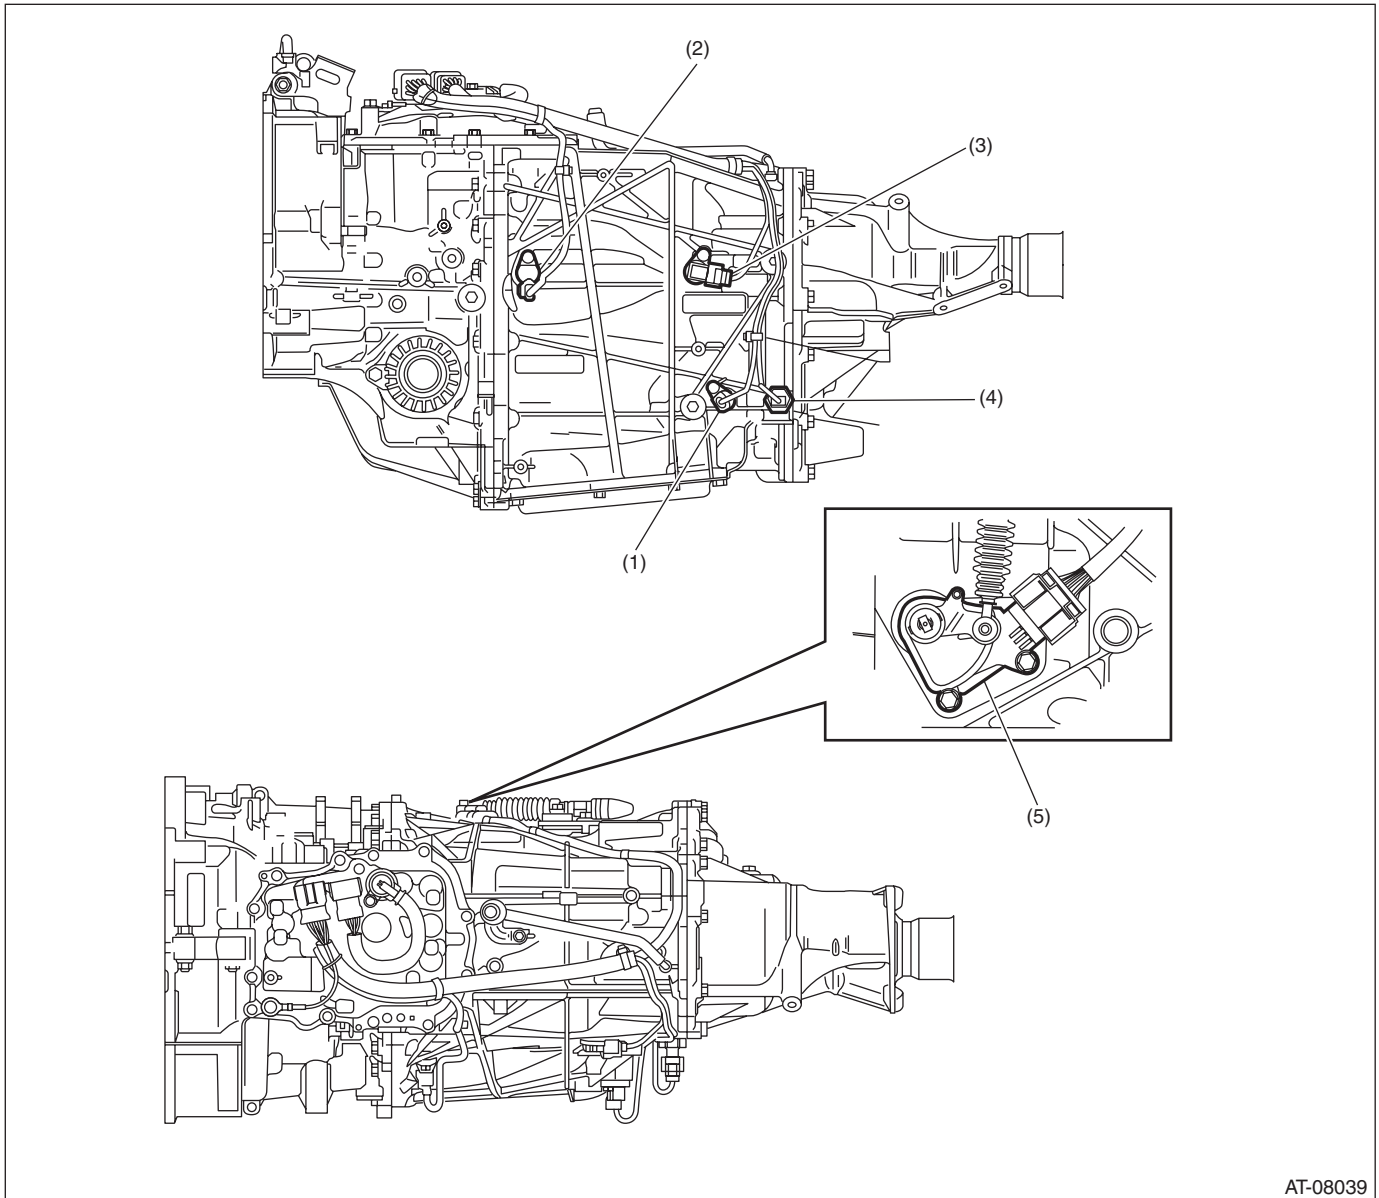

(1) Secondary speed sensor

(2) Turbine speed sensor

(3) Primary speed sensor


(4) Secondary pressure sensor

(5) Inhibitor switch

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

- Turbo model

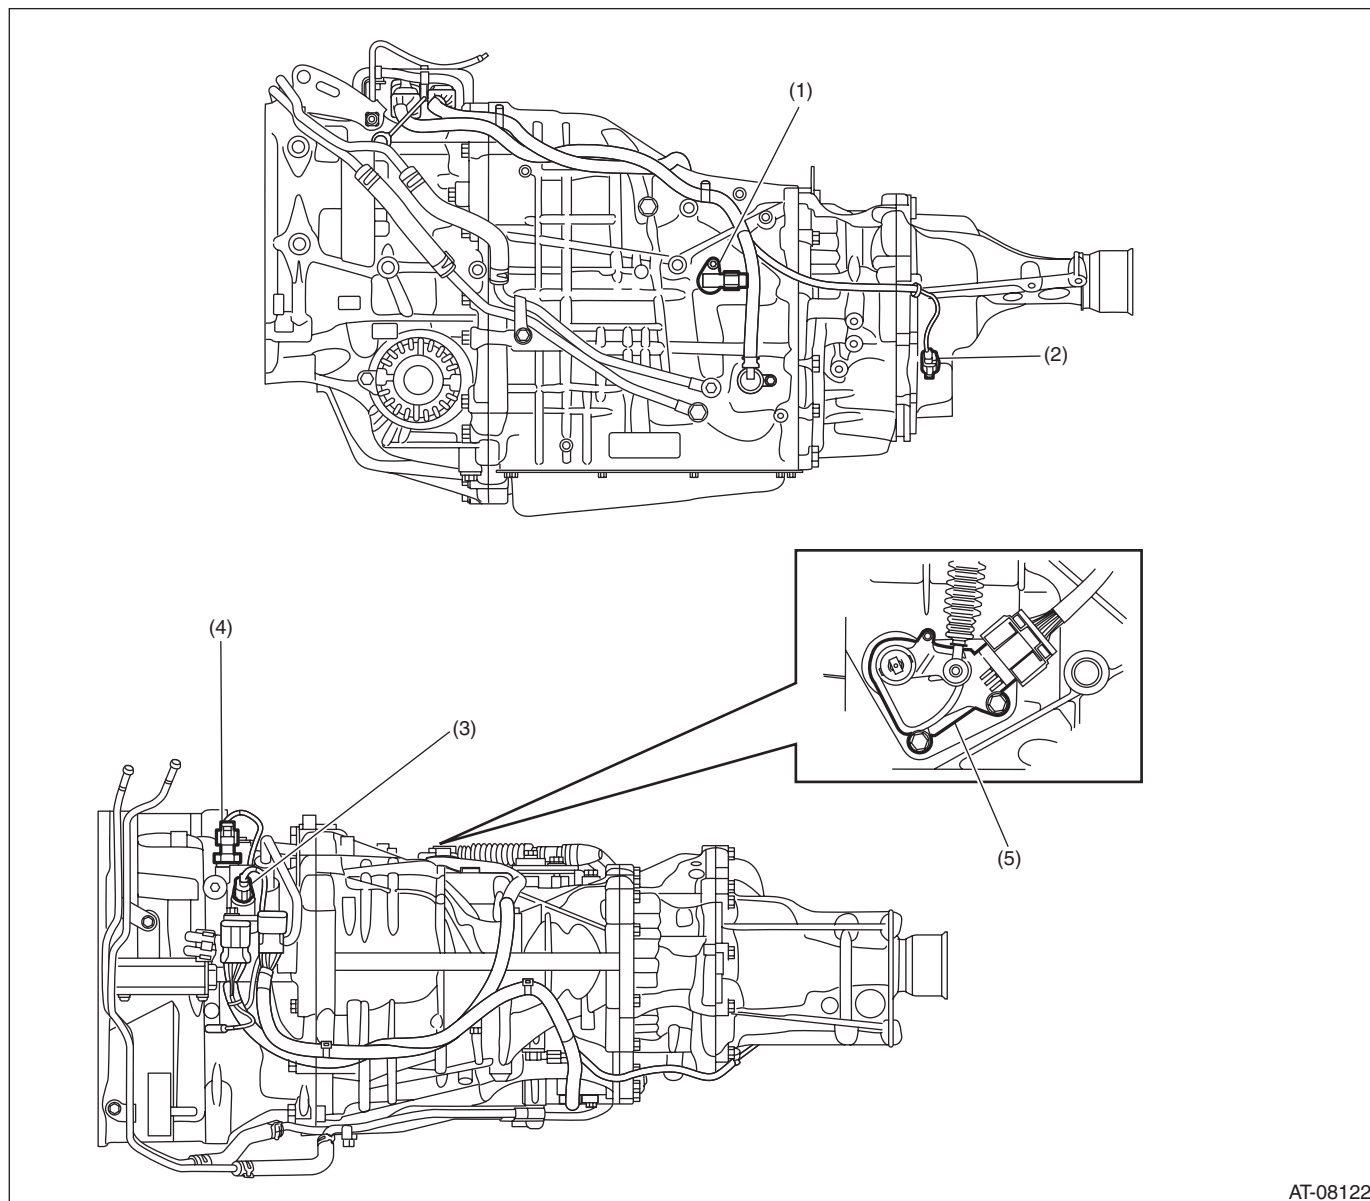

AT-08122


- | | | |
|------------------------------|-------------------------------|----------------------|
| (1) Secondary speed sensor | (3) Primary speed sensor | (5) Inhibitor switch |
| (2) Front wheel speed sensor | (4) Secondary pressure sensor | |

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

3. SOLENOID

- Non-turbo model

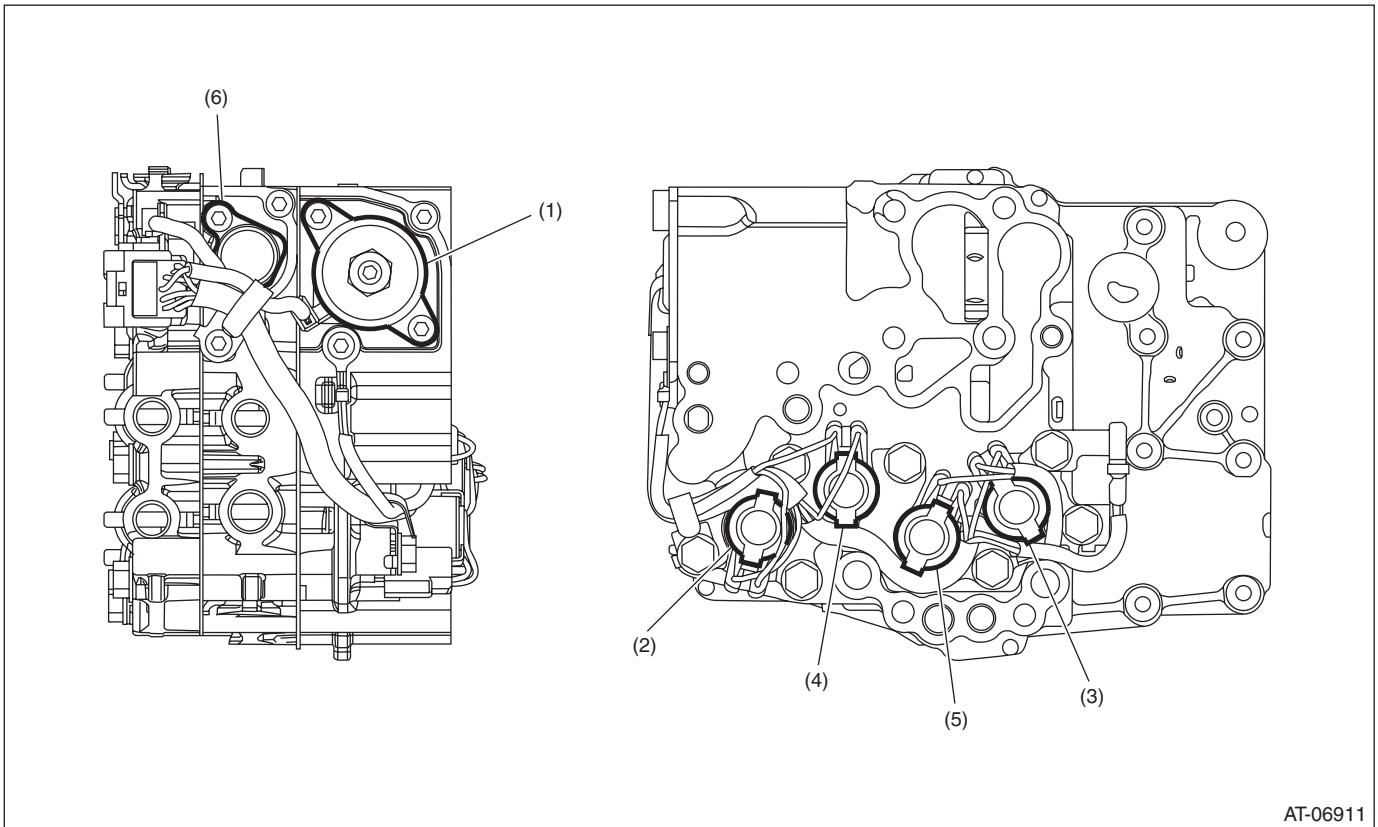


AT-06911

- | | | |
|------------------------|---------------------------|-------------------------|
| (1) Secondary solenoid | (3) Lock-up duty solenoid | (5) Primary UP solenoid |
| (2) AWD solenoid | (4) Primary DOWN solenoid | (6) F&R solenoid |

Electrical Component Location

CONTINUOUSLY VARIABLE TRANSMISSION (DIAGNOSTICS)

- Turbo model

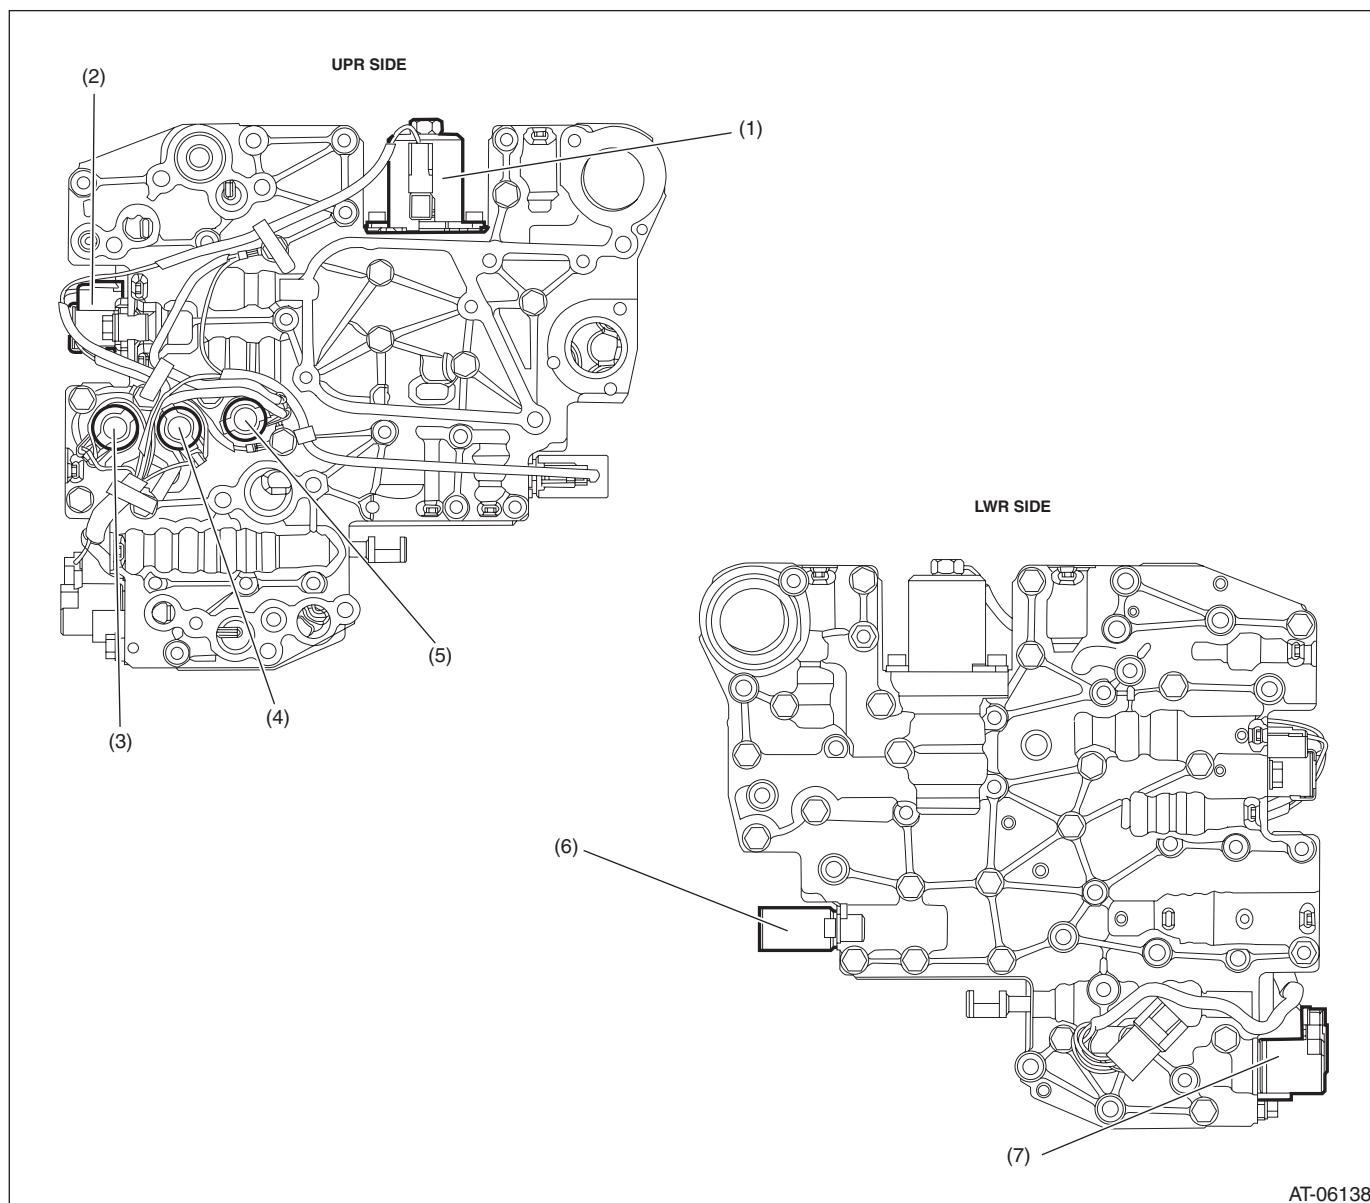

- (1) Secondary solenoid
- (2) AWD solenoid
- (3) Lock-up duty solenoid

- (4) Primary DOWN solenoid
- (5) Primary UP solenoid

- (6) F&R solenoid
- (7) Lock-up ON/OFF solenoid