



3. Fuse And Relay

A: LOCATION

1. WITHOUT PUSH BUTTON START (ENGINE COMPARTMENT SIDE)

1a

1a

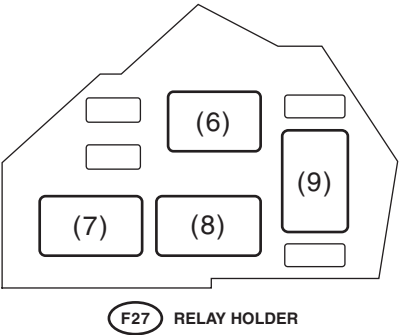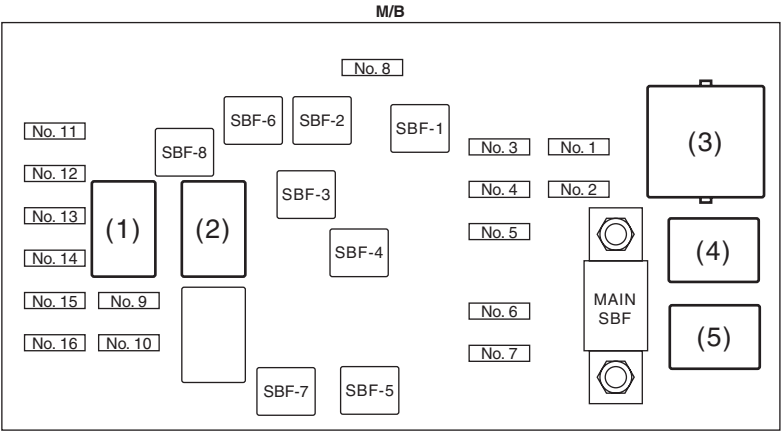


- (1) HORN RELAY
- (2) REAR DEFOGGER RELAY
- (3) MAIN FAN RELAY 1
- (4) HEADLIGHT RELAY LO

- (5) HEADLIGHT RELAY HI
- (6) DAYTIME RUNNING LIGHT RELAY
- (7) SUB FAN RELAY
- (8) A/C RELAY
- (9) MAIN FAN RELAY 2

2. WITHOUT PUSH BUTTON START (PASSENGER ROOM SIDE)

2a

2a

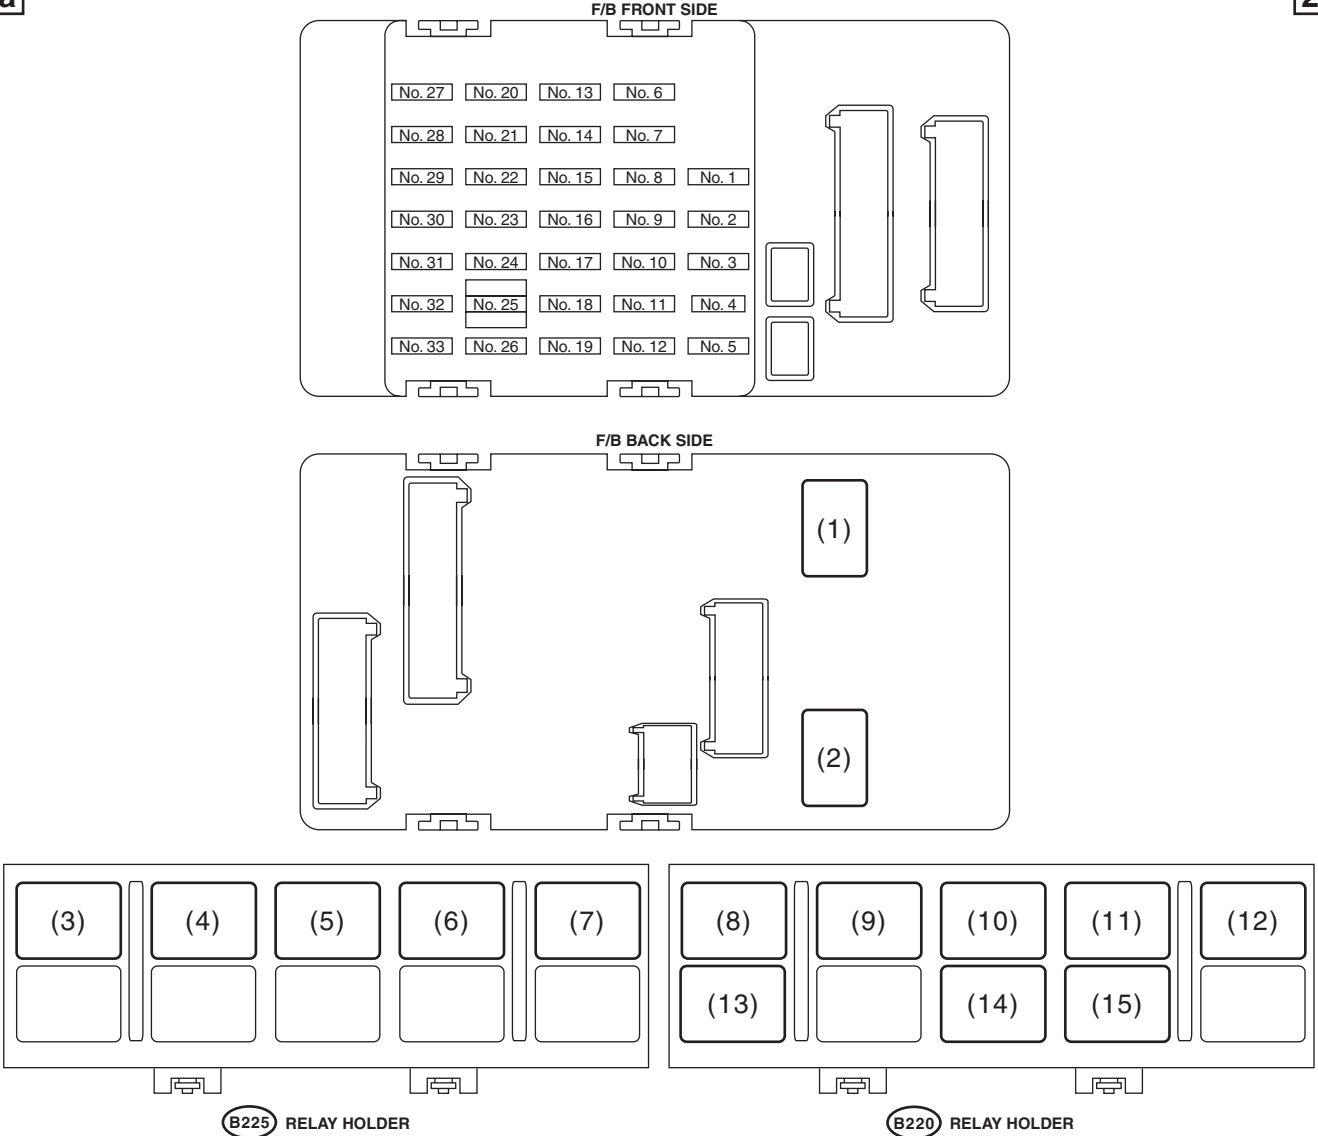

- (1) IG 2 RELAY
- (2) ACCESSORY RELAY
- (3) STARTER RELAY 1
- (4) POWER WINDOW RELAY
- (5) TAIL & ILLUMINATION RELAY
- (6) ELECTRONIC THROTTLE CONTROL RELAY
- (7) A/F, OXYGEN SENSOR RELAY

- (8) FUEL PUMP RELAY (NON-TURBO MODEL)
- (9) IG RELAY
- (10) MAIN RELAY
- (11) SELF SHUT RELAY
- (12) FUEL PUMP RELAY (TURBO MODEL)
- (13) FRONT FOG LIGHT RELAY
- (14) WIPER DEICER RELAY
- (15) SEAT HEATER RELAY



Fuse And Relay

WIRING SYSTEM

3. WITH PUSH BUTTON START (ENGINE COMPARTMENT SIDE)

3a

3a

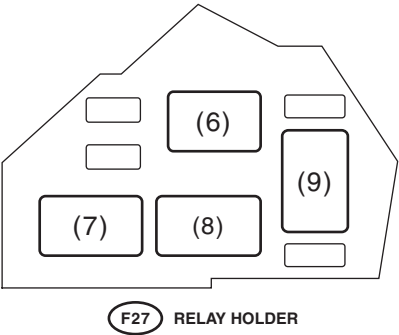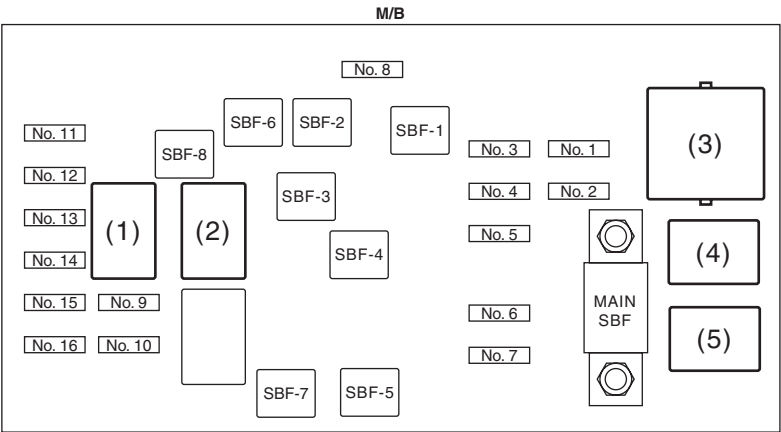





- | | |
|-------------------------|---------------------------------|
| (1) HORN RELAY | (5) HEADLIGHT RELAY HI |
| (2) REAR DEFOGGER RELAY | (6) DAYTIME RUNNING LIGHT RELAY |
| (3) MAIN FAN RELAY 1 | (7) SUB FAN RELAY |
| (4) HEADLIGHT RELAY LO | (8) A/C RELAY |
| | (9) MAIN FAN RELAY 2 |

WI-40615

4. WITH PUSH BUTTON START (PASSENGER ROOM SIDE)

4a

4a

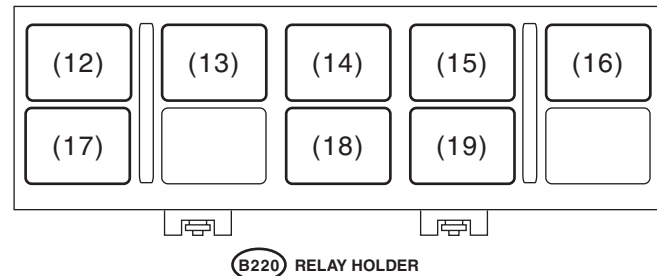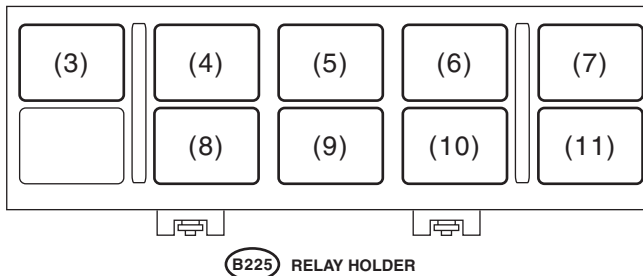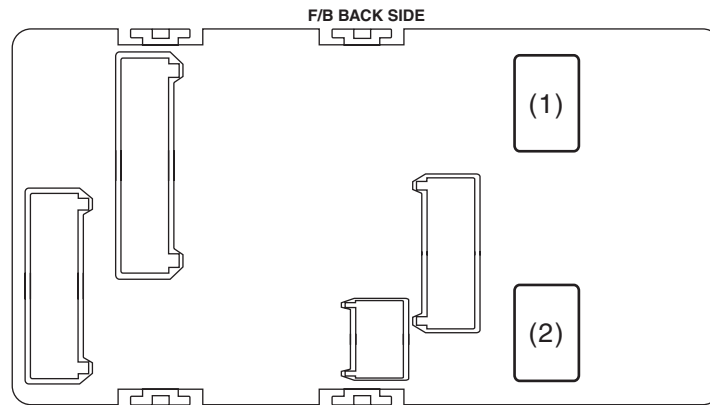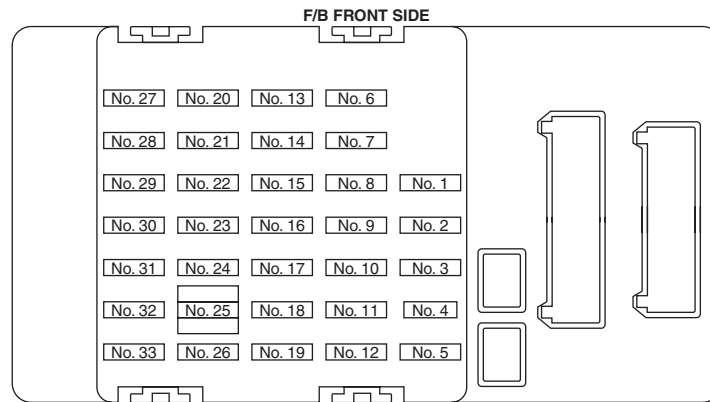

- (1) IG 2 RELAY
- (2) ACCESSORY RELAY
- (3) STARTER RELAY 1
- (4) POWER WINDOW RELAY
- (5) TAIL & ILLUMINATION RELAY
- (6) ELECTRONIC THROTTLE CONTROL RELAY
- (7) A/F, OXYGEN SENSOR RELAY
- (8) STARTER RELAY (PUSH BUTTON START)
- (9) IG RELAY 2

- (10) IG RELAY 1
- (11) STARTER CUT RELAY
- (12) FUEL PUMP RELAY (NON-TURBO MODEL)
- (13) IG RELAY
- (14) MAIN RELAY
- (15) SELF SHUT RELAY
- (16) FUEL PUMP RELAY (TURBO MODEL)
- (17) FRONT FOG LIGHT RELAY
- (18) WIPER DEICER RELAY
- (19) SEAT HEATER RELAY

WI-40616