


48.Remote Engine Start System

A: WIRING DIAGRAM

1. NON-TURBO MODEL

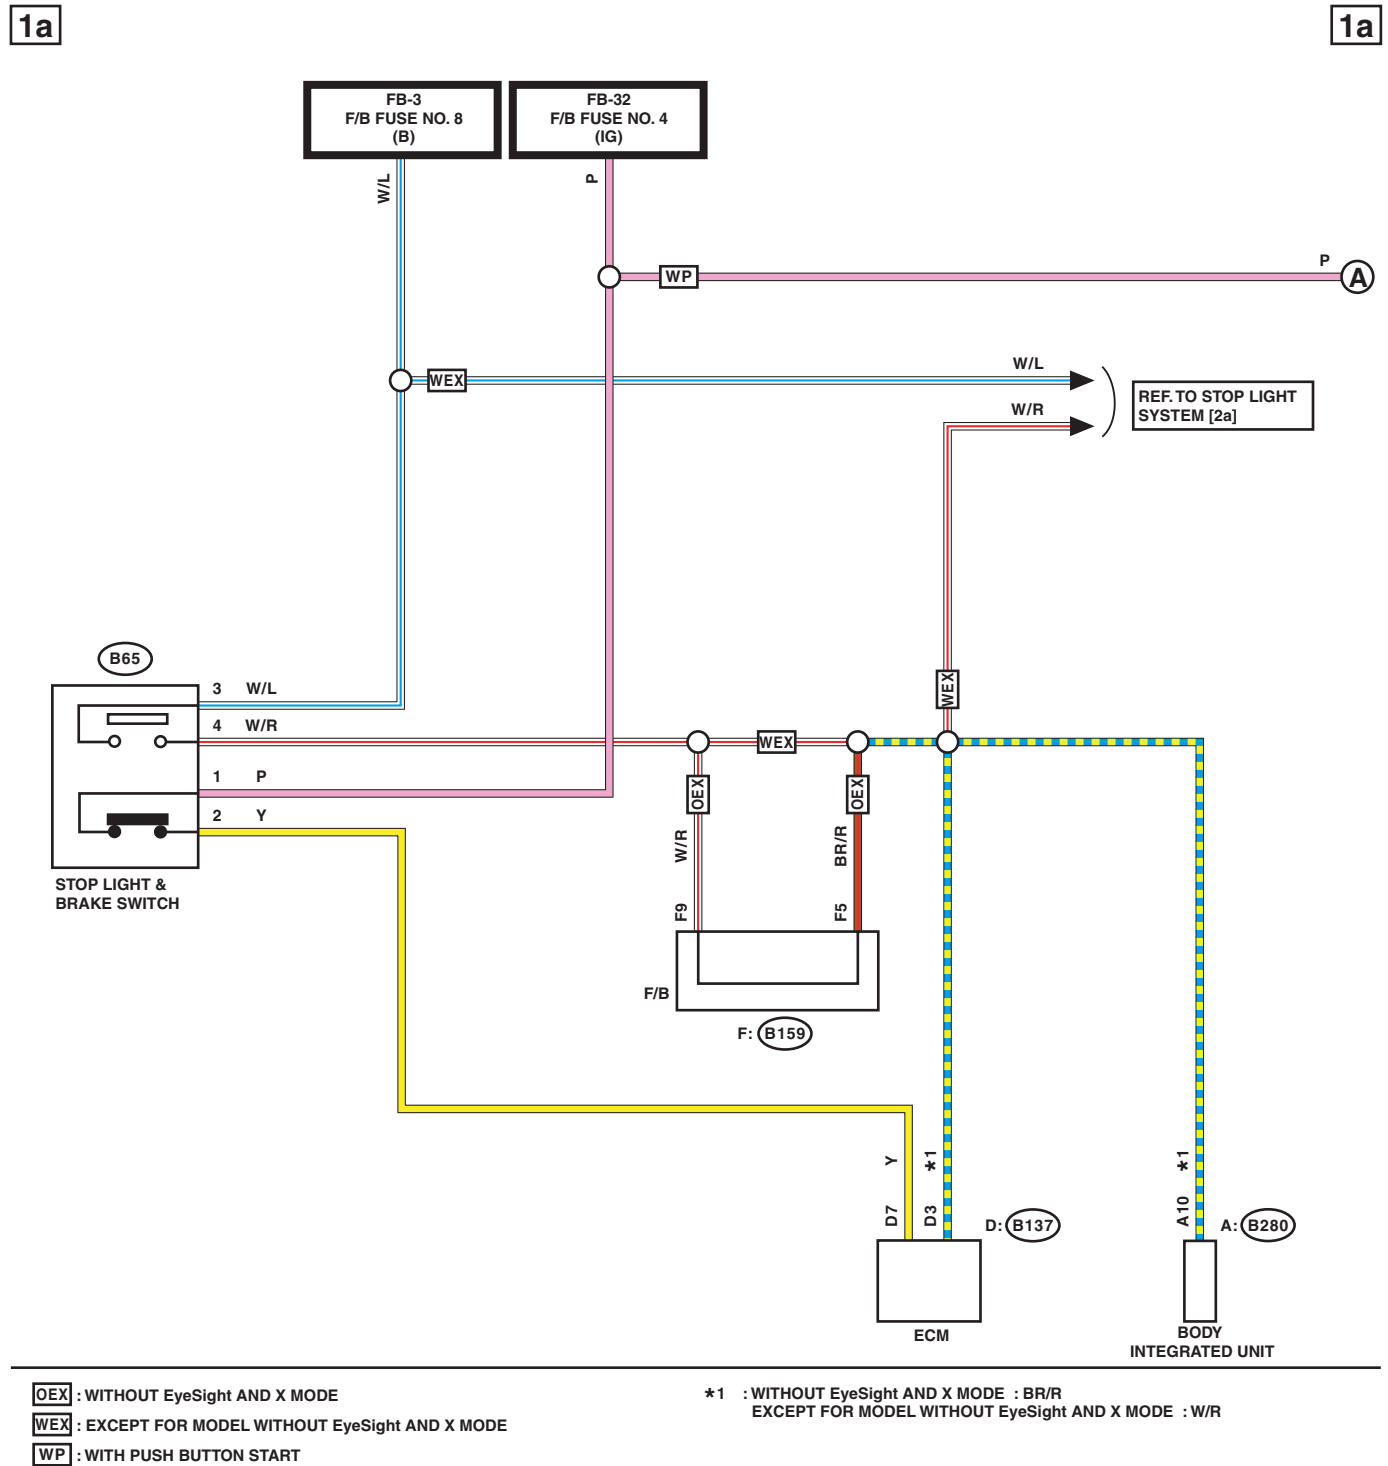


WI-45895

Remote Engine Start System

WIRING SYSTEM

1b

1b

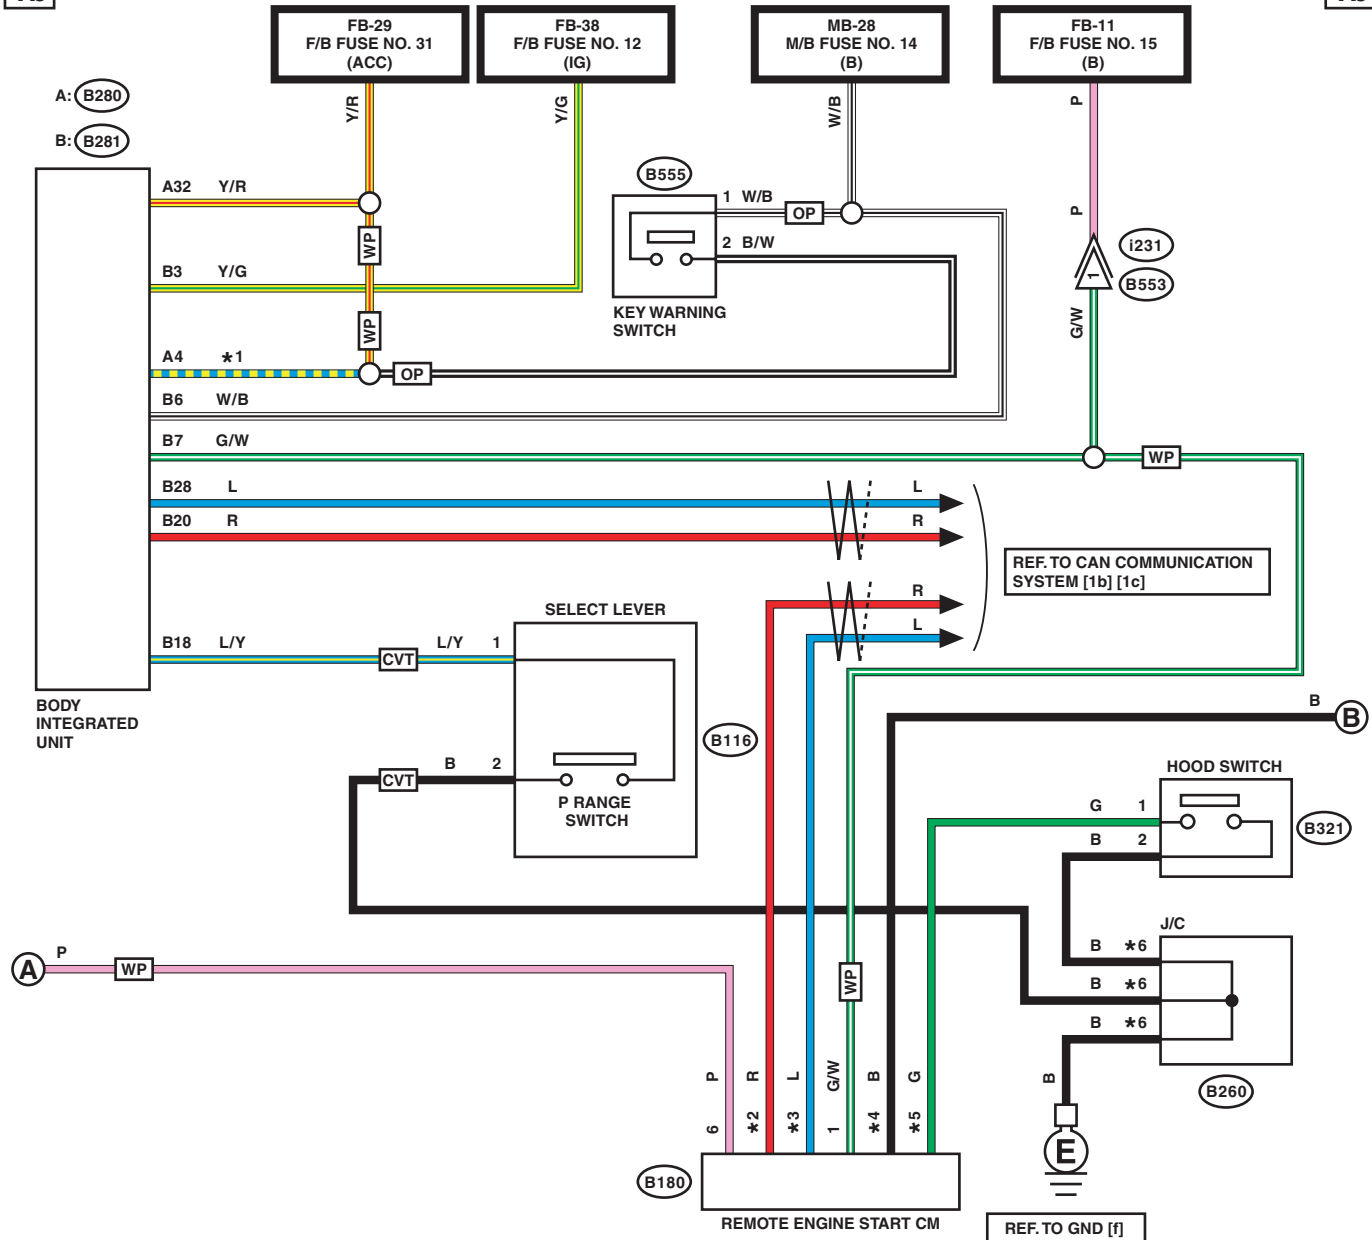


WI-45846

Remote Engine Start System

WIRING SYSTEM

1c

1c

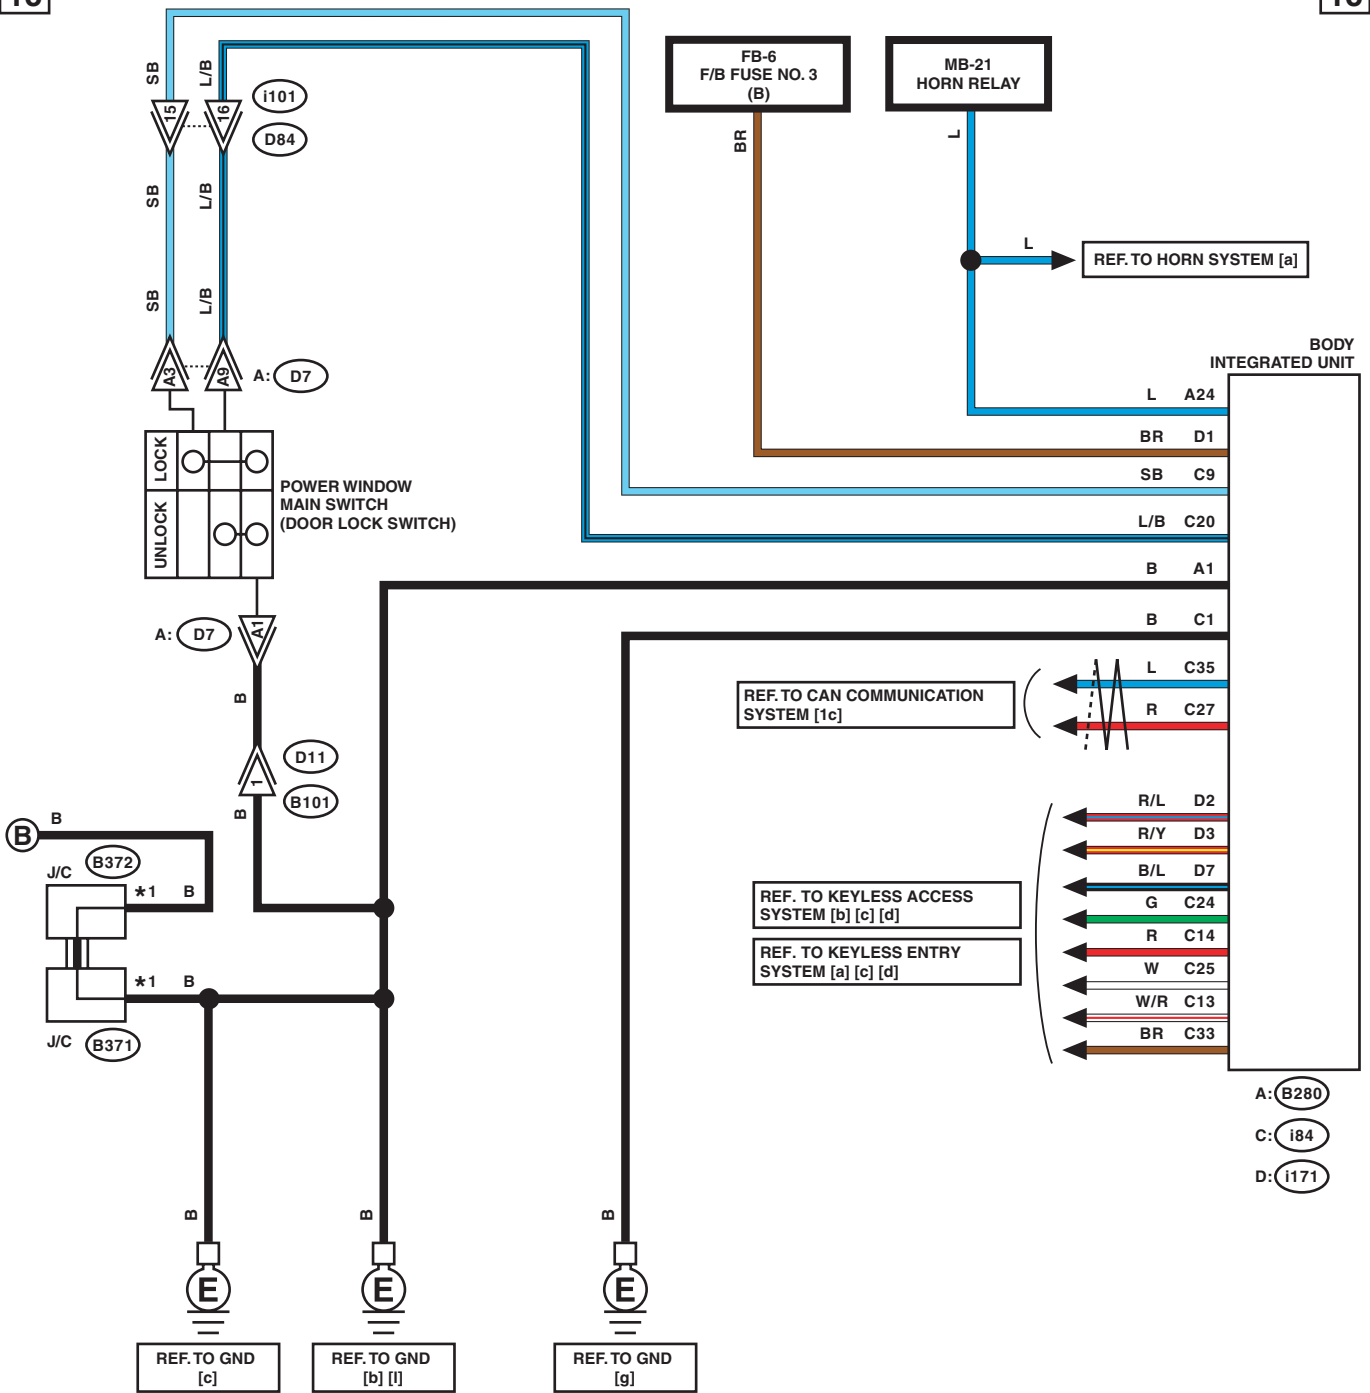

*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8, 9, 10, 11 AND 12


WI-45847

WIRING SYSTEM

1d

1d

LIST OF CONNECTORS

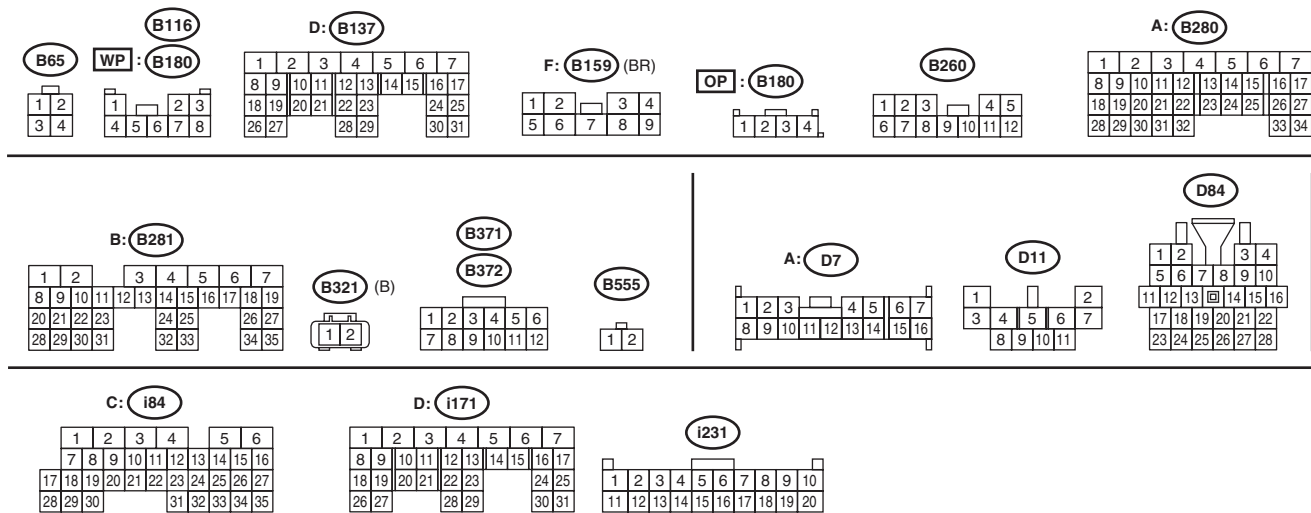


[OP] : WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START

2. TURBO MODEL

2a

2a

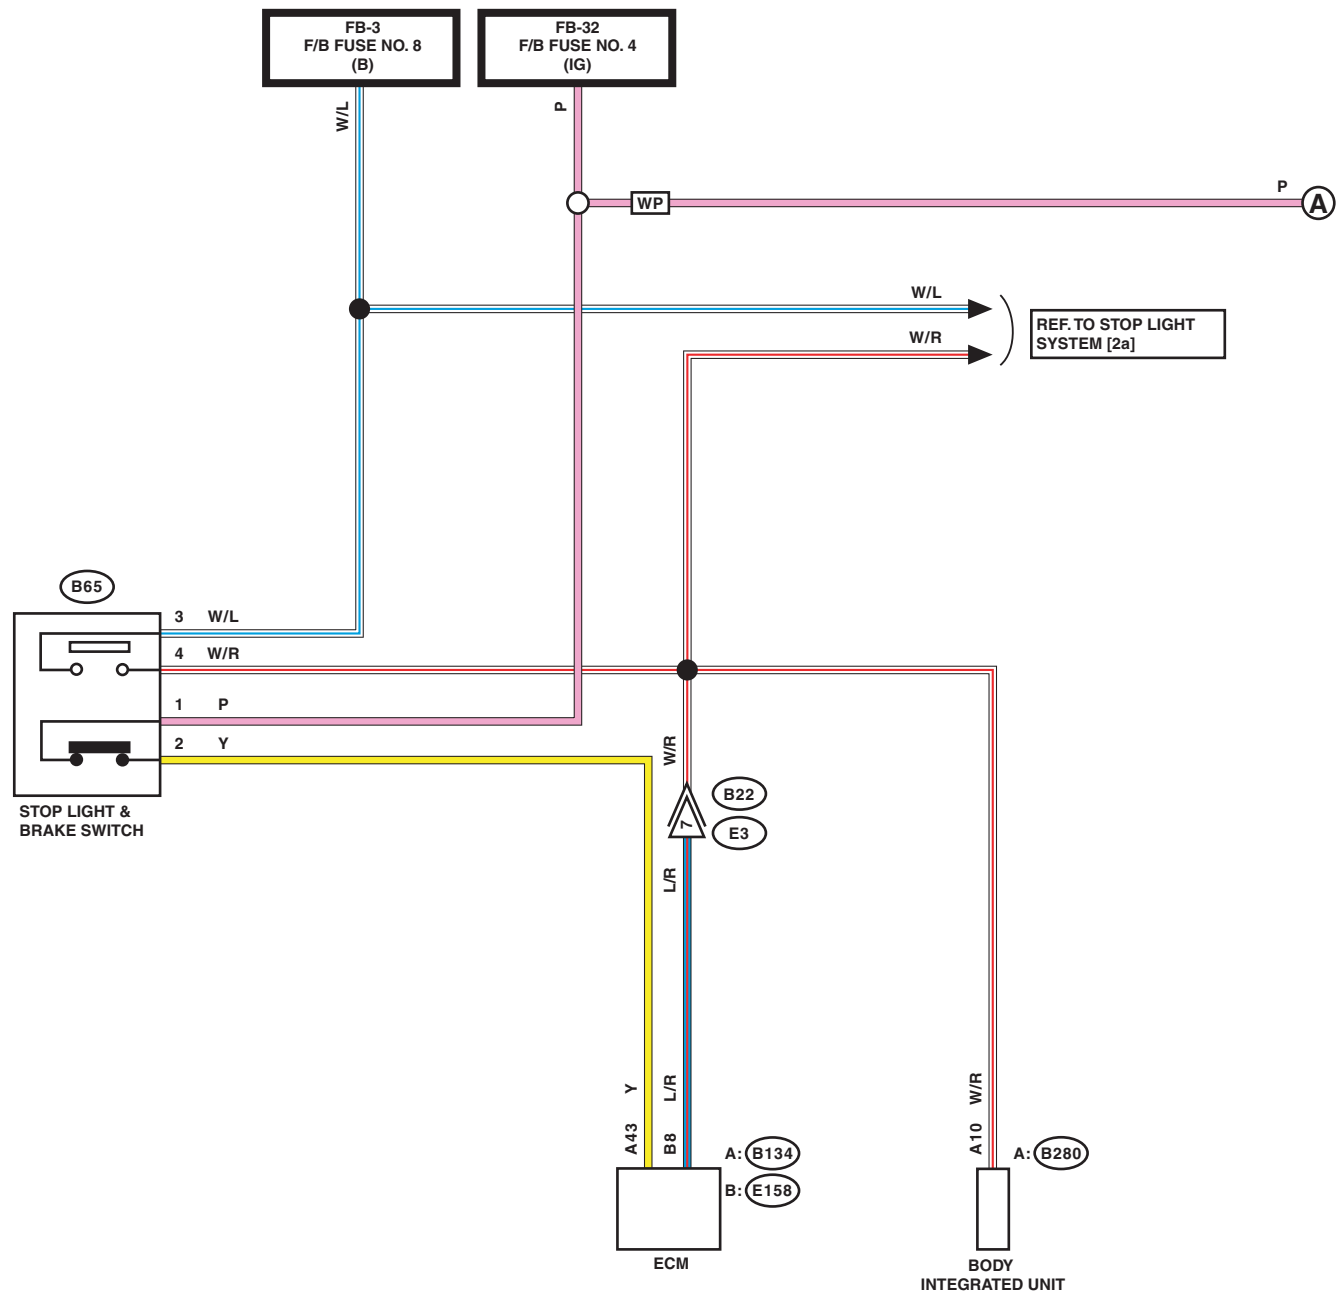


WP : WITH PUSH BUTTON START

WI-45848

Remote Engine Start System

WIRING SYSTEM

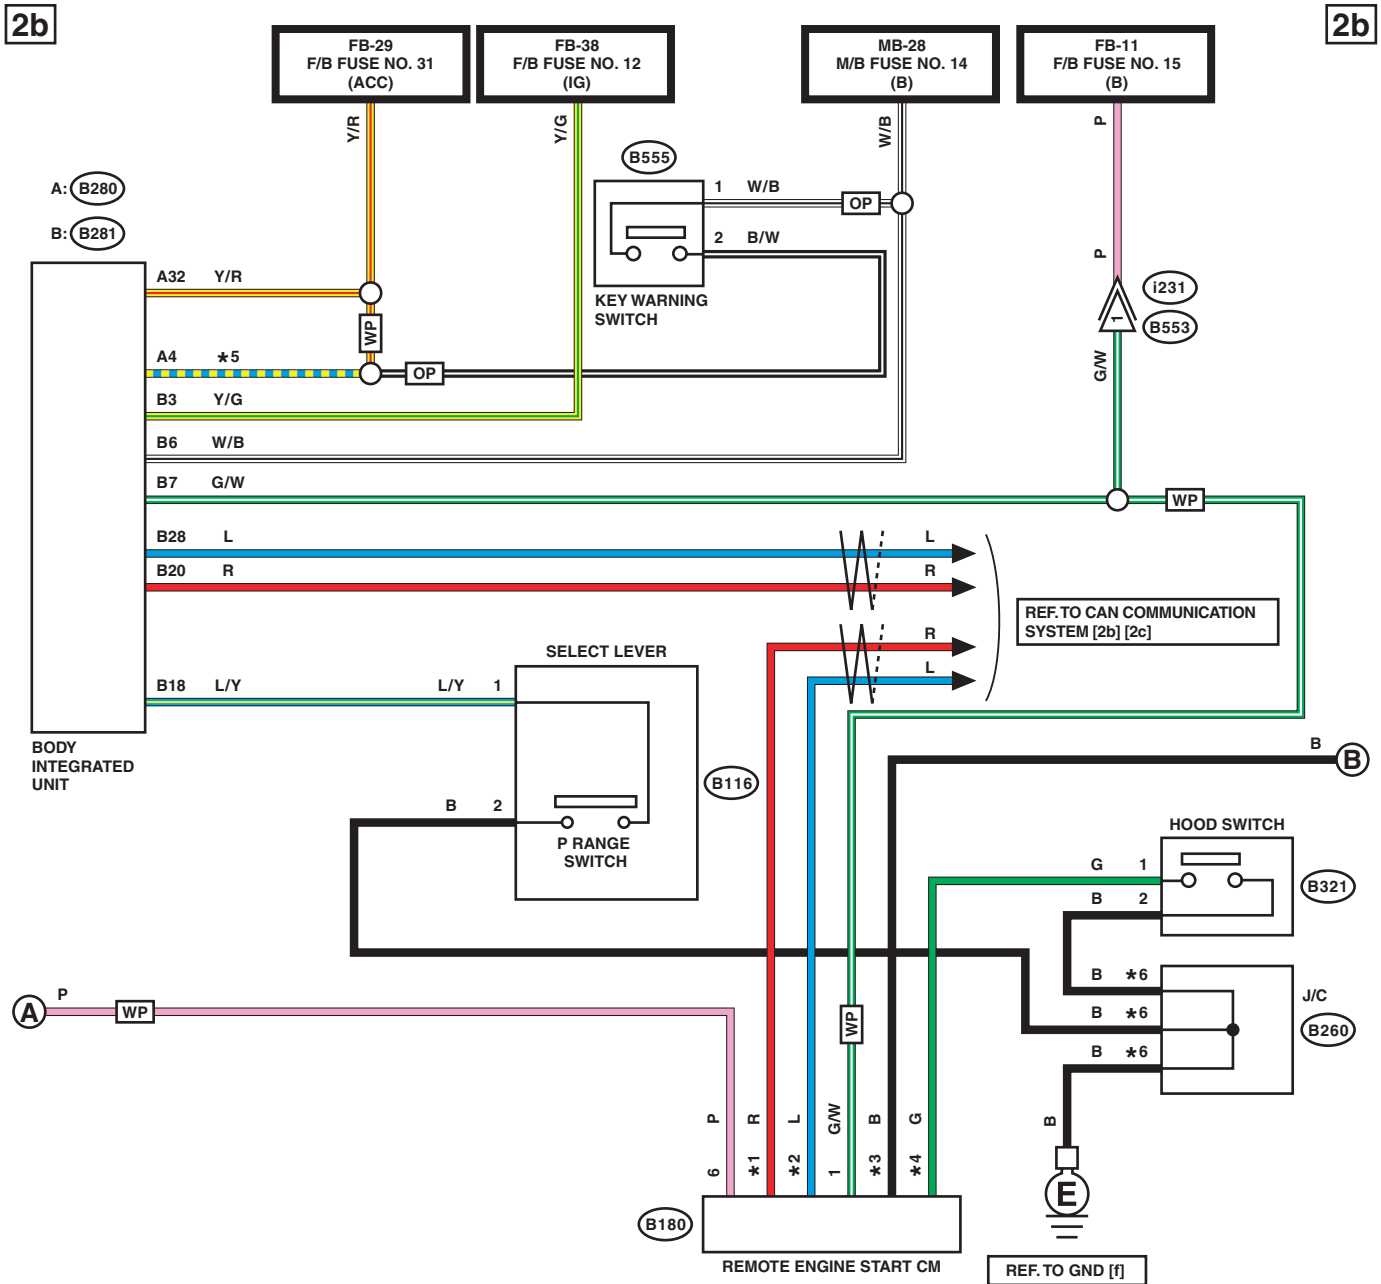


WI-45849

Remote Engine Start System

WIRING SYSTEM

2c

2c

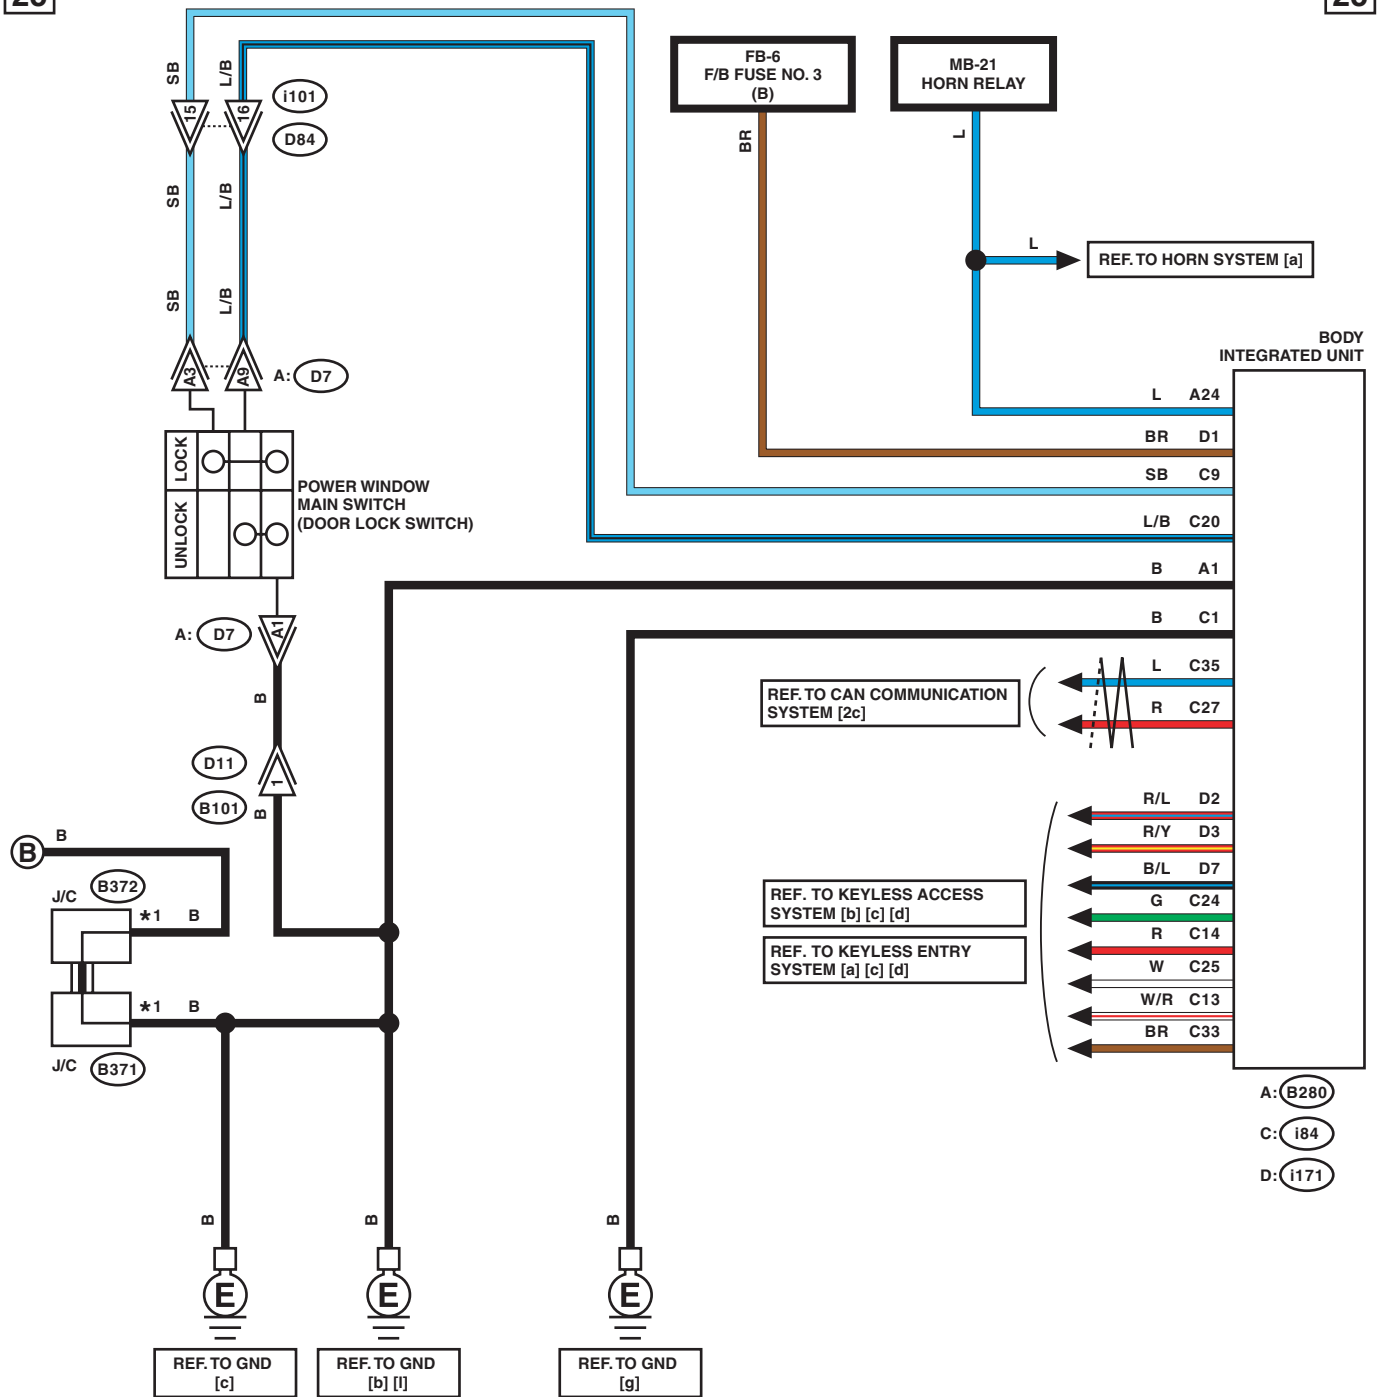

*1 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 7, 8, 9, 10, 11 AND 12

WI-45850




Remote Engine Start System

WIRING SYSTEM

2d

2d

LIST OF CONNECTORS

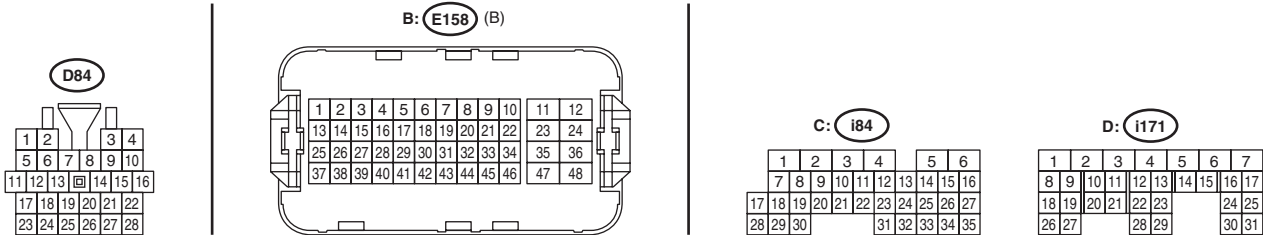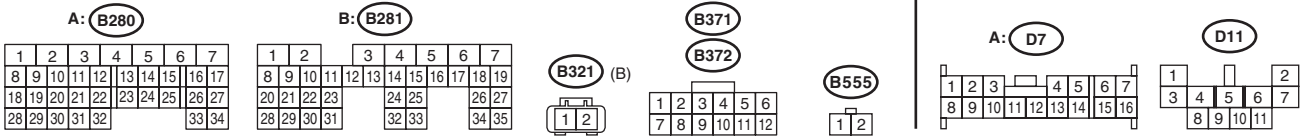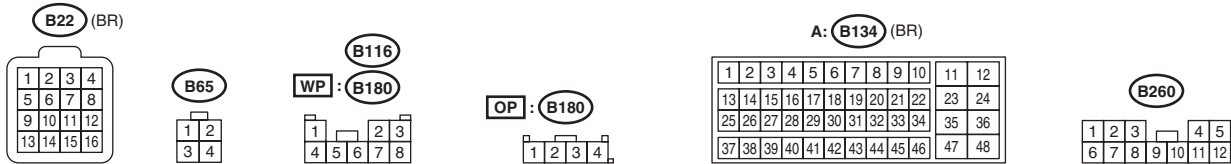

OP : WITHOUT PUSH BUTTON START

WP : WITH PUSH BUTTON START

WI-40937