


Tire Pressure Monitoring System

WIRING SYSTEM

57. Tire Pressure Monitoring System

A: WIRING DIAGRAM

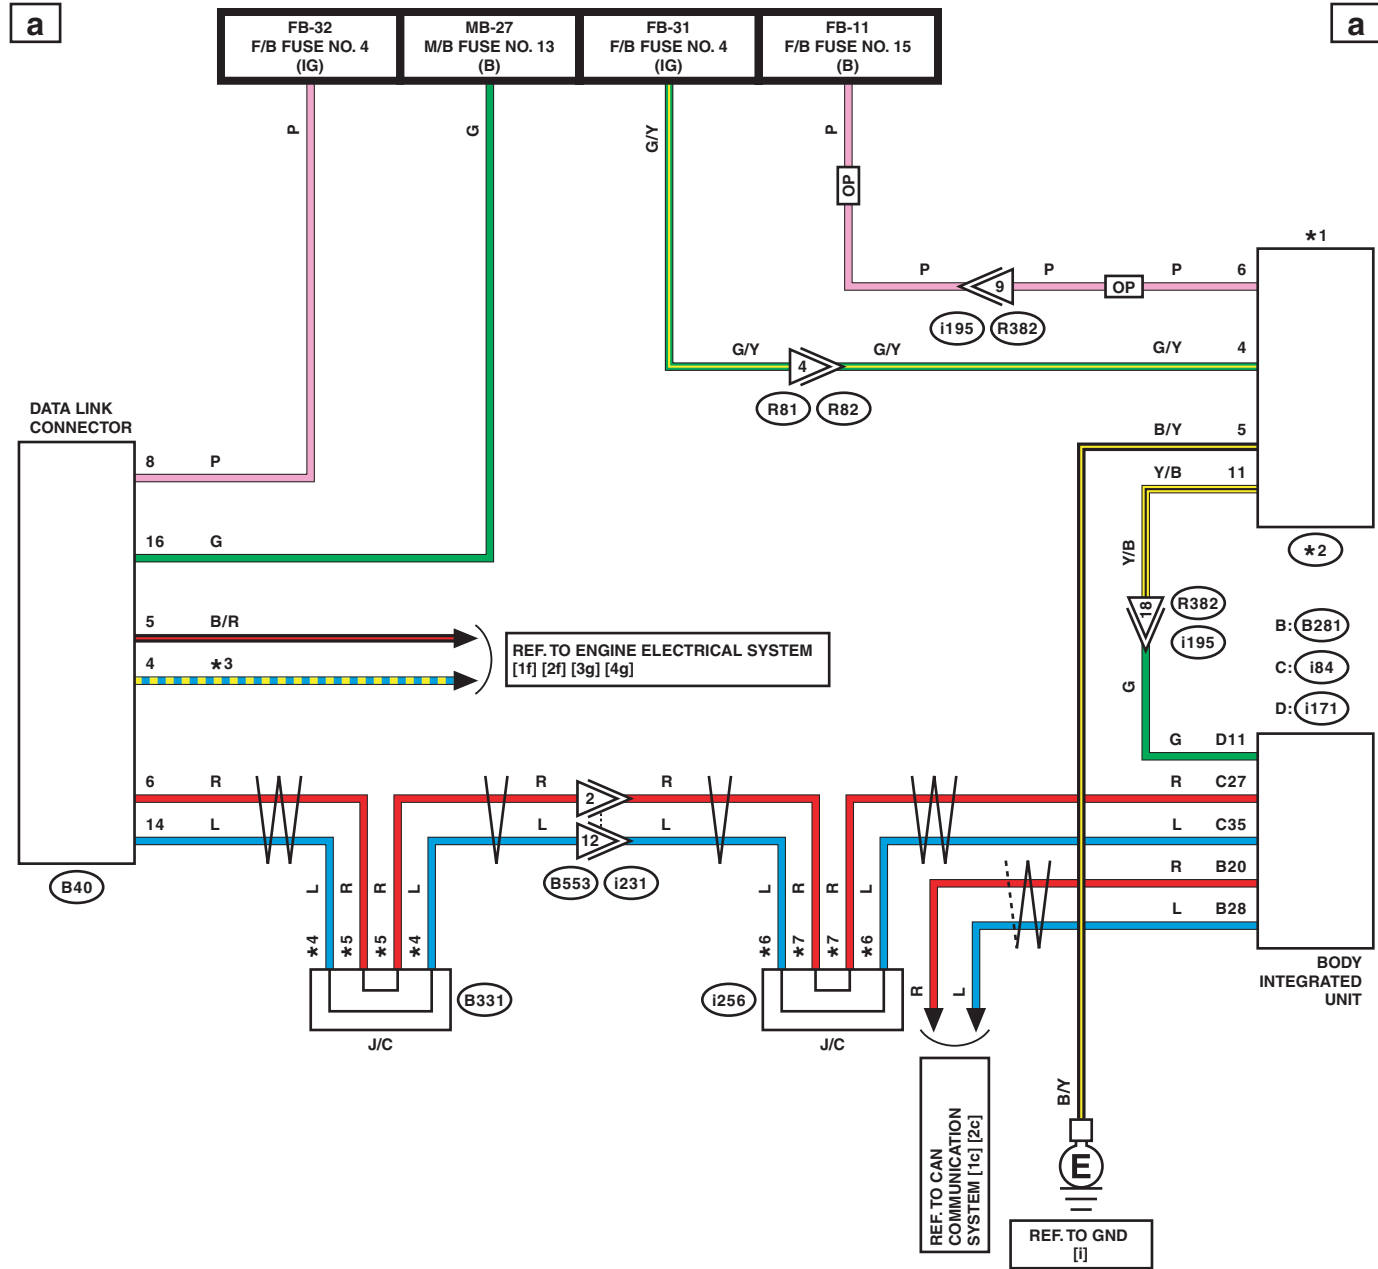

OP : WITHOUT PUSH BUTTON START

*1 : WITHOUT PUSH BUTTON START : TPMS & KEYLESS ENTRY CM
WITH PUSH BUTTON START : TPMS CM

*2 : WITHOUT PUSH BUTTON START : R221
WITH PUSH BUTTON START : R211

*3 : NON-TURBO MODEL : B/G
TURBO MODEL : B

*4 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 12, 13, 14, 15, 16, 17, 18, 19, 20, 21 AND 22

*5 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 4, 5, 6, 7, 8, 9, 10 AND 11

*6 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 4, 5, 9, 10, 11 AND 12

*7 : TERMINAL No. OPTIONAL ARRANGEMENT AMONG 1, 2, 3, 6, 7 AND 8

WI-45872

WIRING SYSTEM




Tire Pressure Monitoring System

WIRING SYSTEM

C

C

LIST OF CONNECTORS

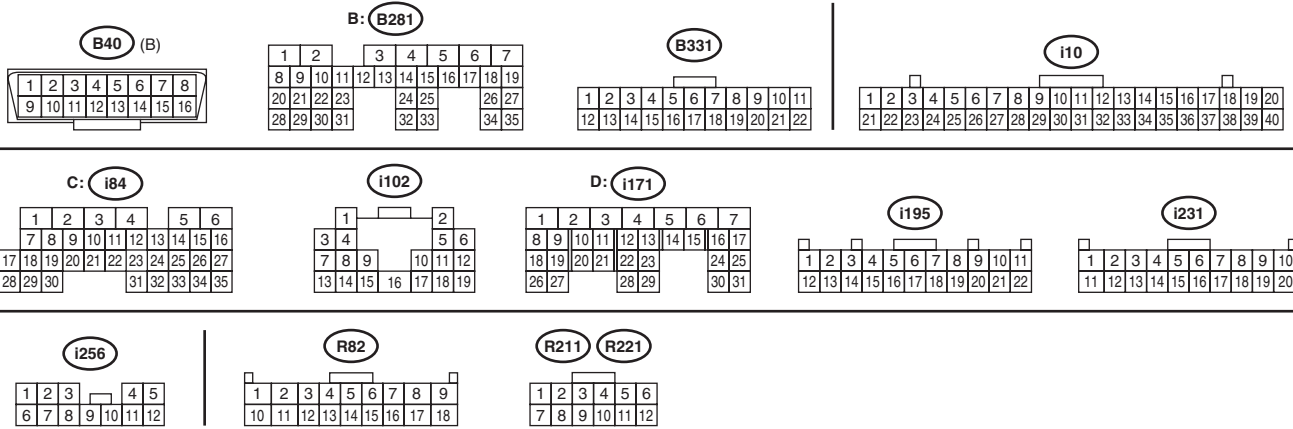

WI-45873