

## 64. Bulkhead Wiring Harness (In Engine Compartment) RH


## A: LOCATION

| Connector                  |      |       |      | Connecting to |                                                                   |
|----------------------------|------|-------|------|---------------|-------------------------------------------------------------------|
| No.                        | Pole | Color | Area | No.           | Description                                                       |
| B3                         | 5    | B     | B-2  |               | Mass air flow and intake air temperature sensor (non-turbo model) |
|                            | 5    | B     | B-1  |               | Mass air flow and intake air temperature sensor (turbo model)     |
| B6                         | 2    | GR    | B-3  |               | Front ABS wheel speed sensor RH                                   |
| B21                        | 54   | B     | B-4  | E2            | Engine wiring harness (non-turbo model)                           |
| B22                        | 16   | BR    | B-4  | E3            |                                                                   |
| B24                        | 2    | GR    | B-4  | T1            | Back-up light switch (MT model)                                   |
| B25                        | 2    | BR    | B-4  | T2            | Neutral position switch 1 (MT model)                              |
| B122                       | 8    | GR    | C-2  |               | J/C (turbo model)                                                 |
| B134                       | 48   | BR    | C-2  |               | ECM (turbo model)                                                 |
| B210                       | 13   | ★     | B-2  |               | Relay holder (turbo model)                                        |
| B310                       | 38   | ★     | B-2  |               | VDC CM                                                            |
| B321                       | 2    | B     | B-2  |               | Hood switch                                                       |
| B430                       | 2    | B     | A-3  |               | Puddle light RH                                                   |
| B450                       | 10   | B     | B-3  |               | Power steering CM                                                 |
| B451                       | 6    | GR    | B-3  |               | Torque sensor                                                     |
| B452                       | 2    | B     | B-3  |               | Power steering CM                                                 |
| ★ : White or natural color |      |       |      |               |                                                                   |

| Connector |      |       |      | Connecting to |                     |
|-----------|------|-------|------|---------------|---------------------|
| No.       | Pole | Color | Area | No.           | Description         |
| AB16      | 2    | Y     | B-1  |               | Front sub sensor RH |

# Bulkhead Wiring Harness (In Engine Compartment) RH

## WIRING SYSTEM

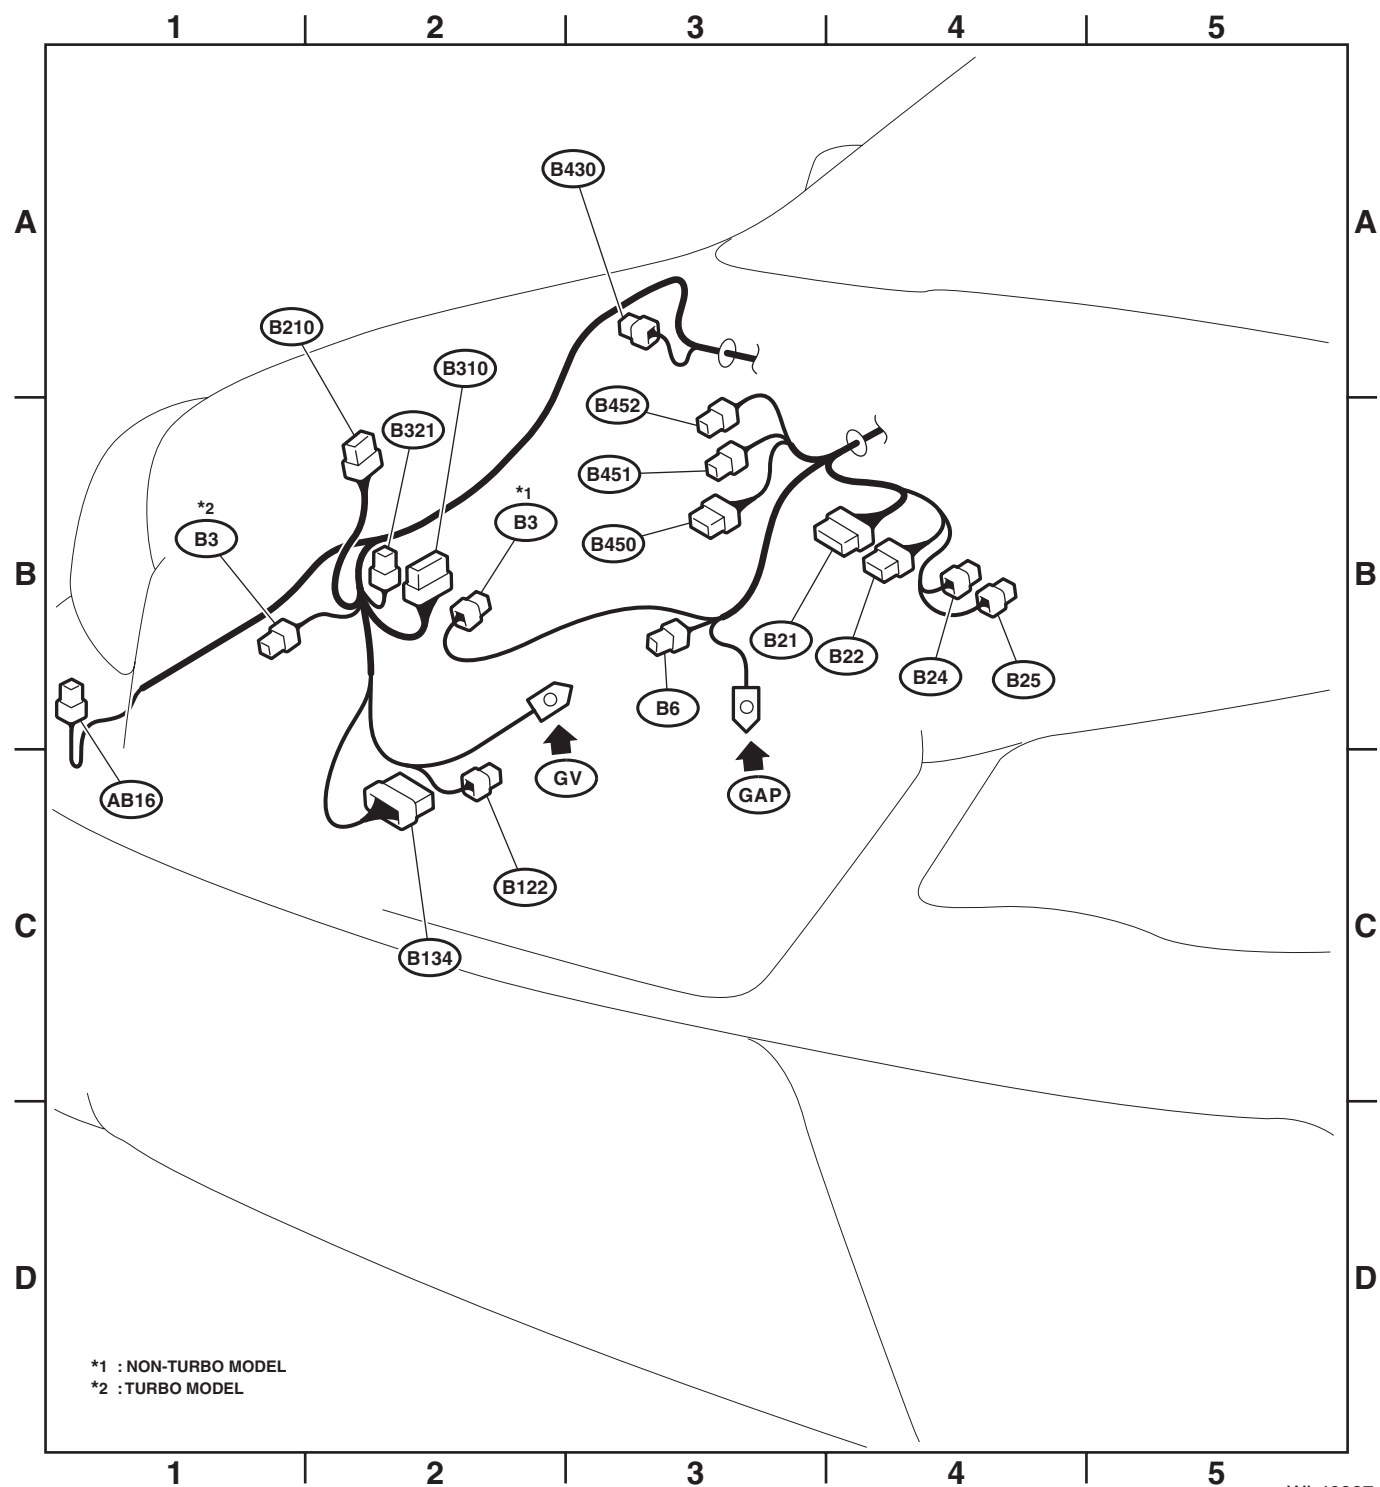

WI-40997