

67. Bulkhead Wiring Harness (In Compartment) LH

A: LOCATION

1. NON-TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B31	2	★	B-1	AB1	Airbag wiring harness
B32	8	★	B-1		Turn signal and hazard unit
B40	16	B	A-2		Data link connector
B41	2	L	B-1		Power window circuit breaker
B52	24	★	B-2		F/B
B54	26	G	A-3		TCM
B55	22	G	A-3		
B65	4	★	B-3		Stop light and brake switch
B68	14	★	C-2		Roll connector
B70	10	★	C-2		Combination switch
B71	20	★	C-2		
B72	8	★	B-3		Ignition switch (without push button start)
B77	6	★	C-3		Mode door actuator
B99	14	★	B-1	R3	Rear wiring harness
B101	11	B	C-1	D11	Front door cord LH
B106	2	★	B-3		Clutch start switch
B107	2	L	B-3		Clutch switch
B123	2	B	B-1	B124	Key lock (without push button start)
B124	2	B	B-1	B123	
B150	24	★	B-1		Auto headlight beam leveler CM
B152	10	GR	B-2		F/B
B158	8	★	B-2		
B159	9	BR	B-2		
B162	2	★	B-2		
B180	4	★	B-2		Remote engine start CM (without push button start)
	8	★	B-2		Remote engine start CM (with push button start)
B181	2	★	B-3	B182	Bulkhead wiring harness
B182	2	★	B-3	B181	
B225	44	★	A-2		Relay holder
B231	5	★	C-2		Steering angle sensor
B235	6	★	B-4		Air mix door actuator LH
B261	4	★	A-2		J/C
B280	34	★	A-2		Body integrated unit
B281	35	★	A-2		
B315	6	B	B-3		Accelerator pedal position sensor
B331	22	★	A-3		J/C
B367	8	★	B-2		Impact sensor
B371	12	★	A-3		J/C
B372	12	★	A-3		
B415	7	B	C-3		Immobilizer antenna (without push button start)
B422	5	★	A-5		ID code box
B424	7	B	B-2		Steering lock CM (with push button start)
B426	4	B	B-2		Accessory relay (push button start)
B475	4	★	B-2		Wiper relay unit

Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B550	26	★	B-1		Fuse holder
B552	18	★	B-1	i230	Instrument panel wiring harness
B553	20	★	C-1	i231	
B555	2	★	C-3		Key warning switch (without push button start)
B557	2	★	C-3		Key lock solenoid (without push button start)
B558	7	★	C-2		Combination switch
B559	5	★	A-5		Security CM
B572	18	★	B-2		Keyless access CM
B573	28	★	B-2		
B574	30	★	B-2		
B575	22	★	A-2	B576	Bulkhead wiring harness (with push button start)
B576	22	★	A-2	B575	
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	2	★	B-1	B31	Bulkhead wiring harness
AB2	4	Y	C-2	AB7	Driver's airbag module
AB66	2	B	C-1		Driver's knee airbag module
★ : White or natural color					

WIRING SYSTEM



Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

2. TURBO MODEL

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B31	2	★	B-1	AB1	Airbag wiring harness
B32	8	★	B-1		Turn signal and hazard unit
B40	16	B	A-2		Data link connector
B41	2	L	B-1		Power window circuit breaker
B52	24	★	B-2		F/B
B54	26	G	A-3		TCM
B55	22	G	A-3		
B65	4	★	B-3		Stop light and brake switch
B68	14	★	C-2		Roll connector
B70	10	★	C-2		Combination switch
B71	20	★	C-2		
B72	8	★	B-3		Ignition switch (without push button start)
B77	6	★	C-3		Mode door actuator
B99	14	★	B-1	R3	Rear wiring harness
B101	11	B	C-1	D11	Front door cord LH
B123	2	B	B-1	B124	Key lock (without push button start)
B124	2	B	B-1	B123	
B150	24	★	B-1		Auto headlight beam leveler CM
B152	10	GR	B-2		F/B
B158	8	★	B-2		
B159	9	BR	B-2		
B162	2	★	B-2		
B180	4	★	B-2		Remote engine start CM (without push button start)
	8	★	B-2		Remote engine start CM (with push button start)
B181	2	★	B-3	B182	Bulkhead wiring harness
B182	2	★	B-3	B181	
B225	44	★	A-2		Relay holder
B231	5	★	C-2		Steering angle sensor
B235	6	★	B-4		Air mix door actuator LH
B261	4	★	A-2		J/C
B280	34	★	A-2		Body integrated unit
B281	35	★	A-2		
B315	6	B	B-3		Accelerator pedal position sensor
B331	22	★	A-3		J/C
B367	8	★	B-2		Impact sensor
B371	12	★	A-3		J/C
B372	12	★	A-3		
B415	7	B	C-3		Immobilizer antenna (without push button start)
B422	5	★	A-5		ID code box
B424	7	B	B-2		Steering lock CM (with push button start)
B426	4	B	B-2		Accessory relay (push button start)
B475	4	★	B-2		Wiper relay unit
B550	26	★	B-1		Fuse holder
B552	18	★	B-1	i230	Instrument panel wiring harness
B553	20	★	C-1	i231	
B555	2	★	C-3		Key warning switch (without push button start)
B557	2	★	C-3		Key lock solenoid (without push button start)

Bulkhead Wiring Harness (In Compartment) LH

WIRING SYSTEM

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
B558	7	★	C-3		Combination switch
B559	5	★	A-5		Security CM
B572	18	★	B-2		Keyless access CM
B573	28	★	B-2		
B574	30	★	B-2		
B575	22	★	A-2	B576	Bulkhead wiring harness (with push button start)
B576	22	★	A-2	B575	
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB1	2	★	B-1	B31	Bulkhead wiring harness
AB2	4	Y	C-2	AB7	Driver's airbag module
AB66	2	B	C-2		Driver's knee airbag module
★ : White or natural color					

WIRING SYSTEM

