

73.Rear Wiring Harness LH


A: LOCATION

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
R3	14	★	C-2	B99	Bulkhead wiring harness
R4	1	B	C-3		Parking switch
R9	3	★	C-4		Front door switch LH
R10	8	★	C-4	D22	Rear door cord LH (without audio amplifier)
	10	★	C-4	D22	Rear door cord LH (with audio amplifier)
R41	4	★	C-4		Seat heater LH
R42	6	★	C-3		Seat heater switch LH
R81	18	★	C-2	R82	Rear wiring harness RH
R108	2	★	C-4		Seat belt switch LH
R110	2	B	C-4		Power seat LH
R123	2	★	D-3	AB62	Airbag wiring harness
R167	19	★	D-3	i102	Instrument panel wiring harness
R168	20	★	D-2		F/B
R315	12	★	C-3		Audio amplifier
R339	14	★	D-3	i2	Instrument panel wiring harness
★ : White or natural color					

Connector				Connecting to	
No.	Pole	Color	Area	No.	Description
AB17	24	Y	C-2		Airbag CM
AB19	4	Y	C-4		Side airbag module LH
AB21	2	B	C-4		Pretensioner LH
AB23	4	Y	C-4		Side airbag sensor LH
AB35	2	B	D-2		F/B

Rear Wiring Harness LH

WIRING SYSTEM

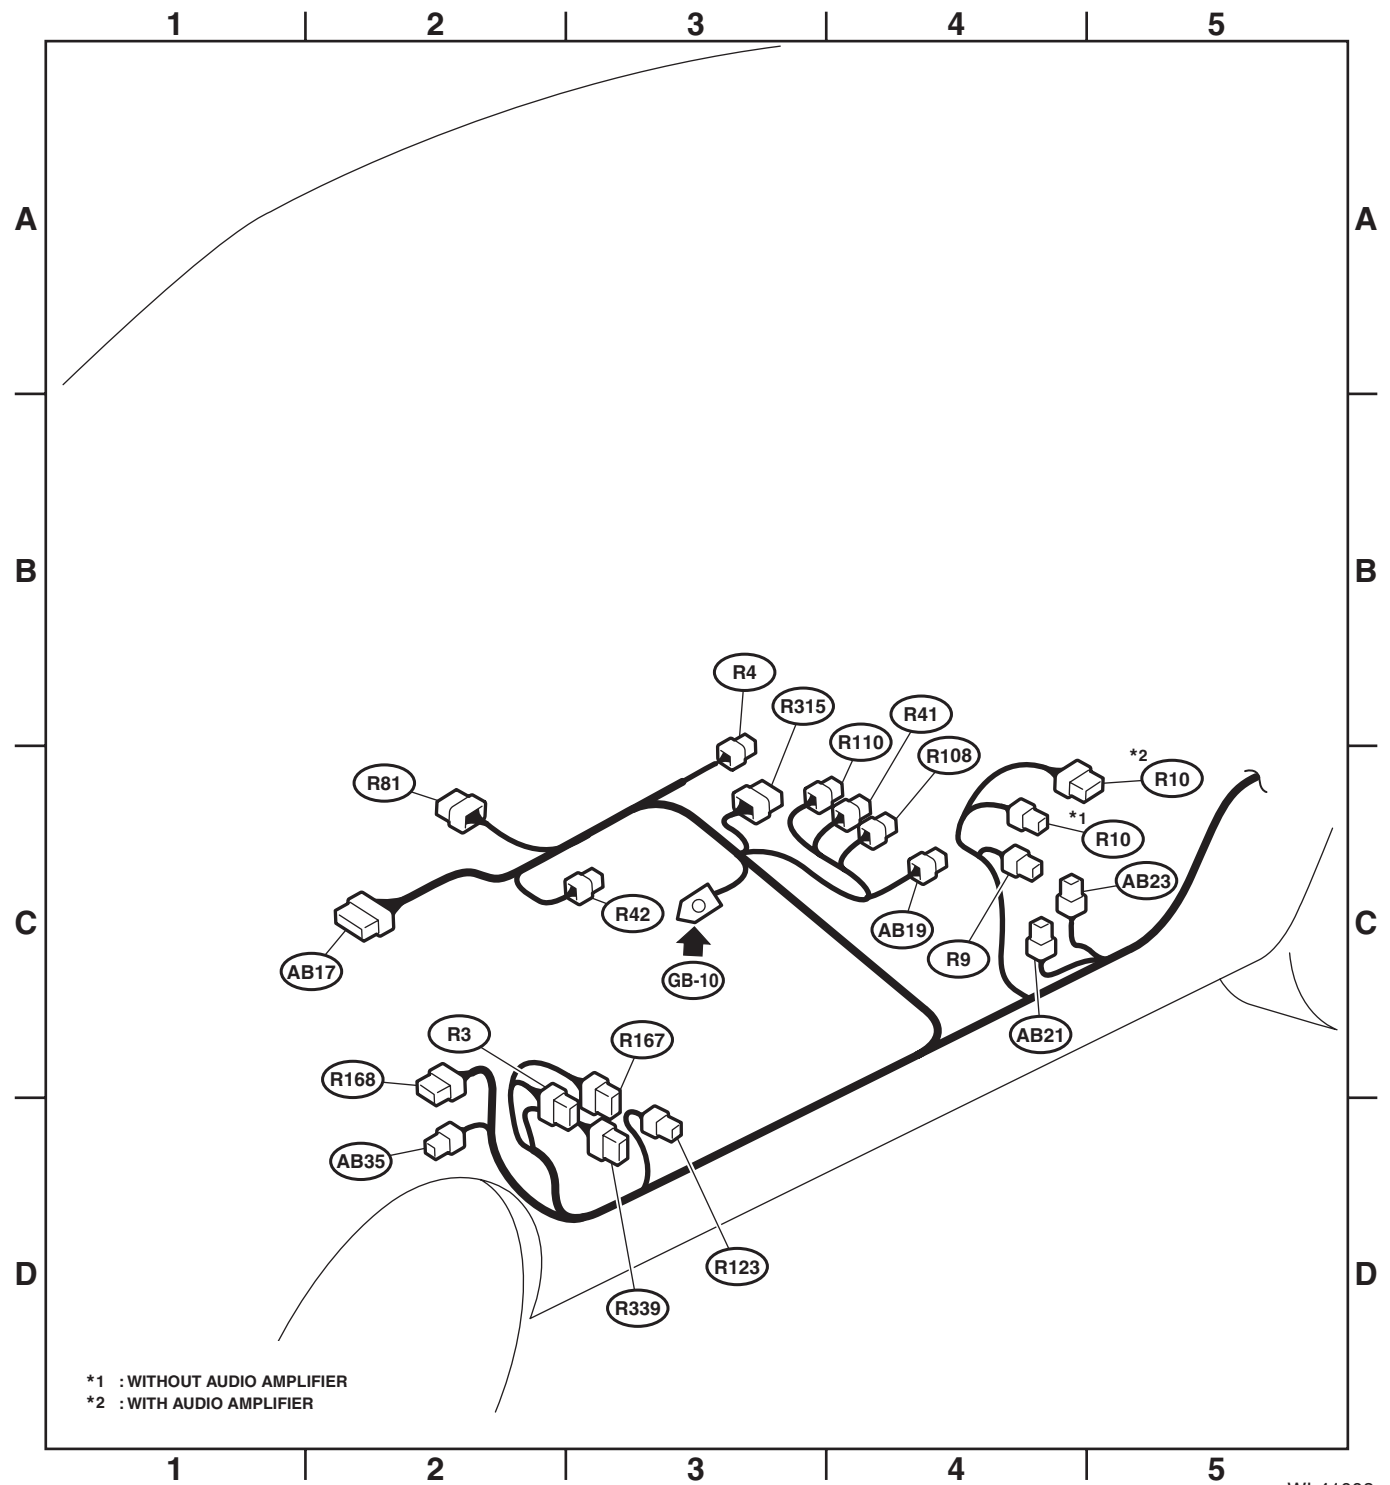

WI-41008