

1


1

QUICK GUIDE


BASIC FUNCTION

OVERVIEW BUTTONS

► Without navigation function

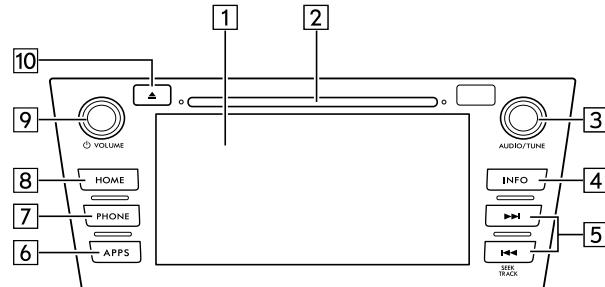

► With navigation function

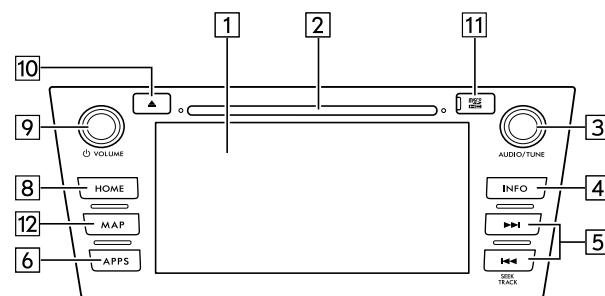

No.	Function	Page
1	By touching the screen with your finger, you can control the selected functions.	44, 46
2	Insert a disc into this slot. The CD player turns on immediately.	40
3	Turn the “AUDIO/TUNE” knob to select a radio station or skip to the next or previous track/file.	60, 69, 78, 81, 84, 87, 91, 156
4	Press the “AUDIO/TUNE” knob to access the audio/visual screen. The audio/visual system displays the “Select Audio Source (Select Audio Source)” screen or the last mode used.	55
	Press and hold the “AUDIO/TUNE” knob to display the split screen.	25
4	Select to display the “INFO (INFO)” screen.	24

No.	Function	Page
5	Select or to seek up or down for a radio station or to access a desired track/file. Press and hold or to continuously seek for a radio station, or to fast forward/rewind files or tracks.	60, 69, 78, 81, 84, 87, 91, 156, 162
6	Select to display the “APPS (APPS)” screen.	23
7 ^{*1}	Select to access the Bluetooth hands-free system.	116
8	Select to display the “HOME (HOME)” screen.	22
9	Press the “POWER/VOLUME” knob to turn the audio system on and off, and turn it to adjust the volume. Press and hold to turn the screen off.	54
10	Press to eject a disc.	41

No.	Function	Page
11 ^{*2 *3}	microSD card slot ^{*4} Open the cover and insert an SD card into this slot.	42
12 ^{*2 *3}	Select to display the navigation screen (while the map SD card is inserted).	198

*1: Without navigation function


*2: With navigation function

*3: An “Unable to read the map SD data. Check the map SD. If necessary, consult your dealer.” message appears if the map SD card is not inserted, or if an SD card containing no map data is inserted.

*4: In this manual, microSD card is now referred to as SD card.

“HOME (HOME)” SCREEN

Select **HOME** to display the “HOME (HOME)” screen.

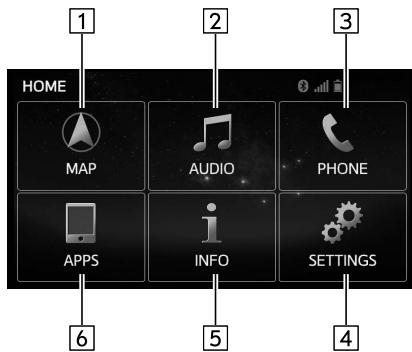


No.	Function	Page
1*	Select to display the map screen.	198
2	Select to display the audio control screen.	55
3	Select to display the hands-free operation screen.	116
4	Select to display the “SETTINGS (SETTINGS)” screen.	28
5	Select to display the “INFO (INFO)” screen.	24
6	Select to display the “APPS (APPS)” screen.	23

*: With navigation function

“APPS (APPS)” SCREEN

Select **APPS**, or select **HOME** and then select **APPS** (APPS), to display the “APPS (APPS)” screen.

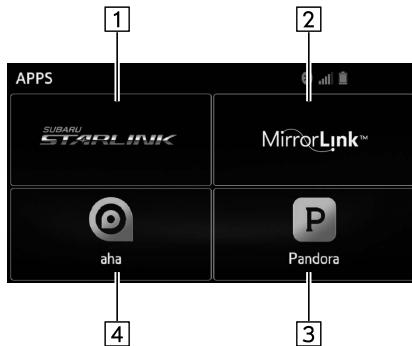


No.	Function	Page
1	Select to display the “SUBARU STARLINK disclaimer (SUBARU STARLINK disclaimer)” screen.	153
2	Select to display the “MirrorLink™ (MirrorLink™)” screen.	154
3	Select to display the “Pandora (Pandora)*” screen.	162
4	Select to display the “aha (aha)” screen.	156

*: Pandora is a registered trademark of Pandora Media, Inc.
Pandora is available in the United States, Australia, and New Zealand.

“INFO (INFO)” SCREEN

This screen can be used to display sports information and photos, etc.

Select **INFO**, or select **HOME** and then select **INFO** (INFO), to display the “INFO (INFO)” screen.

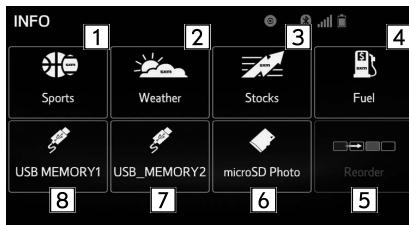

No.	Function	Page
1	Select to display sports information.	166
2	Select to display weather information.	167
3	Select to display stocks information.	171
4 ^{*1}	Select to display fuel information.	172
5	Select to reorder the menu icons.	46
6 ^{*2}	Select to view pictures in the SD card.	87
7	Select to view pictures in the USB memory connected to USB port 2.	81
8	Select to view pictures in the USB memory connected to USB port 1.	81

*1: Service is not available in Canada.

*2: With navigation function

SPLIT SCREEN


Press and hold the “AUDIO/TUNE” knob, to display the split screen.

The split screen can display two information screens simultaneously, such as the audio system screen and hands-free screen or the hands-free screen and navigation* screen. When hands-free mode is selected, it is possible to make a call on the home screen if the desired telephone number is registered to one of the 4 displayed buttons. In order to register the contact, select and hold the desired button and register the desired contact by obey displayed messages on the screen. (→P.126)

*: With navigation function

When a screen is selected, the selected screen is switched to a full-screen display. The split screen can be set to a two-way split screen.


For details about setting the split screen: →P.47

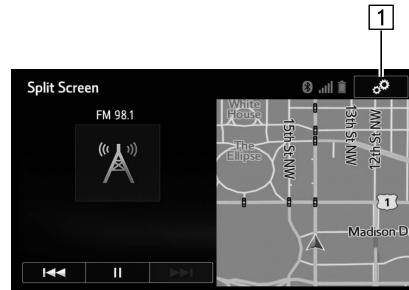

No.	Function	Page
1	Select to display the “Customize Split Screen (Customize Split Screen)” screen.	47

STATUS DISPLAY

The status of the Bluetooth connection and so on is displayed on the screen.

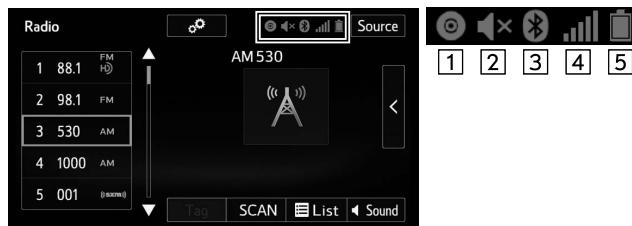

No.	Indicators	Conditions
1	Ⓐ	This icon is displayed when a disc has been inserted.
2	🔇	This icon is displayed when audio is off or the ⏎ steering switch is pressed.


No.	Indicators	Conditions
3	Bluetooth icon	<p>This icon is displayed when the Bluetooth connection is established.</p> <p>An antenna for the Bluetooth connection is built into the instrument panel. The condition of the Bluetooth connection may deteriorate and the system may not function when a Bluetooth device is used in the following conditions and/or places:</p> <ul style="list-style-type: none"> The Bluetooth device is obstructed by certain objects (such as when it is behind the seat or in the glove box or console box). The Bluetooth device is touching or is covered with metal materials. Leave the Bluetooth device in a place where the condition of the Bluetooth connection is good.
4	The level of reception	<p>The level of reception does not always correspond with the level displayed on the cellular phone. The level of reception may not be displayed depending on the phone you have.</p> <p>“Rm” is displayed when receiving in a roaming area. While roaming, display “Rm” top-left on the icon.</p> <p>The receiving area may not be displayed depending on the type of phone you have.</p>

No.	Indicators	Conditions
5	The amount of battery charge left	 Low  Full The amount displayed does not always correspond with the amount displayed on the Bluetooth device. The amount of battery charge left may not be displayed depending on the type of the Bluetooth device connected.

QUICK REFERENCE

“SETTINGS (SETTINGS)” SCREEN

The items shown on the “SETTINGS (SETTINGS)” screen can be set. Select **HOME** and then select **SETTINGS** (SETTINGS) to display the “SETTINGS (SETTINGS)” screen.

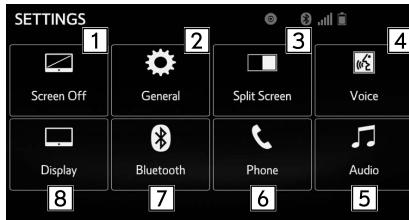


No.	Function	Page
1	Select to turn the screen off.	-
2	Select to change the selected language, operation sound, automatic screen change settings, etc.	190
3	Select to customize the split screen.	47
4	Select to specify voice settings.	196
5	Select to specify audio settings.	99
6	Select to specify phone sound, contacts, message settings, etc.	136
7	Select to set Bluetooth phones and Bluetooth audio devices.	181
8	Select to adjust the brightness, contrast, tone and color of the screens.	50


NAVIGATION OPERATION

REGISTERING HOME (WITH NAVIGATION FUNCTION)

1. Select **MAP**, or select **HOME** and then select **MAP** (MAP).

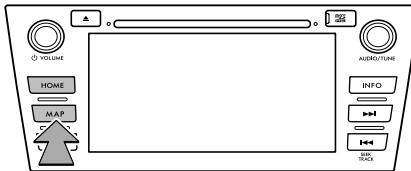


2. Select **Menu** (Menu).

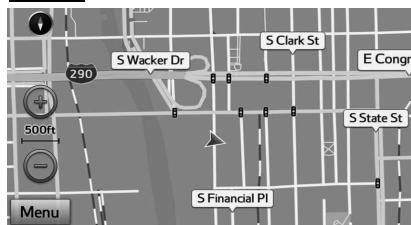


3. Select **Destination** (Destination).




4. Select **Go Home** (Go Home).

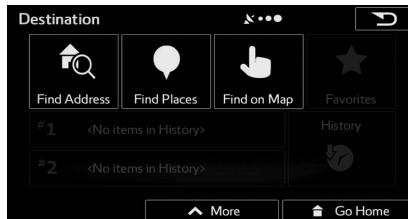

5. Select **Yes** (Yes).

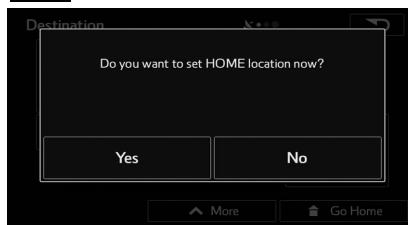


6. Select **Find on Map** (Find on Map).

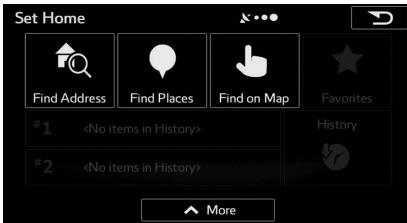

7. Select **Select** (Select).



8. Select **OK** (OK).

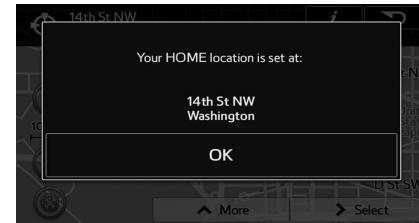

- Registration of home is complete.

► **Registering home in a different way**


→ P.234

► **Setting home as the destination**


→ P.32

OPERATION FLOW: GUIDING THE ROUTE (WITH NAVIGATION FUNCTION)


1. Select **MAP**, or select **HOME** and then select **MAP** (MAP).

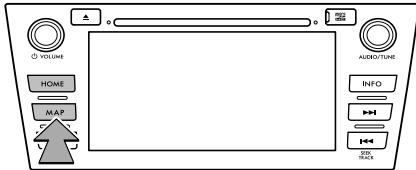


2. Select **Menu** (Menu).

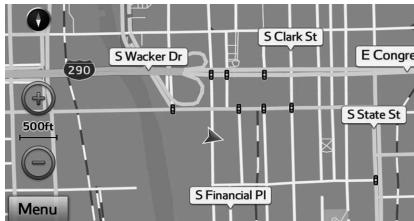

3. Select **Destination** (Destination).

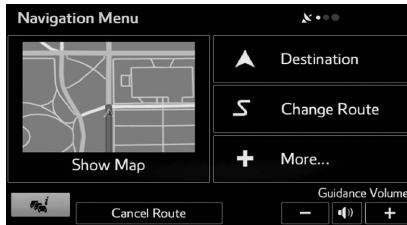

4. There are different kinds of methods to search for a destination. (→P.207)

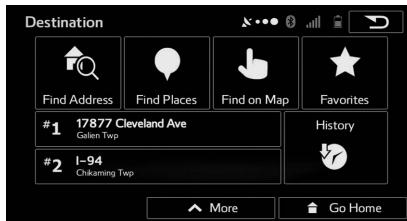

5. Select **Next** (Next).




6. Select **Go! (Go!).**


- Guidance to the destination is displayed on the screen and can be heard via voice guidance.

SETTING HOME AS THE DESTINATION (WITH NAVIGATION FUNCTION)

1. Select **MAP, or select **HOME** and then select **MAP** (MAP).**

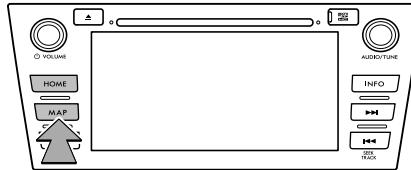


2. Select **Menu (Menu).**

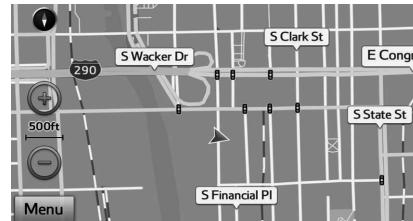

3. Select **Destination** (Destination).



4. Select **Go Home** (Go Home).

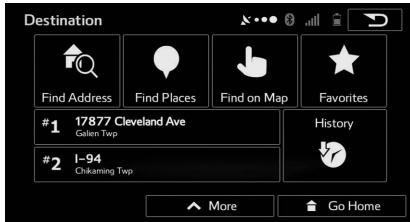

5. Select **Next** (Next).

6. Select **Go!** (Go!).

- Guidance to the destination is displayed on the screen and can be heard via voice guidance.

FUNCTION INDEX

FUNCTION INDEX

► Audio

Function	Page
Using the radio	60, 69
Playing an audio CD or MP3/WMA/AAC disc	78
Playing an SD* ¹ card	87
Playing a USB memory	81
Playing an iPod®	84
Playing a Bluetooth device	91
Using the aha application	156
Using the AUX port	94
Using the MirrorLink™ application	154
Using the Pandora®* ² application	162
Using the steering wheel audio switches	96
Audio system settings	99

*¹: With navigation function

*²: Pandora is available in the United States, Australia, and New Zealand.

► Map*

*: With navigation function

Displaying maps	Page
Viewing the map screen	198
Displaying the current position	203
Changing the scale	204
Changing the map orientation	205
Displaying the estimated travel/arrival time to the destination	222
Displaying traffic information	206
Searching for destinations	Page
Searching for the destination	208

►Route guidance*

*: With navigation function

Before starting or during route guidance	Page
Starting route guide	219
Editing the route	227
Viewing the entire route map	223
Adjusting route guidance volume	196
Deleting the destination	228

►Useful functions

Hands-free system (for cellular phone)	Page
Registering/connecting Bluetooth phone	176
Making a call on a Bluetooth phone	121
Receiving a call on the Bluetooth phone	126

Voice recognition system	Page
Operating the system with your voice	251

MEMO