

4

4

PHONE

PHONE OPERATION (HANDS-FREE SYSTEM FOR CELLULAR PHONES)

QUICK REFERENCE

The phone top screen can be used to make a phone call. To display the hands-free operation screen, select **HOME** and then select **PHONE** (PHONE), select **PHONE** *, or press the  switch on the steering wheel.

Several functions are available to operate on each screen that is displayed by selecting the 4 tabs.

*: Without navigation function



	Function	Page
Phone operation	Registering/connecting Bluetooth phone	176
	Calling on the Bluetooth phone	121
	Receiving on the Bluetooth phone	126
	Talking on the Bluetooth phone	127
Message function	Using the Bluetooth phone message function	130
Setting up a phone	Phone settings	136
	Bluetooth settings	181

SOME BASICS

The hands-free system enables calls to be made and received without having to take your hands off the steering wheel.

This system supports Bluetooth. Bluetooth is a wireless data system that enables cellular phones to be used without being connected by a cable or placed in a cradle.

The operating procedure of the phone is explained here.

! WARNING

- While driving, do not use a cellular phone or connect the Bluetooth phone.
- Your audio unit is fitted with Bluetooth antennas. People with implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should maintain a reasonable distance between themselves and the Bluetooth antennas. The radio waves may affect the operation of such devices.
- Before using Bluetooth devices, users of any electrical medical device other than implantable cardiac pacemakers, cardiac resynchronization therapy-pacemakers or implantable cardioverter defibrillators should consult the manufacturer of the device for information about its operation under the influence of radio waves. Radio waves could have unexpected effects on the operation of such medical devices.

! CAUTION

- Do not leave your cellular phone in the vehicle. The temperature inside may rise to a level that could damage the phone.

NOTE

- If your cellular phone does not support Bluetooth, this system cannot function. Certain functions may not be available depending on the type of cellular phone.
- In the following conditions, the system may not function:
 - The cellular phone is turned off.
 - The current position is outside the communication area.
 - The cellular phone is not connected.
 - The cellular phone has a low battery.
- When using the hands-free function and other Bluetooth functions at the same time, the following problems may occur:
 - The Bluetooth connection may be cut.
 - Noise may be heard when playing back voice with the Bluetooth function.
- The other party's voice will be heard from the front speakers. The audio/visual system will be muted during phone calls or when hands-free voice commands are used.
- Talk alternately with the other party on the phone. If both parties speak at the same time, the other party may not hear what has been said. (This is not a malfunction.)

NOTE

- Keep call volume down. Otherwise, the other party's voice may be audible outside the vehicle and voice echo may increase. When talking on the phone, speak clearly towards the microphone.
- The other party may not hear you clearly when:
 - Driving on an unpaved road. (Making excessive traffic noise.)
 - Driving at high speeds.
 - Driving with a window open.
 - When air from the ventilator blows directly toward the microphone.
 - The sound of the air conditioning fan is loud.
 - There is a negative effect on sound quality due to the phone and/or network being used.

REGISTERING/CONNECTING A Bluetooth PHONE

To use the hands-free system for cellular phones, it is necessary to register a cellular phone with the system.
(→P.176)


Bluetooth PHONE CONDITION DISPLAY

The condition of the Bluetooth phone appears on the upper right side of the screen. (→P.26)


USING THE PHONE SWITCH/MICROPHONE**► Steering switch**

By pressing the phone switch, a call can be received or ended without taking your hands off the steering wheel.

- Type A

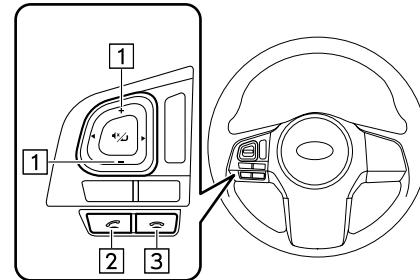

- Type B

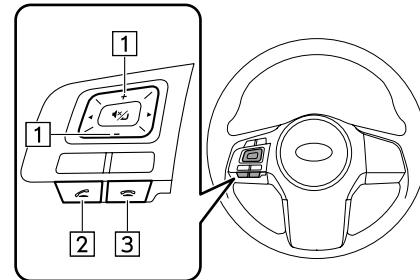

1 Volume control switch



- Press the “+” side to increase the volume.
- Press the “-” side to decrease the volume.

2 Off hook switch**3** On hook switch**►Microphone**

The microphone is built into the map light slits.

VOICE RECOGNITION SYSTEM

Press this switch to operate the voice recognition system.

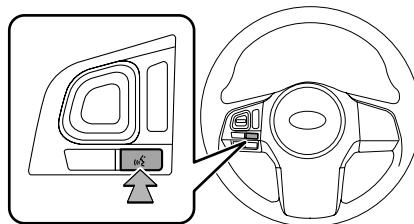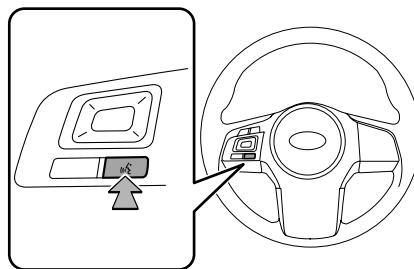►Type A**►Type B**

- The voice recognition system and its list of commands can be operated. (→P.252)

ABOUT THE CONTACTS IN THE CONTACT LIST

- The following data is stored for every registered phone. When another phone is connected, the following registered data cannot be read:
 - Contact data
 - Call history data
 - Speed dial data
 - Image data
 - All phone settings
 - Message settings

NOTE

- When a phone's registration is deleted, the above-mentioned data is also deleted.

WHEN SELLING OR DISPOSING OF THE VEHICLE

A lot of personal data is registered when the hands-free system is used. When selling or disposing of the vehicle, initialize the data. (→P.195)

- The following data in the system can be initialized:
 - Contact data
 - Call history data
 - Speed dial data
 - Image data
 - All phone settings
 - Message settings

NOTE


- Once initialized, the data and settings will be erased. Pay close attention when initializing the data.

CALLING ON THE Bluetooth PHONE

After a Bluetooth phone has been registered, a call can be made using the hands-free system. There are several methods by which a call can be made, as described below.

►Without navigation function


1. Select **PHONE**.

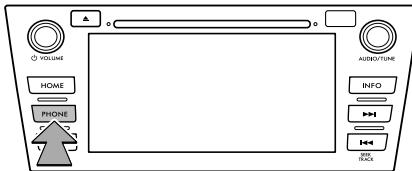


2. Select the desired tab to call from.

►With navigation function

1. Select **HOME**.

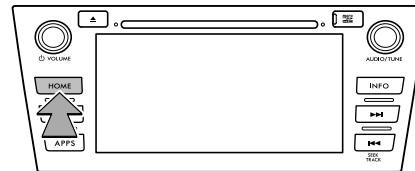

2. Select **PHONE** (PHONE).
3. Select the desired tab to call from.

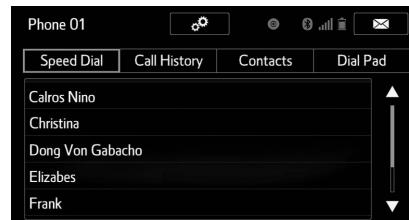

- The phone top screen can be displayed by pressing the  switch on the steering wheel.

How to make a call list	Page
By speed dial list	122
By call history	123
By contacts list	124
By dial pad* ¹	125
By e-mail/SMS/MMS	134
By POI call* ²	199
By off hook switch	125
By voice recognition system	254
By split screen	126


*¹: The operation cannot be performed while driving.

*²: With navigation function

BY SPEED DIAL LIST

Calls can be made using registered contacts which can be selected from a contact list. (→P.143)

1. Display the phone top screen. (→P.121)
2. Select the **Speed Dial** (Speed Dial) tab and then select the desired contact.

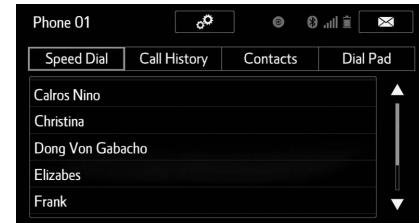

3. Select the desired number.
4. Check that the "Call (Call)" screen is displayed.

BY CALL HISTORY

Up to 30 of the latest call history items (missed, incoming and outgoing) can be selected from the **Call History** (Call History) tab.

1. Display the phone top screen. (→P.121)
2. Select the **Call History** (Call History) tab and then select  or the desired contact.



- The icons of call type are displayed.

-  : Missed call
-  : Incoming call
-  : Outgoing call

► When is selected

3. Check that the "Call (Call)" screen is displayed.

► When the desired contact is selected

3. Select  corresponding to the desired number to call.
4. Check that the "Call (Call)" screen is displayed.

NOTE


- When making a call to the same number continuously, only the most recent call is listed in call history.
- When a phone number registered in the contact list is received, the name is displayed.
- International phone calls may not be made depending on the type of cellular phone you have.
- The list should group together consecutive entries with the same phone number and same call type. For example, two calls from Kay Rowles's mobile would be displayed as follows: Kay Rowles (2)

BY CONTACTS LIST

Calls can be made by using contact data which is transferred from a registered cellular phone. (→P.124)

Up to 2500 contacts (maximum of 4 phone numbers and e-mail addresses per contact) can be registered in the contact list.

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts) tab and then select the desired contact.

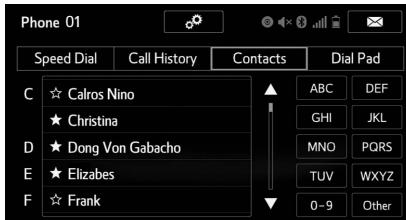

3. Select the desired number.
4. Check that the "Call (Call)" screen is displayed.

WHEN THE CONTACT IS EMPTY

■ FOR PBAP COMPATIBLE Bluetooth PHONES

When "Automatic Contact/History Transfer (Automatic Contact/History Transfer)" is set to on, contacts are transferred automatically. (→P.138)

■ FOR OPP COMPATIBLE Bluetooth PHONES


Contacts can be transferred or added manually.

To transfer, select **Update Contacts from Phone** (Update Contacts from Phone) at the "Contact/Call History Settings (Contact/Call History Settings)" screen. (→P.140)

To add, select **New Contact** (New Contact) at the "Contact/Call History Settings (Contact/Call History Settings)" screen. (→P.140)

BY DIAL PAD

1. Display the phone top screen. (→P.121)
2. Select the **Dial Pad** (Dial Pad) tab and enter the phone number.

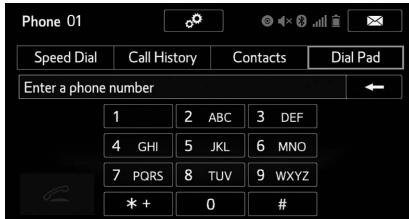

3. Select or press the switch on the steering wheel.
4. Check that the "Call (Call)" screen is displayed.

NOTE

- Depending on the type of Bluetooth phone being connected, it may be necessary to perform additional steps on the phone.

BY OFF HOOK SWITCH

Calls can be made using the latest call history item.


1. Press the switch on the steering wheel to display the phone top screen.
2. Press the switch on the steering wheel to display the "Call History (Call History)" screen.
3. Press the switch on the steering wheel to call the latest history item.
4. Check that the "Call (Call)" screen is displayed.

4

PHONE

BY SPLIT SCREEN

1. Display the split screen. (→P.47)

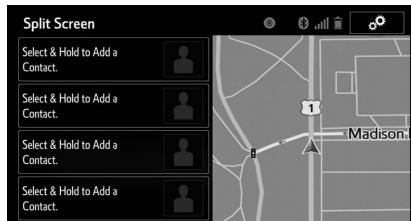

2. Select the desired contact.

REGISTERING A NEW CONTACT


1. Select and hold the screen button to add a contact.
2. Select the desired contact.
3. Select the desired number.

RECEIVING ON THE Bluetooth PHONE

INCOMING CALLS

When a call is received, the incoming call screen is displayed with a sound.

1. Select  or press the  switch on the steering wheel to talk on the phone.

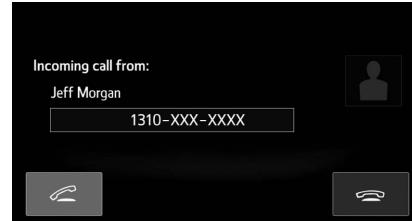

To refuse to receive the call: Select  or press the  switch on the steering wheel.

To put on hold: Select and hold , or press and hold the  switch on the steering wheel.

To adjust the volume of a received call: Turn the “POWER/VOLUME” knob, or use the volume control switch on the steering wheel.

NOTE

- During international phone calls, the other party's name or number may not be displayed correctly depending on the type of cellular phone you have.
- The incoming call display mode can be set. (→P.146)
- The ringtone that has been set in the "Sound Settings (Sound Settings)" screen sounds when there is an incoming call. Depending on the type of Bluetooth phone, both the system and Bluetooth phone may sound simultaneously when there is an incoming call. (→P.137)

TALKING ON THE Bluetooth PHONE

While talking on the phone, this screen is displayed. The operations outlined below can be performed on this screen.



No.	Function	Page
1	Select to display the dial pad to send tones.	125
2	Select to mute your voice to the other party.	-
3	Select to change handset modes between hands-free and cellular phone.	-
4	Select to adjust your voice volume that the other party hears from their speaker.	129

No.	Function	Page
5	Select to send tones. This button only appears when a number that contains a (w) is dialed in hands-free mode.	128
6	Select to hang up the phone.	-
7	Select - or + to adjust the volume of the other party's voice.	-
8	Select to start talking with the other party.	129

NOTE


- When cellular phone call is changed to hands-free call, the hands-free screen will be displayed and its functions can be operated on the screen.
- Changing between cellular phone call and hands-free call can be performed by operating the cellular phone directly.
- Transferring methods and operations will be different depending on the type of cellular phone you have.
- For the operation of the cellular phone, see the manual that comes with it.
- Turn the “**POWER/VOLUME**” knob, or use the volume control switch on the steering wheel to adjust the volume of the other party's voice.

SENDING TONES

BY DIAL PAD

This operation cannot be performed while driving.

1. Select **Dial Pad** (Dial Pad).

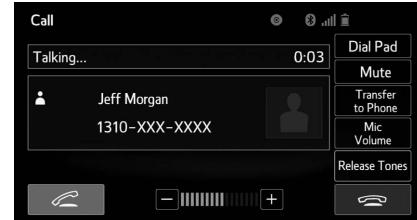

2. Enter the desired number.

BY SELECTING **Release Tones** (Release Tones)

Release Tones (Release Tones) appears when a continuous tone signal(s) containing a (w) is registered in the contact list.

This operation can be performed while driving.


1. Select **Release Tones** (Release Tones).

NOTE

- A continuous tone signal is a character string that consists of numbers and the characters "p" or "w". (e.g. 056133w0123p#1*)
- When the "p" pause tone is used, the tone data up until the next pause tone will be automatically sent after 2 seconds have elapsed. When the "w" pause tone is used, the tone data up until the next pause tone will be automatically sent after a user operation is performed.
- Release tones can be used when automated operation of a phone based service such as an answering machine or bank phone service is desired. A phone number with continuous tone signals can be registered in the contact list.
- Tone data after a "w" pause tone can be operated on voice command during a call.

TRANSMIT VOLUME SETTING

1. Select **Mic Volume** (Mic Volume).
2. Select the desired level for the transmit volume.

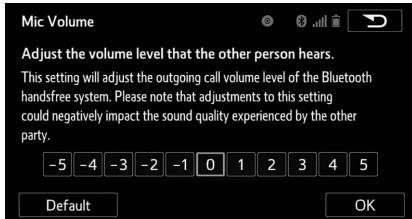

3. Select **OK** (OK).


NOTE

- The sound quality of the voice heard from the other party's speaker may be negatively impacted.
- To reset the transmit volume, select **Default** (Default).
- The volume cannot be adjusted while muted.

INCOMING CALL WAITING

When a call is interrupted by a third party while talking, this screen is displayed.

1. Select or press the switch on the steering wheel to start talking with the other party.

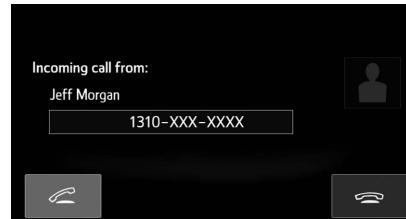

To refuse to receive the call: Select or press the switch on the steering wheel.

- Select or press the switch on the steering wheel to end the current call and return to the conversation with the party on hold.

Bluetooth PHONE MESSAGE FUNCTION


Received messages can be forwarded from the connected Bluetooth phone, enabling checking and replying using the system.

Depending on the type of Bluetooth phone connected, received messages may not be transferred to the message inbox.

If the phone does not support the message function, this function cannot be used.

►Without navigation function

1. Select **PHONE**.

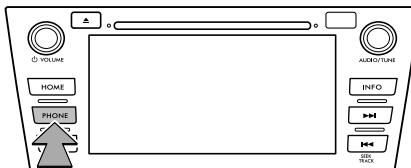


2. Select **✉**.

- The phone top screen can be displayed by pressing the  switch on the steering wheel.

3. Check that the message inbox screen is displayed.

►With navigation function

1. Select **HOME**.

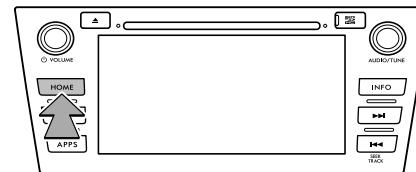

2. Select **PHONE** (PHONE).

3. Select **✉**.

- The phone top screen can be displayed by pressing the  switch on the steering wheel.

4. Check that the message inbox screen is displayed.



- : Select to change to phone mode.

Function	Page
Receiving a message	131
Checking messages	132
Replying to a message (quick reply)	133
Calling the message sender	134
Message settings	145

RECEIVING A MESSAGE

When an e-mail/SMS/MMS is received, the incoming message screen pops up with sound and is ready to be operated on the screen.



No.	Function
1	Select to check the message.
2	Select to not open the message.
3	Select to call the message sender.

NOTE

- Depending on the cellular phone used for receiving messages, or its registration status with the system, some information may not be displayed.

NOTE

- The pop up screen is separately available for incoming e-mail and SMS/MMS messages under the following conditions:
 - “Incoming E-mail Display (Incoming E-mail Display)” is set to “Full Screen (Full Screen)”. (→P.145)
 - “E-mail Notification Popup (E-mail Notification Popup)” is set to on. (→P.145)
 - “Incoming SMS/MMS Display (Incoming SMS/MMS Display)” is set to “Full Screen (Full Screen)”. (→P.145)
 - “SMS/MMS Notification Popup (SMS/MMS Notification Popup)” is set to on. (→P.145)

CHECKING MESSAGES

1. Display the message inbox screen. (→P.130)
2. Select the desired message from the list.
3. Check that the message is displayed.



No.	Function
1*	Select Mark Unread (Mark Unread) or Mark Read (Mark Read) to mark mail unread or read on the message inbox screen. This function is available when “Update Message Read Status on Phone (Update Message Read Status on Phone)” is set to on. (→P.145)
2	Select to reply the message. (→P.133)
3	Select to display the previous or next message.
4	Select to have messages read out. To cancel this function, select Stop (Stop). When “Automatic Message Readout (Automatic Message Readout)” is set to on, messages will be automatically read out. (→P.145)
5	Select to make a call to the sender.

*: E-mail only

NOTE

- Depending on the type of Bluetooth phone being connected, it may be necessary to perform additional steps on the phone.
- Messages are displayed in the appropriate connected Bluetooth phone's registered mail address folder. Select the tab of the desired folder to be displayed.
- Only received messages on the connected Bluetooth phone can be displayed.

NOTE

- The text of the message is not displayed while driving.
- Turn the “**POWER/VOLUME**” knob, or use the volume control switch on the steering wheel to adjust the message readout volume.

REPLYING TO A MESSAGE (QUICK REPLY)

15 messages have already been stored.

1. Display the message inbox screen. (→P.130)
2. Select the desired message from the list.
3. Select **Quick Message** (Quick Message).



4. Select the desired message.
5. Select **Send** (Send).
 - While the message is being sent, a sending message screen is displayed.

EDITING QUICK REPLY MESSAGES

This operation cannot be performed while driving.

1. Select **Quick Message** (Quick Message).



2. Select corresponding to the desired message to edit.
3. Select **OK** (OK) when editing is completed.

NOTE

- To reset the editquick reply messages, select **Default** (Default).

NOTE

- “Quick Message 1” (I’m driving right now. I will call you back later.)
(I’m driving right now. I will call you back later.)*¹ or
I am driving and will arrive in approximately [ETA] minutes. (I am driving and will arrive in approximately [ETA] minutes.)*²) cannot be edited. [ETA] will automatically be replaced with the estimated time of arrival on the confirm message screen.
If there are waypoints set, [ETA] to the next waypoint will be shown.
If there is no route currently set in the navigation system, “Quick Message 1” cannot be selected.

*¹: Without navigation function

*²: With navigation function

CALLING THE MESSAGE SENDER

Calls can be made to an e-mail/SMS/MMS message sender’s phone number.

This operation can be performed while driving.

CALLING FROM E-MAIL/SMS/MMS MESSAGE DISPLAY

1. Display the message inbox screen. (→P.130)
2. Select the desired message.
3. Select .



- If there are 2 or more phone numbers, select the desired number.
- 4. Check that the “Call (Call)” screen is displayed.

CALLING FROM A NUMBER WITHIN A MESSAGE

Calls can be made to a number identified in a message’s text area.

This operation cannot be performed while driving.

1. Display the message inbox screen. (→P.130)
2. Select the desired message.

3. Select the text area.



4. Select  corresponding to the desired number to call.

- Identified phone numbers contained in the message are displayed.

5. Check that the "Call (Call)" screen is displayed.

NOTE

- A series of numbers may be recognized as a phone number. Additionally, some phone numbers may not be recognized, such as those for other countries.

CALLING FROM THE INCOMING MESSAGE SCREEN

→P.131

SETUP


PHONE/MESSAGE SETTINGS

1. Select **HOME**.



2. Select **SETTINGS** (SETTINGS).
3. Select **Phone** (Phone).
4. Select the item to be set.

PHONE/MESSAGE SETTINGS SCREEN

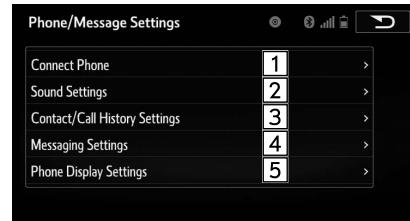

No.	Information	Page
1	Connect phone	181
2	Sound settings	137
3	Contact/call history settings	138
4	Messaging settings	145
5	Phone display settings	146

DISPLAYING THE PHONE/MESSAGE SETTINGS SCREEN IN A DIFFERENT WAY

1. Display the phone top screen. (→P.121)

2. Select .





“Sound Settings (Sound Settings)” SCREEN

The call and ringtone volume can be adjusted. A ringtone can be selected.

1. Display the “Phone/Message Settings (Phone/Message Settings)” screen. (→P.136)
2. Select **Sound Settings** (Sound Settings).

3. Select the desired item to be set.

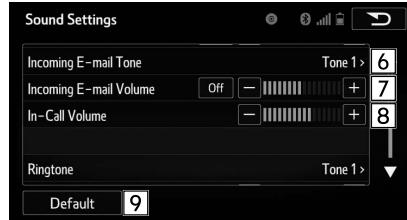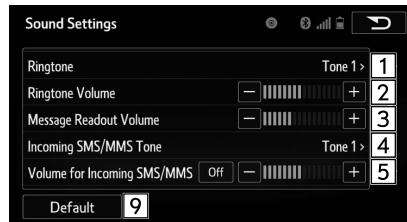

4
PHONE

No.	Function
1	Select to set the desired ringtone.
2	Select  or  to adjust the ringtone volume.
3	Select  or  to adjust the message readout volume.
4	Select to set the desired incoming SMS/MMS tone.
5	Select  or  to adjust the incoming SMS/MMS tone volume.

No.	Function
6	Select to set the desired incoming e-mail tone.
7	Select [-] or [+] to adjust the incoming e-mail tone volume.
8	Select [-] or [+] to adjust the default volume of the other party's voice.
9	Select to reset all setup items.


“Contact/Call History Settings (Contact/Call History Settings)” SCREEN

The contact can be transferred from a Bluetooth phone to the system. The contact also can be added, edited and deleted.

The call history can be deleted and contact and speed dial can be changed.

1. Display the “Phone/Message Settings (Phone/Message Settings)” screen. (→P.136)
2. Select **Contact/Call History Settings** (Contact/Call History Settings).

3. Select the desired item to be set.

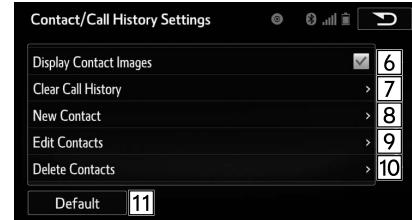

No.	Function	Page
1	For PBAP compatible Bluetooth phones, select to set automatic contact/history transfer on/off. When set to on, the phone's contact data and history are automatically transferred.	-
2	Select to update contacts from the connected phone.	139
3	Select to sort contacts by the first name or last name field.	-

No.	Function	Page
4	Select to add contacts to the speed dial list.	143
5	Select to delete contacts from the speed dial list.	144
6	Select to set the transferred contact image display on/off.	-
7*	Select to clear contacts from the call history.	-
8*	Select to add new contacts to the contact list.	140
9*	Select to edit contacts in the contact list.	141
10*	Select to delete contacts from the contact list.	142
11	Select to reset all setup items.	-

*: For PBAP compatible Bluetooth phones, this function is available when "Automatic Contact/History Transfer (Automatic Contact/History Transfer)" is set to off. (→P.138)

NOTE

- Contact data is managed independently for every registered phone. When one phone is connected, another phone's registered data cannot be read.

UPDATE CONTACTS FROM PHONE

Operation methods differ between PBAP compatible and OPP compatible Bluetooth phones.

If your cellular phone is neither PBAP nor OPP compatible, the contacts cannot be transferred.

NOTE

- During the smartphone Bluetooth connection process, only individual contacts will be transferred from the smartphone to the system. Contact group folders that have been created on the smartphone will not be transferred to the system.

■ FOR PBAP COMPATIBLE Bluetooth PHONES

1. Select **Update Contacts from Phone** (Update Contacts from Phone).
 - Contacts are transferred automatically.
2. Check that a confirmation screen is displayed when the operation is complete.
 - This operation may be unnecessary depending on the type of cellular phone.
 - If another Bluetooth device is connected when transferring contact data, depending on the phone, the connected Bluetooth device may need to be disconnected.
 - Depending on the type of Bluetooth phone being connected, it may be necessary to perform additional steps on the phone.

■ FOR OPP COMPATIBLE Bluetooth PHONES

This operation cannot be performed while driving.

1. Select **Update Contacts from Phone** (Update Contacts from Phone).
2. Transfer the contact data to the system using a Bluetooth phone.
 - This operation may be unnecessary depending on the type of cellular phone.
 - To cancel this function, select **Cancel** (Cancel).
3. Check that a confirmation screen is displayed when the operation is complete.

► Updating the contacts in a different way (from the "Call History (Call History)" screen)

1. Display the phone top screen. (→P.121)
2. Select the **Call History** (Call History) tab and then select a contact not yet registered in the contact list.
3. Select **Update Contact** (Update Contact).
4. Select the desired contact.
5. Select a phone type for the phone number.

REGISTERING A NEW CONTACT TO THE CONTACT LIST

New contact data can be registered.

Up to 4 numbers per person can be registered. For PBAP compatible Bluetooth phones, this function is available when "Automatic Contact/History Transfer (Automatic Contact/History Transfer)" is set to off. (→P.138)

NOTE

- During the smartphone Bluetooth connection process, only individual contacts will be transferred from the smartphone to the system. Contact group folders that have been created on the smartphone will not be transferred to the system.

1. Select **New Contact** (New Contact).
2. Enter the name and then select **OK** (OK).
3. Enter the phone number and then select **OK** (OK).
4. Select the phone type for the phone number.
5. To add another number to this contact, select **Yes** (Yes).

■ REGISTERING A NEW CONTACT IN A DIFFERENT WAY (FROM THE “Call History (Call History)” SCREEN)

This function is available for OPP compatible Bluetooth phones.

1. Display the phone top screen. (→P.121)
2. Select the **Call History** (Call History) tab and then select a contact not yet registered in the contact list.
3. Select **Add to Contacts** (Add to Contacts).
4. Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.140)

EDITING THE CONTACT DATA

For PBAP compatible Bluetooth phones, this function is available when “Automatic Contact/History Transfer (Automatic Contact/History Transfer)” is set to off. (→P.138)

1. Select **Edit Contact** (Edit Contact).
2. Select the desired contact.

3. Select  corresponding to the desired name or number.



► For editing the name

4. Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 2”. (→P.140)

► For editing the number

4. Follow the steps in “REGISTERING A NEW CONTACT TO THE CONTACT LIST” from “STEP 3”. (→P.140)

■ EDITING THE CONTACT IN A DIFFERENT WAY (FROM THE “Contact Details (Contact Details)” SCREEN)

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts), **Call History** (Call History) tab or the **Speed Dial** (Speed Dial) tab and then select the desired contact.

3. Select **Edit Contact** (Edit Contact).



- **E-mail Addresses** (E-mail Addresses): Select to display all registered e-mail addresses for the contact.

4. Follow the steps in "EDITING THE CONTACT DATA" from "STEP 3". (→P.141)

DELETING THE CONTACT DATA

For PBAP compatible Bluetooth phones, this function is available when "Automatic Contact/History Transfer (Automatic Contact/History Transfer)" is set to off. (→P.138)

1. Select **Delete Contacts** (Delete Contacts).
2. Select the desired contact and then select **Delete** (Delete).

3. Select **Yes** (Yes) when the confirmation screen appears.

NOTE

- Multiple data can be selected and deleted at the same time.

■ DELETING THE CONTACT IN A DIFFERENT WAY (FROM THE "Contact Details (Contact Details)" SCREEN)

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts), **Call History** (Call History) tab or the **Speed Dial** (Speed Dial) tab and then select the desired contact.
3. Select **Delete Contact** (Delete Contact).
4. Select **Yes** (Yes) when the confirmation screen appears.

NOTE


- When a Bluetooth phone is deleted, the contact data will be deleted at the same time.

SPEED DIAL LIST SETTING

Up to 15 contacts (maximum of 4 numbers per contact) can be registered in the speed dial list.

■ REGISTERING THE CONTACTS IN THE SPEED DIAL LIST

1. Select **Add Speed Dial** (Add Speed Dial).
2. Select the desired contact to add to the speed dial list.

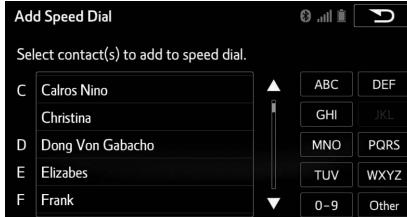


- Dimmed contacts are already stored as a speed dial.

3. Check that a confirmation screen is displayed when the operation is complete.

► When 15 contacts have already been registered to the speed dial list

1. When 15 contacts have already been registered to the speed dial list, a registered contact needs to be replaced. Select **Yes** (Yes) when the confirmation screen appears to replace a contact.
2. Select the contact to be replaced.

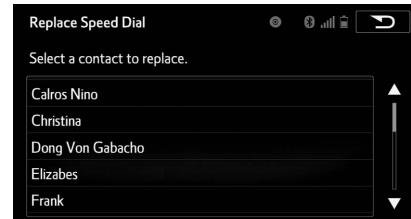

3. Check that a confirmation screen is displayed when the operation is complete.

► Registering contacts in the speed dial list in a different way (from the “Contacts (Contacts)” screen)

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts) tab.

3. Select  at the beginning of the desired contact list name to be registered in the speed dial list.



- When selected,  is changed to , and the contact is registered in the speed dial list.

► **Registering contacts in the speed dial list in a different way (from the “Contact Details (Contact Details)” screen)**

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts) tab or the **Call History** (Call History) tab and then select the desired contact.
3. Select **Add Speed Dial** (Add Speed Dial).
4. Check that a confirmation screen is displayed when the operation is complete.

■ DELETING THE CONTACTS IN THE SPEED DIAL LIST

1. Select **Remove Speed Dial** (Remove Speed Dial).
2. Select the desired contacts and then select **Remove** (Remove).



3. Select **Yes** (Yes) when the confirmation screen appears.
4. Check that a confirmation screen is displayed when the operation is complete.

► **Deleting contacts in the speed dial list in a different way (from the “Contacts (Contacts)” screen)**

1. Display the phone top screen. (→P.121)
2. Select the **Contacts** (Contacts) tab.

- Select **★** at the beginning of the contact list name to be deleted from the speed dial list.




- When selected, **★** is changed to **☆**, and the data is deleted from the list.

► **Deleting contacts in the speed dial list in a different way (from the “Contact Details (Contact Details)” screen)**

- Display the phone top screen. (→P.121)
- Select the **Contacts** (Contacts), **Call History** (Call History) tab or the **Speed Dial** (Speed Dial) tab and then select the desired contact to delete.
- Select **Remove Speed Dial** (Remove Speed Dial).
- Select **Yes** (Yes) when the confirmation screen appears.
- Check that a confirmation screen is displayed when the operation is complete.

“Messaging Settings (Messaging Settings)” SCREEN

- Display the “Phone/Message Settings (Phone/Message Settings)” screen. (→P.136)
- Select **Messaging Settings** (Messaging Settings).
- Select the desired item to be set.

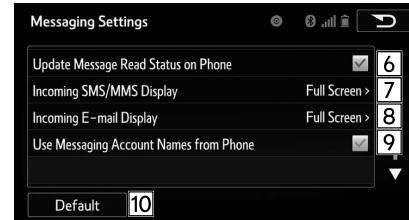

No.	Function
1	Select to set automatic message transfer on/off.


No.	Function
2	Select to set automatic message readout on/off.
3	Select to set the SMS/MMS notification popup on/off.
4	Select to set the e-mail notification popup on/off.
5	Select to set adding the vehicle signature to outgoing messages on/off.
6	Select to set updating message read status on phone on/off.
7	Select to change the incoming SMS/MMS display. Full Screen (Full Screen): When an SMS/MMS message is received, the incoming SMS/MMS display screen is displayed and can be operated on the screen. Drop-Down (Drop-Down): When an SMS/MMS message is received, a message is displayed on the upper side of the screen.

No.	Function
8	Select to change the incoming e-mail display. Full Screen (Full Screen): When an e-mail is received, the incoming e-mail display screen is the displayed and can be operated on the screen. Drop-Down (Drop-Down): When an e-mail is received, a message is displayed on the upper side of the screen.
9	Select to set display of messaging account names on the inbox tab on/off. When set to on, messaging account names used on the cellular phone will be displayed.
10	Select to reset all setup items.

“Phone Display Settings (Phone Display Settings)” SCREEN

1. Display the “Phone/Message Settings (Phone/Message Settings)” screen. (→P.136)
2. Select **Phone Display Settings** (Phone Display Settings).

3. Select the desired item to be set.

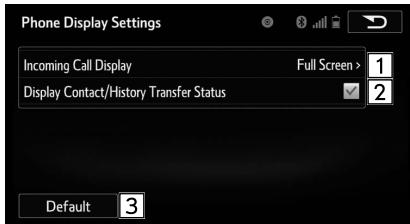

No.	Function
1	Select to change the incoming call display. Full Screen (Full Screen): When a call is received, the hands-free screen is displayed and can be operated on the screen. Drop-Down (Drop-Down): A message is displayed on the upper side of the screen.
2	Select to set display of the contact/history transfer completion message on/off.
3	Select to reset all setup items.

4

PHONE

MEMO