

5

5

APPS

BEFORE USING THE APPLICATION

BEFORE USING THE APPLICATION

Precautions to be aware of when using the application are shown below.

In this chapter, iPhone or Android devices will be referred to as a smartphone.

WARNING

- Do not connect or operate the smartphone while driving.
- Be sure to park the vehicle in a safe location before connecting or operating the smartphone.

CAUTION

- Do not leave your smartphone in the car. In particular, high temperatures inside the vehicle may damage the smartphone.
- Do not push down on or apply unnecessary pressure to the smartphone while it is connected as this may damage the smartphone or its terminal.
- If connecting your smartphone via USB, do not insert foreign objects into the USB port as this may damage the smartphone or its terminal.

NOTE

- Depending on the application, certain functions are not available while driving for reasons of safety.
- In order to maximize signal reception, performance and precision of the smartphone, please ensure the smartphone is placed as close to the system as possible, while ensuring it is stowed and secure while driving.
- When connecting your smartphone via USB, use the original cables provided with your smartphone or equivalent third-party (certified) cables.
- When the ignition switch is in the "ACC" or "ON" position, the battery of the connected smartphone is charged.
- If connecting your smartphone via USB, smartphone may not be recognized when the ignition switch is in the "ACC" or "ON" position. In this case, remove the smartphone and reconnect it.
- The accuracy of the displayed information or the signal reception performance depends on the smartphone or the connected device, and its wireless connection.
- For operating the smartphone, see the instruction manual that comes with it.
- Follow the specific operation procedures for the smartphone application.
- When connecting the device via Bluetooth, the communication speed may become slower than via USB.

SETTINGS REQUIRED TO USE THE APPLICATION

In order to use the application on this system, the application must be installed on the smartphone.

- Search and download the application from your smartphone app.
 - iPhone: App Store via iTunes
 - Android device: Google Play Store
- Create an account and login to the application on the smartphone.

NOTE

- Please use the latest version of the application.

ABOUT APP-BASED CONNECTED CONTENT

Requirements for using the connected content services of the application on this system.

- The latest version of the system is compatible with connected content application(s) for the smartphones, and is downloaded to your smartphone.
- A current account with a wireless content service provider.
- A smartphone data plan: If the data plan for your smartphone does not provide for unlimited data usage, additional charges from your carrier may apply for accessing app-based connected content via 3G, 4G, Wi-Fi, or 4G LTE wireless networks.
- Connection to the internet via 3G, 4G, Wi-Fi, or 4G LTE networks.

NOTE

- Changes to product specifications may result in differences between the content of the manual and features of the product.
- Be careful not to exceed the data usage limits for your smartphone. Doing so will result in additional data usage charges from your phone carrier.

NOTE

- Limitations:
 - Access to app-based connected content will depend on the availability of wireless cellular and/or Wi-Fi network coverage for the purpose of allowing your smartphone to connect to the internet.
 - Service availability may be geographically limited by region. Consult the wireless connected content service provider for additional information.
 - Ability of this product to access connected content is subject to change without notice and could be affected by any of the following: compatibility issues with future firmware versions of the smartphone; compatibility issues with future versions of the connected content application(s) for the smartphone; changes to or discontinuation of the connected content application(s) or service by its provider.
- Since some applications use signals from GPS satellites and wireless communication lines, they may not work properly in the following locations.
 - In tunnels
 - In underground parking lots
 - Outside wireless communication range, such as some countryside areas
 - Where the wireless communication network is congested, or where communications are restricted
- Depending on the circumstances and environment, the signal may be weak or not be received. In such cases, an error may occur.

NOTE

- Communication and phone call charges for smartphones should be paid by the wireless subscriber.
- If you lose the data in a smartphone or other device while using it with the system, no compensation will be given for the lost data.
- **SUBARU CORPORATION** does not guarantee content provided by the application.
- The application may not work due to factors on smartphones, smartphone applications or stations. **SUBARU CORPORATION** accepts no responsibility for this.

SUBARU STARLINK**SUBARU STARLINK**

The SUBARU STARLINK function allows the system to link with a smartphone using Bluetooth.

When connecting iPhone or Android devices with the SUBARU STARLINK application installed, you can control SUBARU STARLINK content through the system.

To use the SUBARU STARLINK application, connect your iPhone or Android device via Bluetooth.

When using the application, read the precautions indicated in "BEFORE USING THE APPLICATION". (→P.150)

USING SUBARU STARLINK APPLICATION

1. Run the SUBARU STARLINK application on your smartphone.
2. Connect your smartphone by utilizing the Bluetooth connection.
 - For details about registering or connecting your smartphone: →P.176
3. Select **SUBARU STARLINK** (SUBARU STARLINK) on the "APPS (APPS)" screen.

4. Check that the "SUBARU STARLINK disclaimer (SUBARU STARLINK disclaimer)" screen is displayed.

**NOTE**

- When using the SUBARU STARLINK function, a disclaimer screen will be displayed. Be sure to fully read the contents before using the function.
- There may be times when **SUBARU STARLINK** (SUBARU STARLINK) does not appear immediately when the ignition switch is set in the "ACC" or "ON" position. If so, please wait.

ABOUT THE SUPPORTED DEVICES

This system supports the following devices.

- iPhone: iOS 4.3.5 or later
- Android: Android 4.0 or later

MirrorLink™**MirrorLink™**

The MirrorLink™ function allows smartphone content to be operated via the system.

To use the MirrorLink™ application, connect your Android device to the USB port.


Depending on differences between models or software version etc., some models might be incompatible with this system.

When using the application, read the precautions indicated in "BEFORE USING THE APPLICATION". (→P.150)

This function is not available if the smartphone is not compliant with MirrorLink™ of Car Connectivity Consortium™.


USING MirrorLink™ APPLICATION

1. Run the MirrorLink™ application on your smartphone.
2. Connect your smartphone to the USB port.
 - For details about connecting your smartphone:
→P.41
3. Select **MirrorLink™** (MirrorLink™) on the "APPS (APPS)" screen.

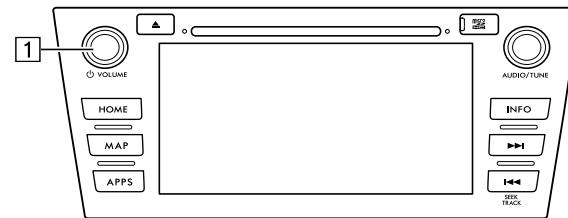OVERVIEW**▶Control panel**

No.	Function
1	Turn to adjust volume. Press to turn the audio system on/off.

▶ Control screen

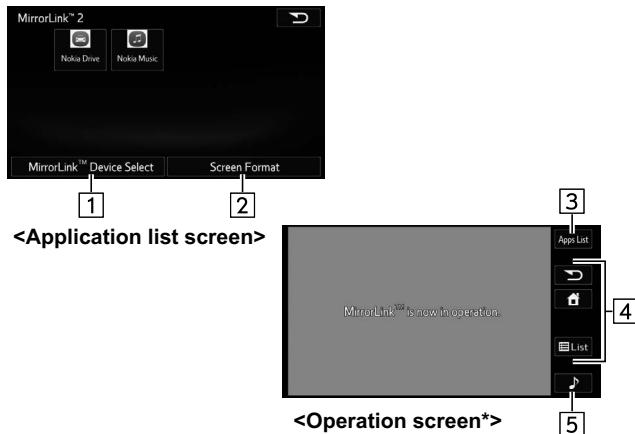

*: The displayed screen will differ depending on the connected smartphone.

No.	Function
1	Select to choose a MirrorLink™ device.
2	Select to change the screen size. (→P.58)
3	Select to return the application list screen.

No.	Function
4	Displays software buttons that function as the buttons on the smartphone.
5	Select to change the other audio source (Radio, Disc etc.).

NOTE

- This function cannot be used while USB audio, video or photo is in use.
- The video displayed on the screen may differ from that displayed on the smartphone.
- It may not be possible to use certain applications while driving.

ABOUT THE SUPPORTED DEVICES

- Your smartphone must support the MirrorLink™ version 1.1, 1.0 function. Information on MirrorLink™ compatible phones and MirrorLink™ enabled apps is available on the MirrorLink™ web site (www.mirrorlink.com).
- Available operations will differ depending on your smartphone. Refer to your smartphone owner's manual, or consult the manufacturer.

aha™ by HARMAN**aha™ by HARMAN**


aha is a cloud-based application that connects to the system and gives you access to your favorite web content safely and easily. There are over 40,000 stations spanning internet radio, personalized music, audiobooks, Facebook, Twitter, restaurant and hotel searches, weather and more. For more about aha, go to the aha site (<http://www.aharadio.com>).

When connecting iPhone or Android devices with the aha application installed, you can control, view, and hear aha content through the system.

To use the aha application, connect your iPhone to the USB port, or connect your Android device via Bluetooth.


When using the application, read the precautions indicated in "BEFORE USING THE APPLICATION". (→P.150)

With navigation function: You may be also display POI information from the aha application on the map screen and route to these POIs.

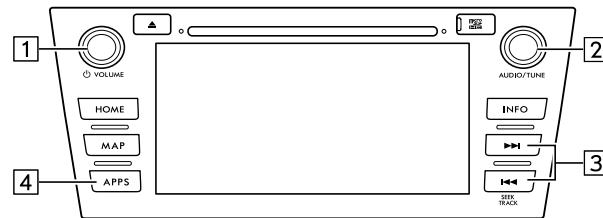OVERVIEW**▶Control panel**

No.	Function
1	Turn to adjust volume. Press to turn the audio system on/off.
2	Turn to display the next/previous content item. Press to select an audio mode.
3	Select to display the next/previous content item.
4	Select to display the "APPS (APPS)" screen.

▶ Control screen

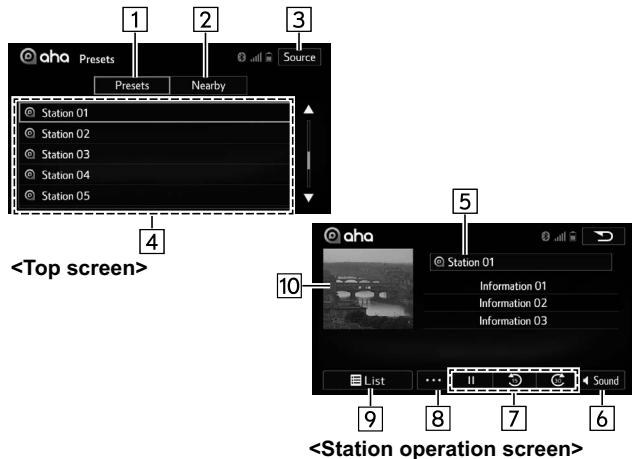

No.	Function
1	Select to display a list of preset stations. A maximum of 35 entries can be displayed in this list.
2	Select to display a list of stations using the location information. A maximum of 10 entries can be displayed in this list.

No.	Function
3	Select to display the audio source selection screen.
4	Station list Select to display the station operation screen.
5	Displays station name. Select to display the top screen.
6	Select to display the sound setting screen. (→P.56)
7	Station operation screen buttons. (→P.160)
8	Select to change the station operation screen buttons.
9	Select to display the content item list.
10	Displays cover art.

5

APPs

NOTE

- When you switch to other modes with the aha application activated and then turn the system Off/On with the smartphone device still connected, the aha mode will start instead of the last mode used. If you do not want to start the aha mode automatically, turn off the aha application on the smartphone.

NOTE

- Top 35 entries in the preset station list on the smartphone are displayed. When there are more than 35 entries in the preset station list, change the order of the entries in the list on the smartphone. You can change the priority of your preset stations within the aha application (after disconnected from this system) to modify the station list shown on the screen. Please see your smartphone aha application "Edit Presets" to modify this list.
- If there are multiple audio files stored on your iPhone, it may take some time until playback starts.
- Playback may be intermittent when you switch to streaming Bluetooth audio from aha on your smartphone device.

ABOUT THE SUPPORTED DEVICES FOR aha

This system supports the following devices.

- iPhone: iOS 5.0 or later
- Android: Android2.2 or later

NOTE


- Note that the warranty does not apply if an unsupported iPhone is connected.
- The available functions may vary depending on the type of Android device.

USING aha APPLICATION


If you connect a smartphone to this system after starting a supported aha application on the smartphone, you can display and operate the aha application displayed on the smartphone on the system screen.

1. Run the aha application on your smartphone.
2. Connect the iPhone to the USB port, or connect the Android device by utilizing the Bluetooth connection.
 - For details about connecting an iPhone: →P.41
For details about registering or connecting an Android device: →P.176

3. For Android devices: Select **aha** (aha) on the “APPS (APPS)” screen.
 - The “aha” top screen can also be displayed by selecting **aha** (aha) on the “Select Audio Source (Select Audio Source)” screen.
4. Check that the top screen is displayed.

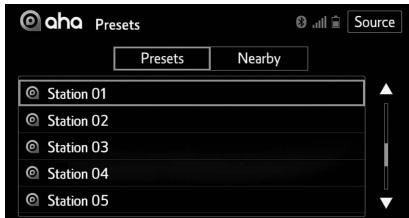

5. Select the desired station.
6. Check that the station operation screen is displayed.

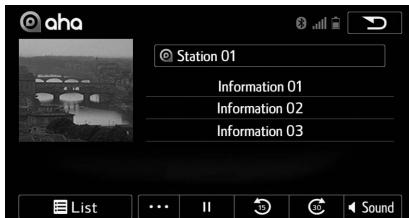

- Main functions of the station operation screen button:
→P.160
- For details on the services or the operations, check the aha site (<http://www.aharadio.com>) on the internet.

NOTE

- When iPhone and Android devices are connected at the same time, select the smartphone which you want to use on the “General Settings (General Settings)” screen. (→P.190)
- The following operations are not available on this system. Perform these operations on the smartphone.
 - Add/Reorder/Delete stations
 - Log in to Facebook/Twitter (When not logged in, login will be required by the station. It is necessary to do so when the device is disconnected from the system.)
- For the aha function, the following touch screen gestures are not available.
 - Double touch with one finger
 - Double touch with two fingers
- The audio system will turn off when the aha application is closed on the iPhone and/or Android device.

STATION OPERATION SCREEN BUTTONS

Button	Function
▶	Select to start playback.
⏸	Select to pause playback.
⏹	Select to stop playback.
👍	Select to upload “Like” information to the application server. To cancel “Like” information that is being uploaded to the server, select this button again.
👎	Select to upload “Dislike” information to the application server. To cancel “Dislike” information that is being uploaded to the server, select this button again.
⬆ *	Select to display the POI information on the map screen and set it as a destination. (→P.216)
📞	Select to call the registered number.
📍	Select to upload your current location to your social network.
🎙	Select to send your voice to the application server. (→P.160)

Button	Function
⟳	Select to refresh the content item information in the current station.
⟲ 15	Select to rewind the current content item for 15 seconds.
⟳ 30	Select to fast forward the current content item for 30 seconds.

*: With navigation function

NOTE

- The button display will vary depending on each station or content item.


SHOUT FUNCTION

Your voice can be sent to the application server.

1. Select .




2. Check that the countdown screen is displayed.

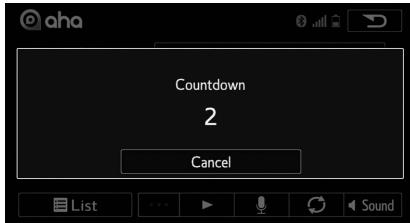


- **Cancel** (Cancel): Select to cancel shout function.

3. Record your voice and then select **Save** (Save).

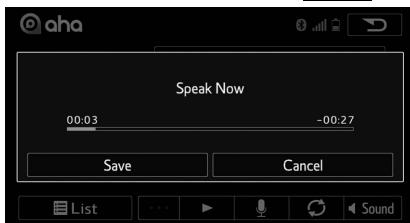


- **Cancel** (Cancel): Select to cancel shout function.
- A maximum of 30 seconds can be recorded.

4. Select **Send** (Send).

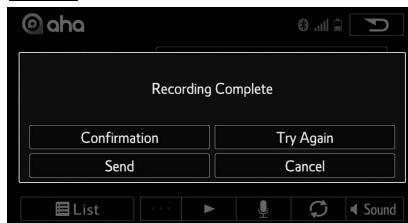

- **Confirmation** (Confirmation): Select to confirm the saved voice.
- **Try Again** (Try Again): Select to record your voice again.
- **Cancel** (Cancel): Select to cancel shout function.

5. Check that sending is completed.

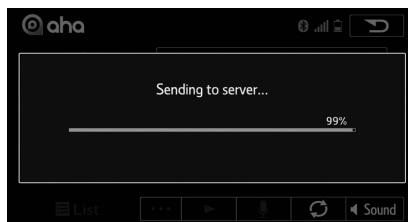

5

APPS

Pandora®

Pandora®

Pandora is free personalized radio that offers effortless and endless music enjoyment and discovery.

To use the Pandora application, connect your iPhone to the USB port, or connect your Android device via Bluetooth.

Depending on differences between models or software version etc., some models might be incompatible with this system.

This function is not available if the Pandora application has not been installed on the smartphone.

When using the application, read the precautions indicated in "BEFORE USING THE APPLICATION". (→P.150)

NOTE


- Pandora is available in the United States, Australia, and New Zealand.

OVERVIEW

The Pandora operation screen can be reached by the following methods:

- Connect the iPhone to the USB port, or connect the Android device by utilizing the Bluetooth connection.
 - For details about connecting an iPhone: →P.41
 - For details about registering or connecting an Android device: →P.176
- Select **Pandora** (Pandora) on the "Select Audio Source (Select Audio Source)" screen. (→P.55)
- Select **Pandora** (Pandora) on the "APPS (APPS)" screen. (→P.23)

► Control panel

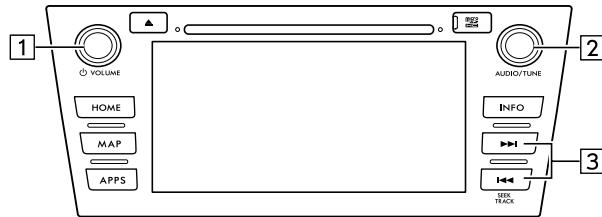

No.	Function
1	Turn to adjust volume. Press to turn the audio system on/off.
2	Press to select an audio mode.
3	Select ▶▶ to skip to the next track. Select and hold to rate the track currently playing as "Like" or "Dislike".

►Control screen



No.	Function
6	Select to skip to the next track.
7	Select to play/pause.
8	Select to display a station list.
9	Displays cover art.

ABOUT THE SUPPORTED DEVICES

This system supports the following devices.

- iPhone: iOS 5.0 or later
- Android: Differs with mobile device used

No.	Function
1	Select to display the audio source selection screen.
2	Select to display the sound setting screen. (→P.56)
3	Shows progress.
4	Select to rate the track currently playing as "Like" or "Dislike".
5	Select to bookmark the track currently playing.