

A

Abbreviation	3
ABS (Anti-lock Brake System)	7-37
Warning light	3-21
Access key fob	2-10
Warning light	3-26
Accessories	11-38
Accessory power outlet	6-9
Air cleaner element	11-14
Air conditioner	
Automatic climate control	4-7
Manual climate control	4-8
Air filtration system	4-13
Air flow mode	4-8
Alarm system	2-25
All-Wheel Drive warning light	3-23
Alloy wheel	11-30
Cleaning	10-3
Antenna	5-2
Anti-lock Brake System (ABS)	7-37
Arming the system	2-26
Armrest	1-12
Ashtray	6-11
AT OIL TEMP warning light	3-19
Audio	
aha™ by HARMAN	5-44
AM/FM radio	5-28
Antenna	5-2
AUX	5-61
Base display audio set	5-4
Basic operation	5-18

Bluetooth audio	5-58
CD	5-53
iPod	5-56
Pandora®	5-50
SiriusXM Satellite Radio	5-37
STARLINK™ 7.0 Multimedia Plus audio set	5-6
Steering switches for audio	5-63
SUBARU STARLINK	5-26
Unit setting	5-19
USB memory	5-55
Auto-dimming mirror/compass	3-108, 3-109
Automatic climate control	4-7
Automatic headlight beam leveler	3-102
Warning light	3-32
Automatic Locking Retractor/Emergency Locking Retractor (ALR/ELR)	1-18

B

Battery	11-36
Drainage prevention function	2-8
Jump starting	9-9
Replacement (access key fob)	11-45
Replacement (remote engine start transmitter)	7-20
Replacement (transmitter)	11-46
Bluetooth®	
Audio	5-58
Hands-free phone system	5-71
Bluetooth® settings	5-66
Registering/connecting Bluetooth® device	5-66
Setting Bluetooth details	5-69
Booster seat	1-37

Bottle holder.....	6-9
Brake	
Assist.....	7-37
Booster.....	7-36, 11-20
Disc.....	12-11
Fluid.....	11-18, 12-9
Pad.....	11-22
Parking.....	7-48, 11-23
Pedal.....	11-20
System.....	7-36
Brake pedal	
Free play.....	11-20
Reserve distance.....	11-20
Brake system.....	7-36
Warning light.....	3-21
Braking.....	7-36
Tips.....	7-36
Breaking-in of new brake pads.....	11-22
BSD/RCTA.....	7-59
Approach indicator light/warning buzzer.....	7-62
OFF indicator.....	3-34, 7-65
OFF switch.....	7-65
Warning indicator.....	3-33, 7-64
Warning volume.....	3-44, 7-63
Bulb	
Chart.....	12-16
Replacing.....	11-39

C

Cargo area	
Cover.....	6-14
Light.....	6-2
Tie-down hooks.....	6-16
Catalytic converter.....	8-3
Center console.....	6-6
Changing	
Coolant.....	11-14
Flat tire.....	9-5
Oil and oil filter.....	11-11
Charge warning light.....	3-18
CHECK ENGINE warning light/Malfunction indicator light.....	3-16
Checking	
Brake pedal free play.....	11-20
Brake pedal reserve distance.....	11-20
Clutch function.....	11-21
Clutch pedal free play.....	11-21
Coolant level.....	11-13
Fluid level (brake fluid).....	11-18
Fluid level (clutch fluid).....	11-19
Fluid level (washer fluid).....	11-30
Oil level (engine oil).....	11-10
Child restraint systems.....	1-30
Installation of a booster seat.....	1-37
Installation with ALR/ELR seatbelt.....	1-33
Lower and tether anchorages.....	1-38
Top tether anchorages.....	1-41
Child safety.....	5
Locks.....	2-32

Chime	
Key	3-5
Light	3-93
Seatbelt	3-14
Cigarette lighter	6-11
Cleaning	
Alloy wheels	10-3
Interior	10-5
Ventilation grille	4-12
Climate control system	4-3
Automatic	4-7
Manual	4-8
Clock	3-39, 3-59, 3-73
Clutch	
Fluid	11-19, 12-9
Pedal	11-21
Compass	3-108, 3-109
Continuously variable transmission (CVT)	7-25
Fluid	11-17, 12-9
Coolant	11-13, 12-9
Temperature high warning light	3-17
Temperature low indicator light	3-17
Cooling system	11-12
Corrosion protection	10-4
Cruise control	7-54
Indicator light	3-32
Set indicator light	3-32
Cup holder	6-7
Front passenger's	6-7
Rear passenger's	6-8

D

Daytime running light system	3-98
Defogger	3-116
Defrosting	4-11
Deicer	3-116
Differential gear oil	
Front	11-17, 12-7
Rear	11-17, 12-7
Dimensions	12-2
Disarming the alarm system	2-29
Disc brake pad wear warning indicators	7-37
Dome light	6-2
Door	
Locks	2-6
Open warning light	3-23
Double trip meter	3-10
Drive belts	11-16
Driving	
All-Wheel Drive warning light	3-23
AWD models	8-5
Car phone/cell phone	7
Drinking	6
Drugs	6
Foreign countries	8-4
Pets	7
Snowy and icy roads	8-10
Tips	7-24, 7-32, 8-2, 8-5
Tired or sleepy	7
Winter	8-8

E

ECO gauge	3-12
Electrical system	12-10
Electronic Brake Force Distribution (EBD) system	7-38
Warning	3-22
Emergency Locking Retractor (ELR)	1-17
Engine	
Compartment overview	11-8
Coolant	11-13, 12-9
Exhaust gas (carbon monoxide)	6, 8-2
Hood	11-7
Low oil level warning light	3-18
Oil	11-10, 12-4
Overheating	9-12
Starting & stopping	7-9, 7-12
Event data recorder	9
Exterior care	10-2

F

Flat tires	9-5
Floor mat	6-12
Fluid level	
Brake	11-18
Clutch	11-19
Continuously variable transmission (CVT)	11-17
Fog light	3-102
Bulb	11-42, 12-16
Indicator light	3-33
Switch	3-102

Front

Differential gear oil	11-17, 12-7
Seatbelt pretensioners	1-25
Side marker light	11-41
Turn signal/Parking and front side marker light	11-41
Front fog light	3-102, 11-42
Bulb	11-42, 12-16
Indicator light	3-33
Switch	3-102
Front seats	1-2
Forward and backward adjustment	1-4
Head restraint adjustment	1-8
Memory function	1-5
Power seat	1-5
Reclining	1-4
Seat height adjustment (driver's seat)	1-4
Front side marker	11-41
Front turn signal/Parking and front side marker	11-41
Fuel	7-3
Consumption indicator	3-34, 3-41, 3-49
Economy hints	8-2
Filler lid and cap	7-5
Gauge	3-12
Requirements	7-3, 12-3
Fuses	11-37
Fuses and circuits	12-12

G

GAWR (Gross Axle Weight Rating)	8-14
Glove box	6-6
GVWR (Gross Vehicle Weight Rating)	8-14

H

Hands-free phone system	5-71
Hazard warning flasher	3-8, 9-2
Head restraint adjustment	
Front seat	1-8
Rear seat	1-12
Headlight	
Beam leveler	3-102
Bulb replacement	11-39
Bulb wattage	12-16
Control switch	3-93
Flasher	3-98
Indicator light	3-33
OFF delay function	3-94
Welcome lighting function	3-94
HID headlights	11-39
High Beam Assist function	3-95
Indicator light	3-32
High beam assist warning indicator	3-32
High beam indicator light	3-32
High/low beam change (dimmer)	3-95
Hill descent control	7-43
Indicator light	3-33
Hill start assist	7-52, 11-21
OFF indicator light	3-23
To activate/deactivate	7-52
Warning light	3-23
HomeLink®	3-109
Hook	
Cargo tie-down	6-16
Convenient	6-13

Shopping bag	6-13
Towing and tie-down	9-13
Horn	3-119
Hose and connections	11-12

I

Ignition switch	3-4
Light	3-6
Illumination brightness control	3-101
Immobilizer	2-3
Indicator light (security indicator light)	3-30
Indicator light	
BSD/RCTA OFF	3-34, 7-65
BSD/RCTA warning	3-33, 7-64
Coolant temperature low	3-17
Cruise control	3-32
Cruise control set	3-32
Front fog light	3-33
Headlight	3-33
High beam	3-32
High beam assist	3-32
Hill descent control	3-33
Hill start assist OFF	3-23
Immobilizer	3-30
Security	3-30
Select lever/Gear position	3-31
SI-DRIVE	3-31
Steering responsive fog lights OFF	3-33
Turn signal	3-32
Vehicle Dynamics Control OFF	3-25
Vehicle Dynamics Control operation	3-25

X-mode	3-33
Information display	3-34
Inside mirror	3-107
Interior lights	6-2

J

Jack and jack handle	9-4
Jack-up point	9-5
Jump starting	9-9

K

Key	2-3
Number plate	2-3
Reminder chime	3-5
Replacement	2-4
Keyless access entry function	2-13
Keyless access with push-button start system	2-10
Disabling keyless access functions	2-17
Locking and unlocking doors	2-13
Opening rear gate	2-15
Warning chimes and warning light	3-26
When access key fob does not operate properly	9-17
Keyless entry system	2-21

L

Lap belt pretensioner	1-27
LCA	7-60
Leather seat materials	10-5
License plate light	11-44
Light	
Backup	11-42

Cargo area	6-2
Control switch	3-93
Daytime running	3-98
Dome	6-2
Front fog	3-102, 11-42
Front side marker	11-41, 12-16
Ignition switch	3-6
License plate	11-44
Map	6-3
Rear combination	11-42
Stop	11-42
Tail	11-42
Turn signal	3-100, 11-41, 11-42
Vanity mirror	6-5
Loading your vehicle	8-12
Low fuel warning light	3-22
Low tire pressure warning light	3-19
Lower and tether anchorage	1-38

M

Maintenance	
Precautions	11-3
Schedule	11-3
Seatbelt	1-25
Tips	11-5
Tools	9-3
Malfunction indicator light (check engine warning light)	3-16
Manual	
Climate control	4-7
Mode (continuously variable transmission)	7-28

Seat	1-4
Transmission	7-22
Transmission oil	11-17, 12-7
Map light	6-3
Maximum load limits	8-19
Meters and gauges	3-9
Mirror defogger	3-116
Mirrors	3-107
Moonroof	2-46
Multi function display	3-44
Multi information display	3-39

N

New vehicle break-in driving	8-2
------------------------------------	-----

O

Odometer	3-10
Oil filter	11-11
Oil level	
Engine	11-10
Front differential gear	11-17
Manual transmission	11-17
Rear differential gear	11-17
Warning light	3-18
Oil pressure warning light	3-18
On-road and off-road driving	8, 8-6
Outside	
Mirror defogger	3-116
Mirrors	3-116
Temperature indicator	3-35, 3-49
Overhead console	6-7

Overheating engine	9-12
--------------------------	------

P

Parking	
Brake	7-48
Brake stroke	11-23
Tips	7-49
Periodic inspections	8-4
Petrol fuel	7-3
PIN Code Access	2-20
Power	
Door locking switch	2-9
Outlets	6-9
Outside mirrors	3-116
Rear gate	2-39, 9-20
Seat	1-5
Steering	7-35
Steering warning light	3-23
Precautions against vehicle modification	1-29, 1-73
Preparing to drive	7-8
Push-button	
Ignition switch	3-6
Starting and stopping engine	7-12

R

RCTA	7-60
Rear	
Combination lights	11-42
Differential gear oil	11-17, 12-7
Gate	2-38, 9-19
Turn signal light	11-42

Rear seat.....	1-11
Folding down.....	1-13
Head restraint adjustment.....	1-12
Heater.....	1-10
Reclining	1-15
Rear view camera.....	6-17
How to adjust the rear view image.....	5-25
Rear window	
Defogger	3-116
Wiper and washer switch.....	3-106
Wiper blades	11-34
Recommended	
Brake fluid	12-9
Clutch fluid.....	11-19, 12-9
Continuously variable transmission fluid	12-9
Engine oil	12-4
Front differential gear oil.....	12-7
Manual transmission oil	12-7
Rear differential gear oil	12-7
Spark plugs.....	12-10
Refueling	7-5
Remote engine start system.....	7-14
Remote keyless entry system.....	2-21
Replacement	
Brake pad and lining	11-22
Wiper blades	11-32
Replacing	
Access key fob battery	11-45
Air cleaner element.....	11-14
Battery of access key fob	11-45
Lost transmitters (remote keyless entry system)	2-25

Remote keyless entry transmitter battery.....	11-46
Replacing bulbs	11-39, 12-16
Backup light.....	11-42
Front fog light	11-42
Halogen headlight	11-39
Headlight.....	11-39
LED headlight.....	11-39
License plate light	11-44
Parking light	11-41
Rear combination light	11-42
Rear turn signal light	11-42
Stop light.....	11-42
Tail light	11-42
Reverse Automatic Braking System.....	7-67
Rocking the vehicle	8-12
Roof molding and crossbar.....	8-15
Roof rack	8-14

S

Safety

Precautions when driving	4
Symbol	3
Warnings.....	2

Seat

Fabric	10-5
Front.....	1-2
Heater.....	1-9
Height adjustment	1-4
Memory function	1-5
Power	1-5
Rear	1-11

Seatbelt	4, 1-16
Fastening	1-18
Maintenance	1-25
Pretensioners	1-25
Safety tips	1-16
Warning light and chime	3-14
Security	
Alarm system	2-25
Immobilizer	2-3
Indicator light	3-30
Shock sensors	2-31
Select lever	
Position indicator	3-31
Shift lock function	7-30
Shock sensors	2-31
Shopping bag hook	6-13
Shoulder pretensioners	1-25
SI-DRIVE	7-32
Indicator light	3-31
Snow tires	8-11, 11-23
Snowy and icy roads	8-10
Sounding a panic alarm	2-24
Spark plugs	11-16, 12-10
Specifications	12-2
Speedometer	3-10
SRS	
Curtain airbag	1-62
Frontal airbag	1-52
Side airbag	1-62
SRS airbag (Supplemental Restraint System airbag)	4, 1-43

SRS airbag system	
Monitors	1-70
Servicing	1-72
Warning light	3-15
Starting & stopping engine	7-9, 7-12
State emission testing (U.S. only)	7-7
Steering responsive fog lights system	3-103
OFF indicator	3-33
Warning indicator	3-33
Steering Responsive Headlight	3-99
Steering switches for audio	5-63
Steering wheel	
Heated Steering Wheel system	3-119
Power	7-35
Tilt/telescopic	3-118
Stop light	11-42
Storage compartment	6-6
Sun shade	2-47
Sun visors	6-4
Supplemental Restraint System airbag (SRS)	1-43
Synthetic leather upholstery	10-6

T

Tachometer	3-11
Temperature warning light	
AT OIL TEMP	3-19
Coolant	3-17
Temporary spare tire	9-2
Tether (child restraint system)	1-38, 1-41
Tie-down hooks	9-13

Tire	
Chains.....	8-11
Inspection	11-25
Pressures and wear	11-25
Replacement	11-29
Rotation.....	11-28
Size and pressure.....	12-10
Types	11-23
Tire pressure monitoring system (TPMS).....	7-47, 9-8, 11-23
Warning light	3-19
Tires and wheels	11-23
Tools	9-3
Top tether anchorages.....	1-38, 1-41
Towing.....	9-13
All wheels on the ground	9-17
Flat-bed truck	9-16
Hooks.....	9-13
Weight.....	8-19
Trailer	
Connecting	8-17
Hitch	8-16, 8-22
Towing.....	8-19
Towing tips.....	8-23
Trip meter	3-10
Turn signal	
Indicator lights	3-32
Lever.....	3-100
 U	
Under-floor storage compartment.....	6-17

V

Valet mode	2-30
Vanity mirror	6-5
Vehicle	
Capacity weight	8-13
Identification	12-19
Symbols.....	4
Vehicle Dynamics Control	
OFF indicator light.....	3-25
OFF switch.....	7-41
Operation indicator light	3-25
System	7-40
Warning light	3-24
Ventilator	4-2
Voice command system operation	5-81

W

Warning and indicator lights.....	3-13
Warning chimes	
Keyless access with push-button start system	3-26
Seatbelt	3-14
Warning light	
ABS.....	3-21
Access key	3-26
All-Wheel Drive	3-23
AT OIL TEMP	3-19
Automatic headlight beam leveler.....	3-32
Brake system.....	3-21
Charge.....	3-18
CHECK ENGINE.....	3-16
Coolant temperature high	3-17

Door open.....	3-23
Engine low oil level	3-18
Hill start assist.....	3-23
Keyless access with push-button start system.....	3-26
Low fuel.....	3-22
Low tire pressure	3-19
Oil pressure	3-18
Power steering	3-23
Seatbelt.....	3-14
SRS airbag system	3-15
Steering responsive fog lights system	3-33
Vehicle Dynamics Control	3-24
Windshield washer fluid.....	3-19
Warning volume	
BSD/RCTA.....	3-44
Warranties	1
Warranties and maintenance.....	8-19
Washing	10-2
Waxing and polishing	10-3
Wear indicators	11-27
Welcome lighting function	3-94
What to do if (hands-free system or a Bluetooth device).....	5-89
Troubleshooting (hands-free system or a Bluetooth device).....	5-89

Wheel	
Alloy	11-30
Balance.....	11-27
Nut tightening torque	12-10
Replacement	11-30
Windows	2-32
Windshield	
Washer fluid	11-30
Wiper and washer switches	3-105
Wiper blades	11-33
Wiper deicer	3-116
Winter	
Driving	8-8
Tires	8-11, 11-23
Wiper and washer	3-104
Wiper deicer	3-116

X

X-mode	7-43
Indicator light	3-33







