


Table of contents

<i>Seat, seatbelt and SRS airbags</i>	1
<i>Keys and doors</i>	2
<i>Instruments and controls</i>	3
<i>Climate control</i>	4
<i>Audio</i>	5
<i>Interior equipment</i>	6
<i>Starting and operating</i>	7
<i>Driving tips</i>	8
<i>In case of emergency</i>	9
<i>Appearance care</i>	10
<i>Maintenance and service</i>	11
<i>Specifications</i>	12
<i>Consumer information and Reporting safety defects</i>	13
<i>Index</i>	14


Illustrated index

■ Exterior

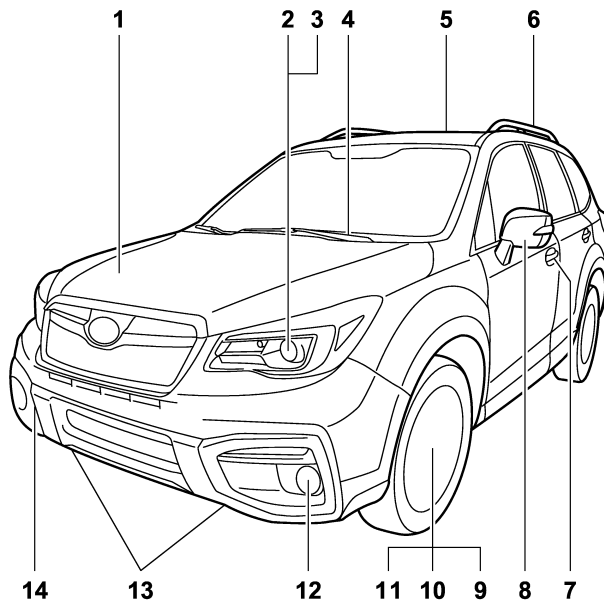

001286


- 1) Engine hood (page 11-7)
- 2) Headlight (page 3-93)
- 3) Replacing bulbs (page 11-39)
- 4) Front wiper (page 3-105)
- 5) Moonroof (page 2-46)
- 6) Roof rails (page 8-14)
- 7) Door locks (page 2-6)
- 8) Outside mirrors (page 3-116)
- 9) Tire pressure (page 11-25)
- 10) Flat tires (page 9-5)
- 11) Snow tires (page 8-11)
- 12) Fog light (page 3-102)
- 13) Tie-down hooks (page 9-13)
- 14) Towing hook (page 9-13)

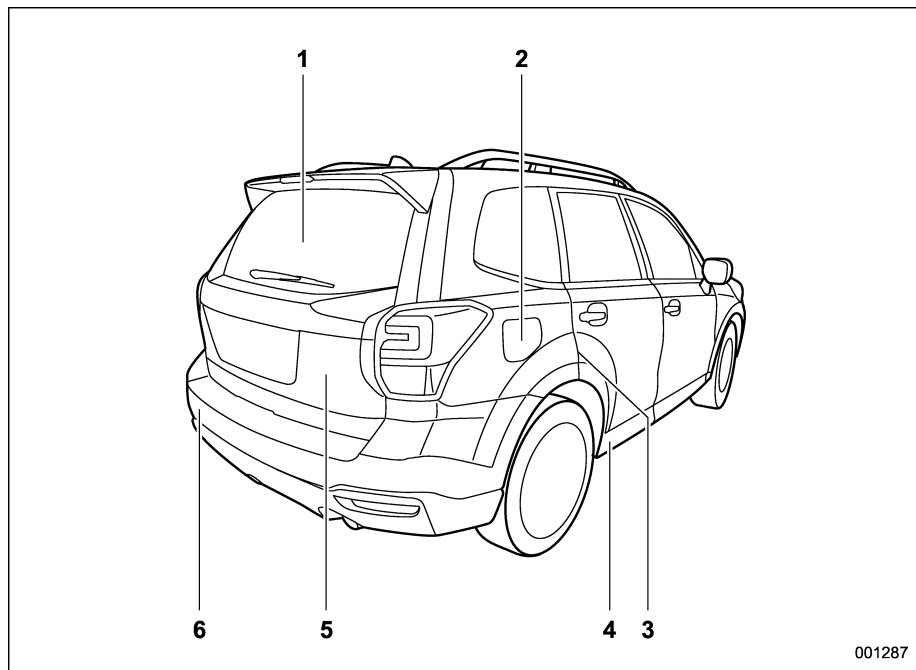

- 1) Rear window defogger (page 3-116)
- 2) Fuel filler lid and cap (page 7-5)
- 3) Child safety locks (page 2-32)
- 4) Tie-down hole (page 9-13)
- 5) Rear gate (page 2-38)
- 6) Towing hook (page 9-13)

■ Interior


▼ Passenger compartment area

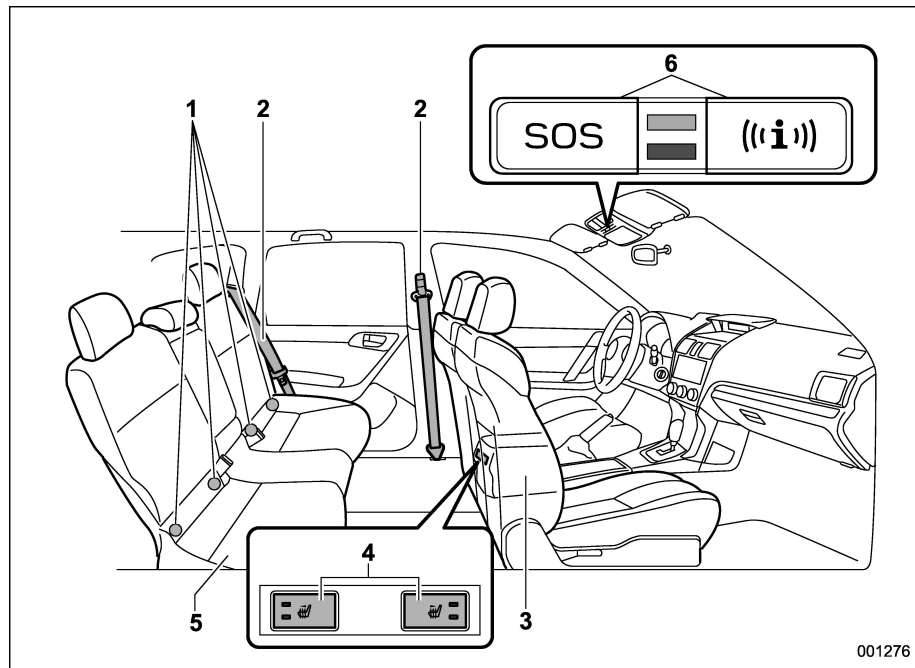

- 1) Lower anchorages for child restraint system (page 1-38)
- 2) Seatbelt (page 1-16)
- 3) Front seat (page 1-2)
- 4) Rear seat heater switch (page 1-10)
- 5) Rear seat (page 1-11)
- 6) Buttons for SUBARU STARLINK

NOTE


For U.S.-spec. models with SUBARU STARLINK: Refer to the Owner's Manual supplement for SUBARU STARLINK.

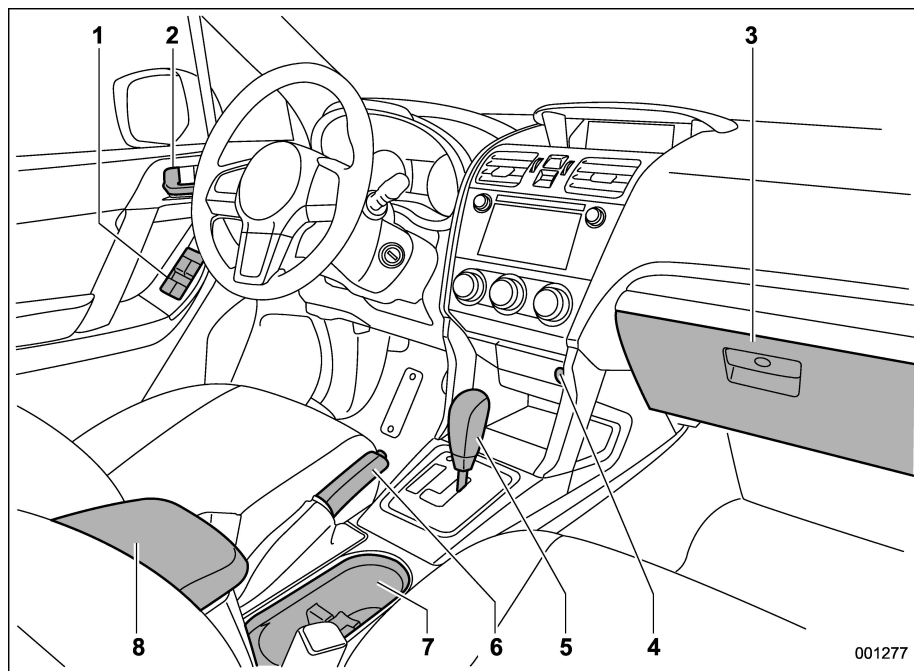

- 1) Power windows (page 2-32)
- 2) Door locks (page 2-6)
- 3) Glove box (page 6-6)
- 4) Front power supply socket (page 6-9)
- 5) Shift lever (MT) (page 7-22)/Select lever (CVT) (page 7-25)
- 6) Parking brake lever (page 7-48)
- 7) Cup holder (page 6-7)
- 8) Center console (page 6-6)


001277

■ Instrument panel

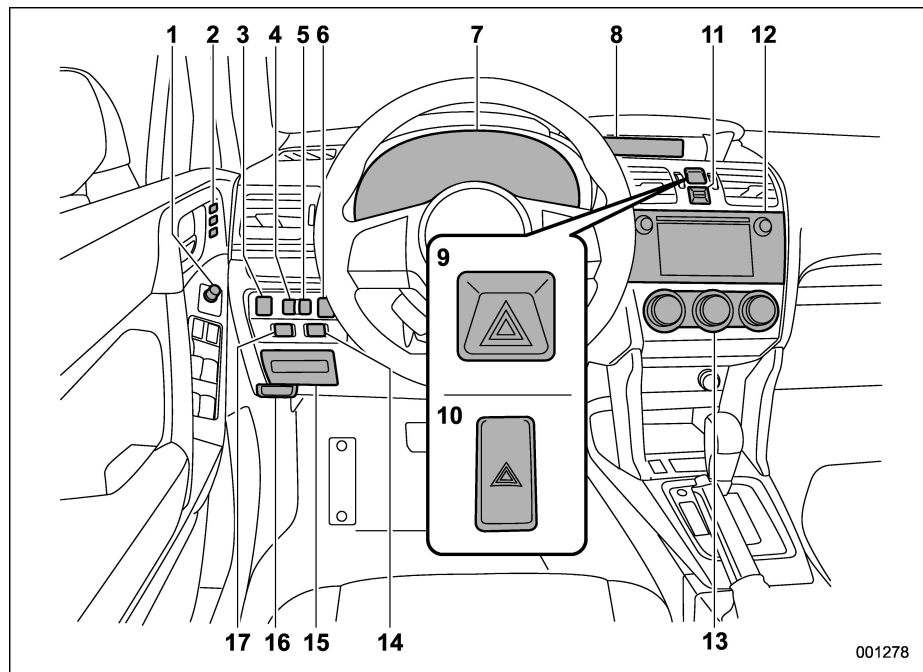

- 1) Outside mirror switch (page 3-116)
- 2) Seat position memory switch (page 1-5)
- 3) Steering Responsive Headlight OFF switch (models with Steering Responsive Headlight) (page 3-99)/Steering responsive fog light off switch (if equipped) (page 3-103)
- 4) Illumination brightness control (page 3-101)
- 5) BSD/RCTA OFF switch (page 7-59)
- 6) Vehicle Dynamics Control OFF switch (models without power rear gate) (page 7-41)/Memory switch (models with power rear gate) (page 2-43)
- 7) Combination meter (page 3-9)
- 8) Information display (page 3-34)/Multi function display (page 3-44)
- 9) Hazard warning flasher switch (models with multi function display) (page 3-8)
- 10) Hazard warning flasher switch (models without multi function display) (page 3-8)
- 11) Multi function display control switch (page 3-44)
- 12) Audio (page 5-1)
- 13) Climate control (page 4-1)
- 14) Power rear gate switch (page 2-39)
- 15) Fuse box (page 11-37)
- 16) Hood lock release (page 11-7)
- 17) Vehicle Dynamics Control OFF switch (models with power rear gate) (page 7-41)


■ Steering wheel

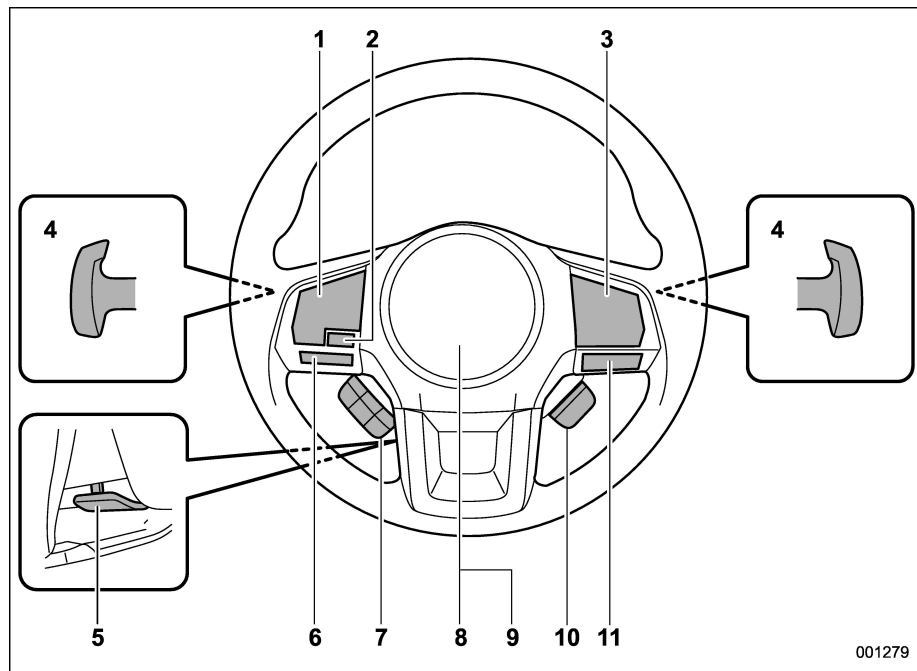

- 1) Audio control switches (page 5-63)
- 2) Talk switch for voice command system (page 5-81)
- 3) Cruise control (page 7-54)
- 4) Shift paddle (page 7-28)
- 5) Tilt/telescopic lock lever (page 3-118)
- 6) Hands-free phone switches (page 5-73)
- 7) Multi information display control switches (page 3-39)
- 8) SRS airbag (page 1-43)
- 9) Horn (page 3-119)
- 10) Heated steering wheel switch (page 3-119)
- 11) SI-DRIVE switches (page 7-34)

001279


■ Light control and wiper control levers/switches

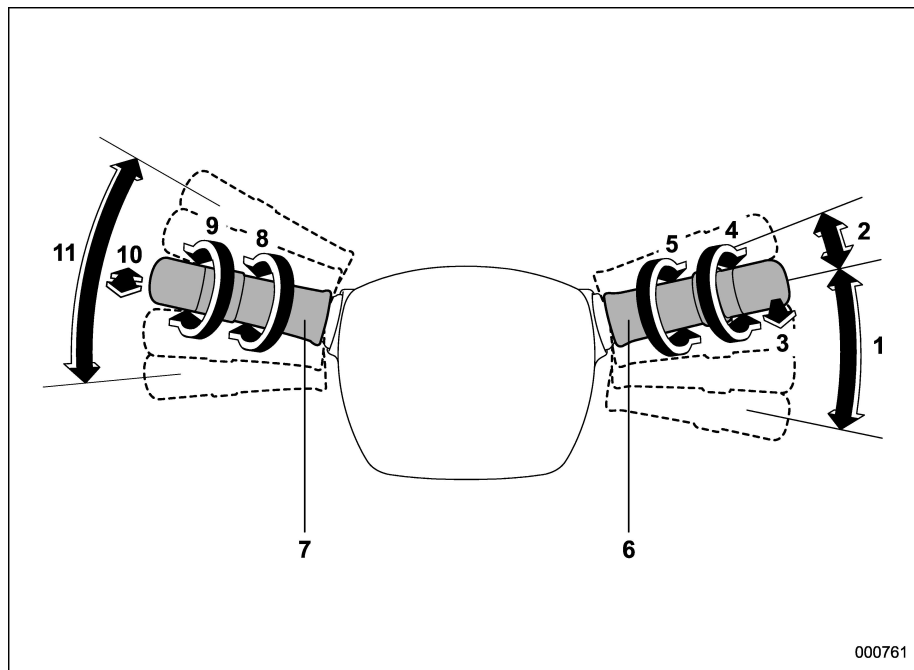

- 1) Windshield wiper (page 3-104)
- 2) Mist (page 3-105)
- 3) Windshield washer (page 3-106)
- 4) Rear window wiper and washer switch (page 3-106)
- 5) Wiper intermittent time control switch (page 3-105)
- 6) Wiper control lever (page 3-105)
- 7) Light control switch (page 3-93)
- 8) Fog light switch (page 3-102)
- 9) Headlight ON/OFF/AUTO (page 3-93)
- 10) Headlight flasher High/Low beam change (page 3-95)
- 11) Turn signal lever (page 3-100)

■ Combination meter


▼ U.S.-spec. models (type A)

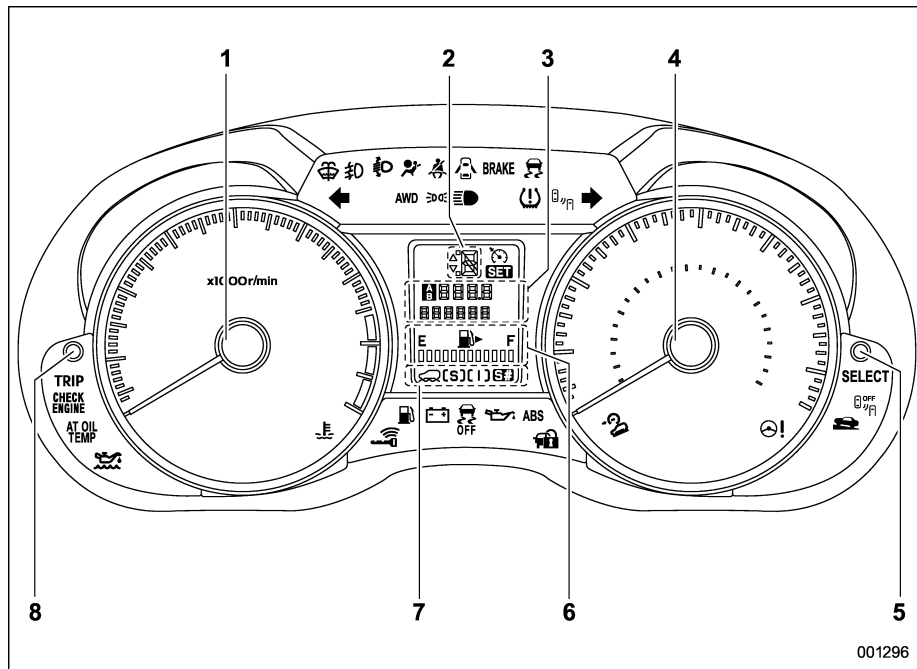

- 1) Tachometer (page 3-11)
- 2) Select lever/gear position indicator (page 3-31)
- 3) Trip meter and odometer (page 3-10)
- 4) Speedometer (page 3-10)
- 5) Information display selection knob (page 3-34)
- 6) Fuel gauge (page 3-12)
- 7) X-mode (if equipped) (page 7-43)/SI-DRIVE (if equipped) (page 7-32)
- 8) Trip meter A/B selection and trip meter reset knob (page 3-10)

The illustration above is a typical example. For some models, the combination meter may be slightly different than that shown in the illustration.

▼ U.S.-spec. models (type B)

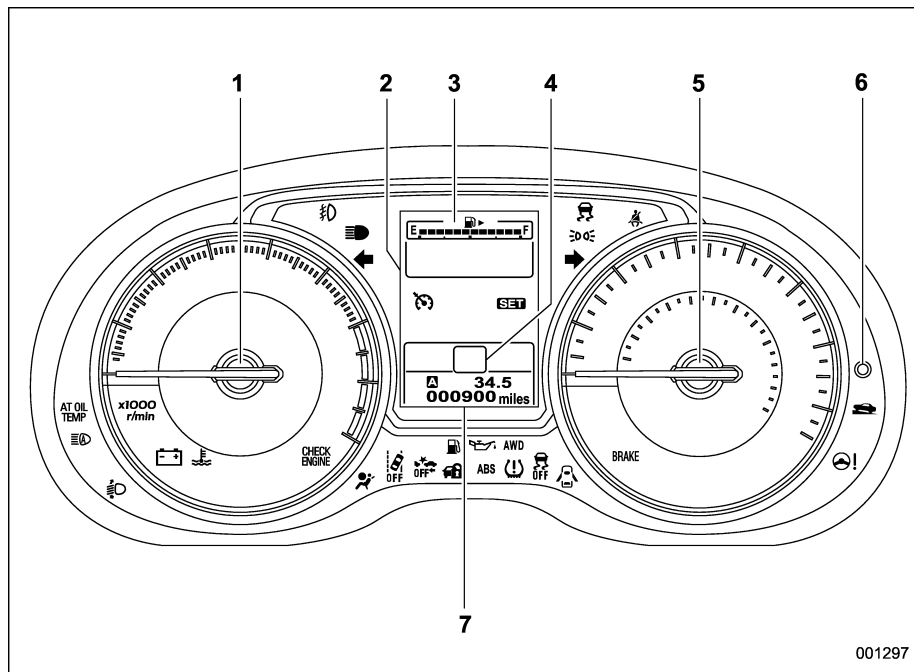


- 1) Tachometer (page 3-11)
- 2) Multi information display (page 3-39)
- 3) Fuel gauge (page 3-12)
- 4) Select lever/gear position indicator (page 3-31)
- 5) Speedometer (page 3-10)
- 6) Trip meter A/B selection and trip meter reset knob (page 3-10)
- 7) Trip meter and odometer (page 3-10)

The illustration above is a typical example. For some models, the combination meter may be slightly different than that shown in the illustration.

001297


▼ Canada-spec. and Mexico-spec. models (type A)

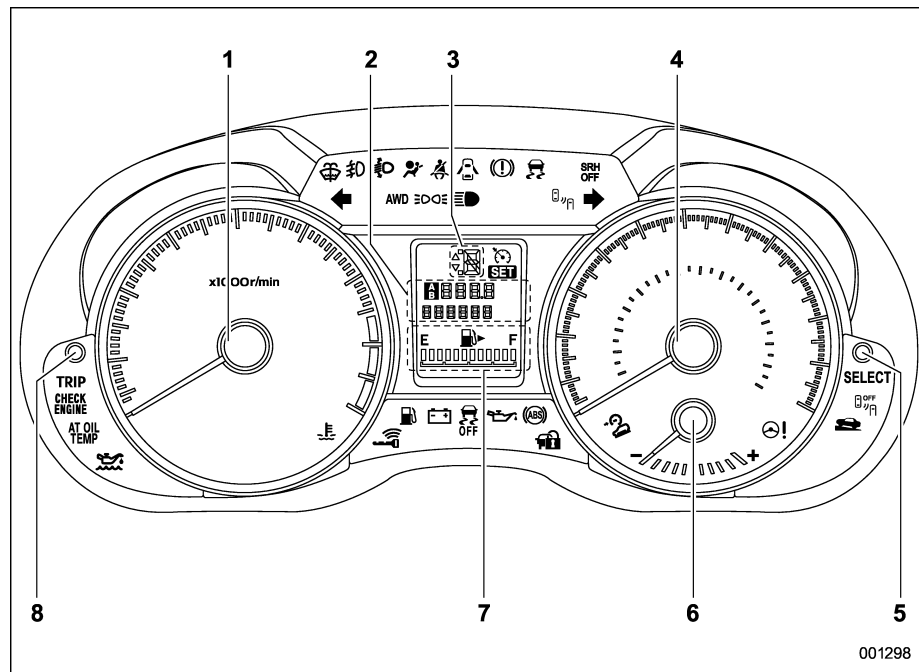

- 1) Tachometer (page 3-11)
- 2) Trip meter and odometer (page 3-10)
- 3) Select lever/gear position indicator (page 3-31)
- 4) Speedometer (page 3-10)
- 5) Information display selection knob (page 3-34)
- 6) ECO gauge (Mexico-spec. models) (page 3-12)
- 7) Fuel gauge (page 3-12)
- 8) Trip meter A/B selection and trip meter reset knob (page 3-10)

The illustration above is a typical example. For some models, the combination meter may be slightly different than that shown in the illustration.

▼ Canada-spec. and Mexico-spec. models (type B)

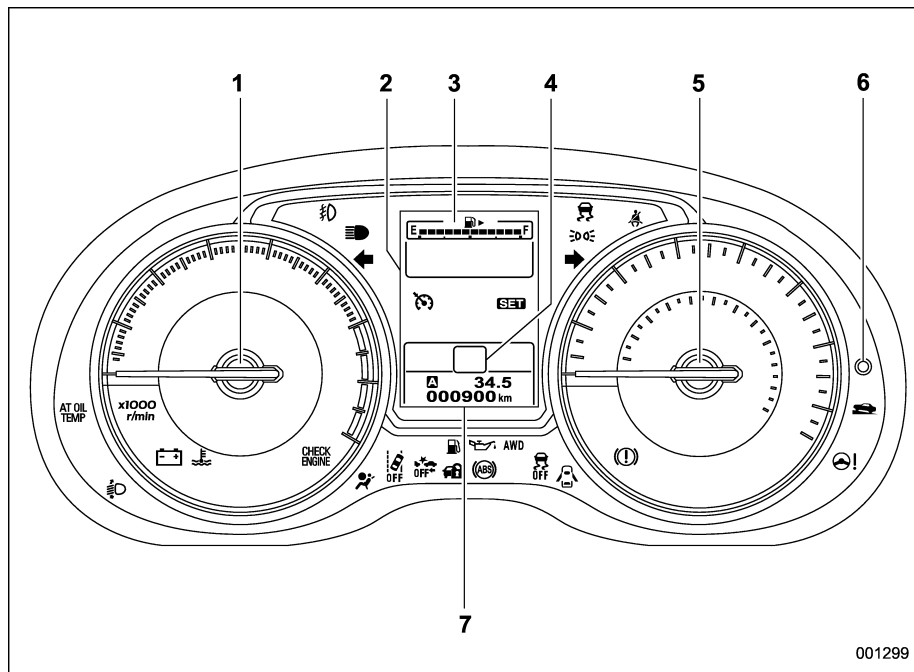

- 1) Tachometer (page 3-11)
- 2) Multi information display (page 3-39)
- 3) Fuel gauge (page 3-12)
- 4) Select lever/gear position indicator (page 3-31)
- 5) Speedometer (page 3-10)
- 6) Trip meter A/B selection and trip meter reset knob (page 3-10)
- 7) Trip meter and odometer (page 3-10)

The illustration above is a typical example. For some models, the combination meter may be slightly different than that shown in the illustration.

001299

■ Warning and indicator lights

Mark	Name	Page
	Seatbelt warning light	3-14
PASSENGER 	Front passenger's seatbelt warning light	3-14
	SRS airbag system warning light	3-15
ON / 	Front passenger's frontal airbag ON indicator	3-16
OFF / 	Front passenger's frontal airbag OFF indicator	3-16
CHECK ENGINE	CHECK ENGINE warning light/Malfunction indicator light	3-16
	Coolant temperature low indicator light/ Coolant temperature high warning light	3-17
	Charge warning light	3-18
	Oil pressure warning light	3-18
	Engine low oil level warning light	3-18

Mark	Name	Page
AT OIL TEMP	AT OIL TEMP warning light (CVT models)	3-19
ABS / 	ABS warning light	3-21
BRAKE / 	Brake system warning light	3-21
	Door open warning light	3-23
AWD	AWD warning light (CVT models)	3-23
	Power steering warning light	3-23
	Hill start assist warning light/Hill start assist OFF indicator light	3-23
	Vehicle Dynamics Control warning light/ Vehicle Dynamics Control operation indicator light	3-24
	Vehicle Dynamics Control OFF indicator light	3-25
	Turn signal indicator lights	3-32

Mark	Name	Page
	High beam indicator light	3-32
	High beam assist indicator light (if equipped)	3-32
	Automatic headlight beam leveler warning light (if equipped)	3-32
SRH OFF	Steering Responsive Headlight warning light/Steering Responsive Headlight OFF indicator light (if equipped)	3-99
	Front fog light indicator light (if equipped)	3-33
	Access key warning light (if equipped)	3-26
	Security indicator light	3-30
	Headlight indicator light (if equipped)	3-33
	Cruise control indicator light	3-32
SET	Cruise control set indicator light	3-32

Mark	Name	Page
	X-mode indicator light (if equipped)	3-33
	Hill descent control indicator light (if equipped)	3-33
	Low fuel warning light	3-22
	Low tire pressure warning light (U.S.-spec. models)	3-19
	Windshield washer fluid warning light	3-19
[S]	Sport (S) mode indicator light (if equipped)	3-31
[I]	Intelligent (I) mode indicator light (if equipped)	3-31
S#	Sport Sharp (S#) mode indicator light (if equipped)	3-31
SRF OFF	Steering responsive fog lights warning indicator/Steering responsive fog lights OFF indicator (if equipped)	3-33
	BSD/RCTA warning indicator (if equipped)	3-33
	BSD/RCTA OFF indicator (if equipped)	3-34

Mark	Name	Page
RAB	RAB warning light (if equipped)	3-34
RAB OFF	RAB OFF indicator (if equipped)	3-34

Function settings

A SUBARU dealer can change the settings of the functions shown in the following table to meet your personal requirements. Contact the nearest SUBARU dealer for details. If your vehicle is equipped with a multi function display, the settings for some of these functions can be changed using the display. For details, refer to “Multi function display” 3-44.

Item	Function	Possible settings	Default setting
Alarm system	Alarm system	Operation/Non-operation	Operation
	Monitoring start delay time (after closure of doors)	0 seconds/30 seconds	30 seconds
	Impact sensor operation (only models with shock sensors (dealer option))	Operation/Non-operation	Non-operation
	Passive arming (models without “keyless access with push-button start system”)	Operation/Non-operation	Non-operation
	Dome light and map lights illumination	ON/OFF	OFF
Keyless access (if equipped)	Hazard warning flasher	Operation/Non-operation	Operation
	Audible signal	Operation/Non-operation	Operation
	Audible signal volume	Level 1 to 7	Level 5
	Door unlock selection function (driver’s door unlock)	Driver’s door only/All doors	Driver’s door only
	Door unlock selection function (rear gate unlock)	Rear gate only/All doors	Rear gate only
Remote keyless entry system	Hazard warning flasher	Operation/Non-operation	Operation
	Audible signal	Operation/Non-operation	Operation
	Audible signal volume	Level 1 to 7	Level 5
Key lock-in prevention	Key lock-in prevention	Operation/Non-operation	Operation
Defogger and deicer system for models with the automatic climate control system	Rear window defogger, outside mirror defogger and windshield wiper deicer	Operation for 15 minutes/ Continuous operation	Operation for 15 minutes

Item	Function	Possible settings	Default setting
Dome light	Operation of dome light/map light/cargo area light OFF delay timer	OFF/10 seconds/20 seconds/30 seconds	30 seconds
Map light			
Cargo area light			
Battery drainage prevention function	Battery drainage prevention function	Operation/Non-operation	Operation
Seatbelt warning	Sounds a chime while driving	Operation/Non-operation	Operation
Auto on/off headlights (if equipped)	Sensitivity of the operation of the auto on/off headlights	Low/Mid/High/Max	Mid
Reverse gear interlocked rear wiper	Reverse gear interlocked rear wiper operation	Operation/Non-operation	Non-operation* ¹
One-touch lane changer	Operation of the one-touch lane changer	Operation/Non-operation	Operation
High beam assist function (if equipped)	High beam assist function	Operation/Non-operation	Operation
Welcome lighting function (if equipped)	Welcome lighting function (when approaching)	OFF/30 seconds/60 seconds/90 seconds	30 seconds
	Welcome lighting function (when exiting)	OFF/30 seconds/60 seconds/90 seconds	30 seconds

*1: Except for U.S. model, the default setting will be "Operation".