









DOORS AND WINDOWS

5-2

	Page
S SPECIFICATIONS AND SERVICE DATA.....	2
1. Door Alignment.....	2
C COMPONENT PARTS	4
1. Front Door	4
2. Rear Door.....	5
3. Fixed Glass	6
4. Front Door Glass.....	7
5. Rear Door Glass	8
6. Rear Gate and Glass	9
7. Door Lock Assembly	10
8. Door Trim.....	12
9. Weatherstrip	13
W SERVICE PROCEDURE	14
1. Procedure Chart for Removing and Installing Door and Related Parts ..	14
2. Door.....	15
3. Rear Gate.....	27
4. Procedure Chart for Removal and Installing Window Glass	31
5. Windshield.....	32
6. Rear Window Glass	35
7. Rear Quarter Glass	38
K DIAGNOSTICS.....	41
1. Door Glass	41
2. Door Lock System.....	44
3. Power Window	44

1. Door Alignment




A: SEDAN AND WAGON MODEL

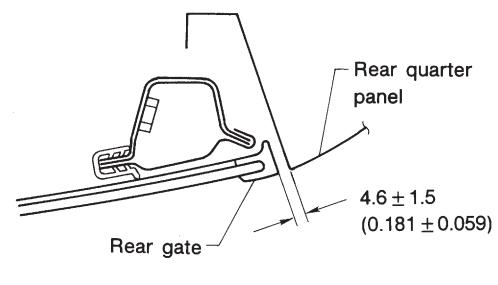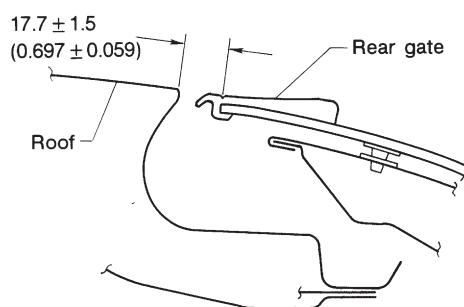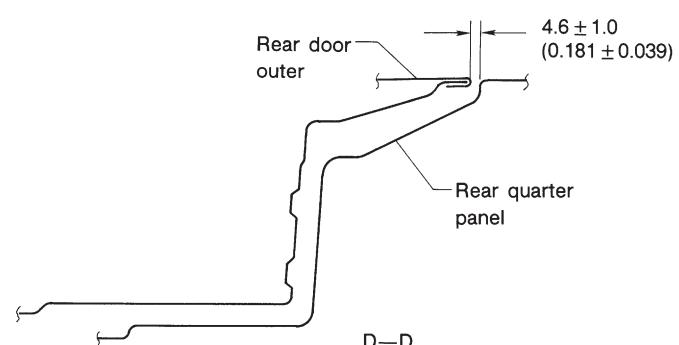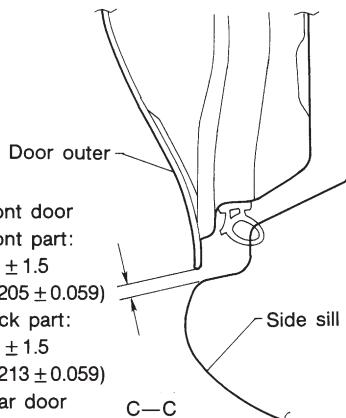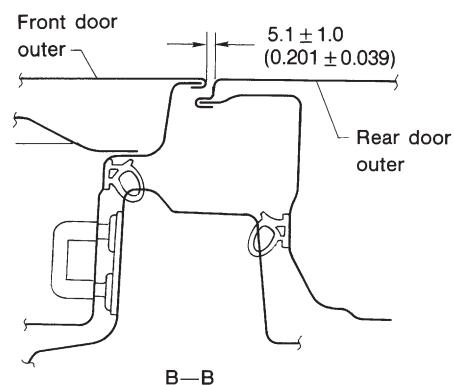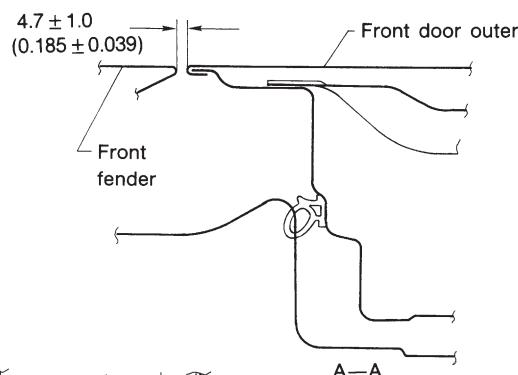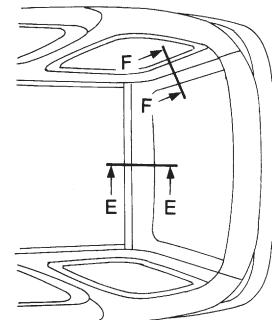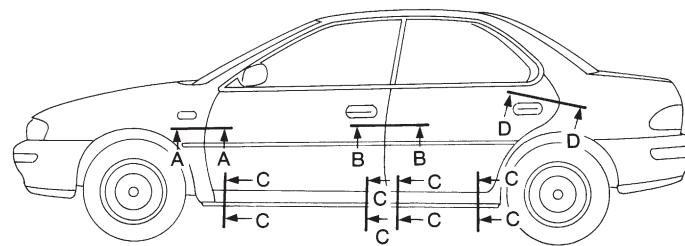


Unit: mm (in)

G5M0485

B: COUPE MODEL

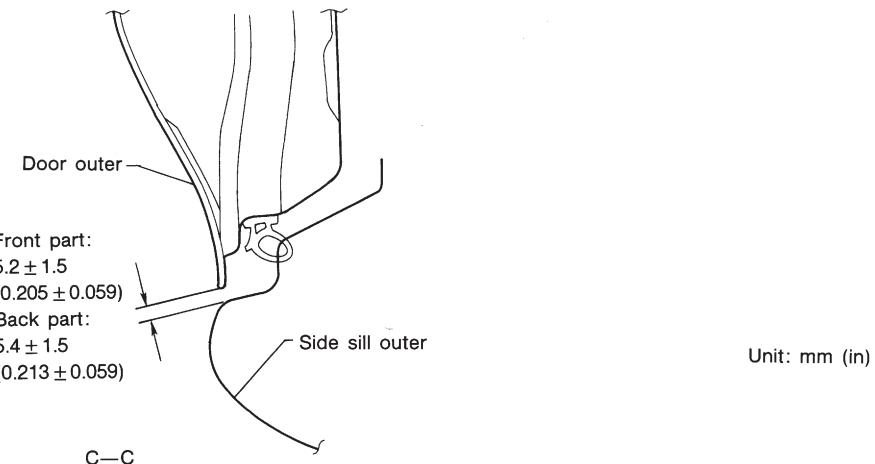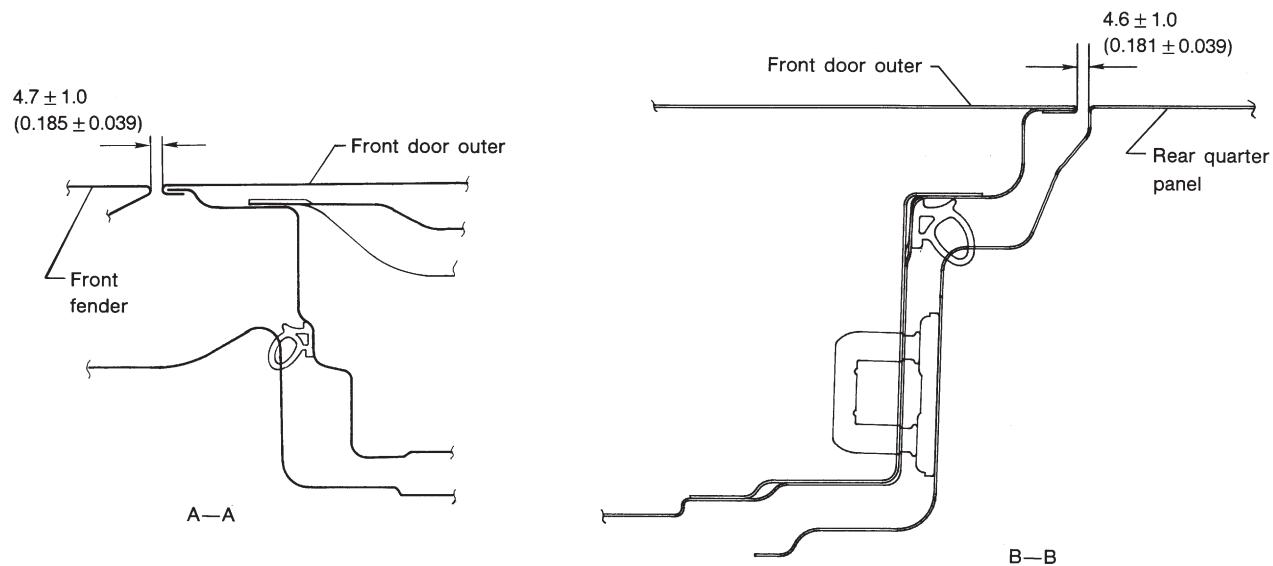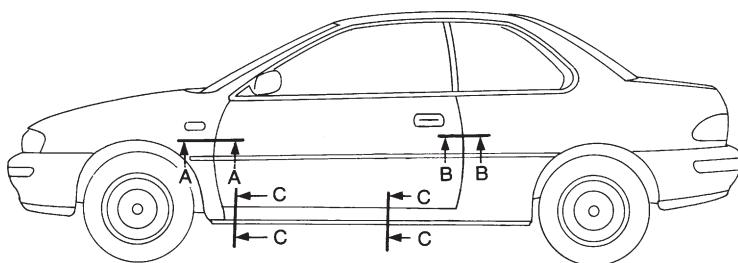

1. Front Door

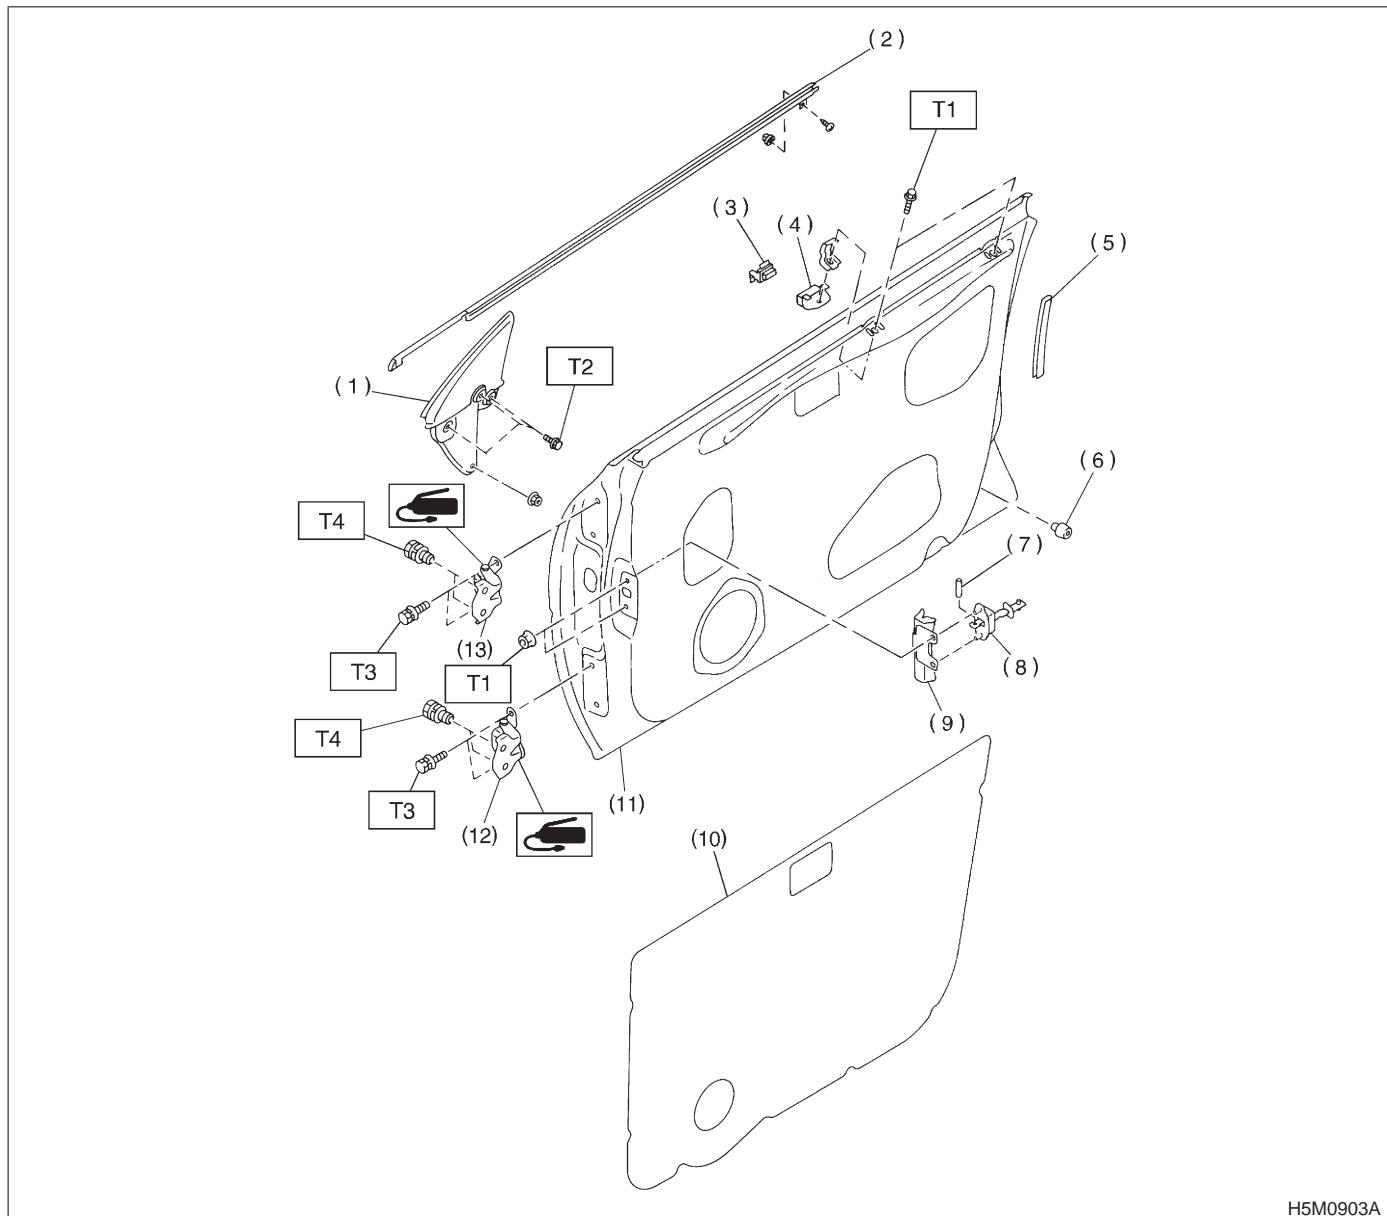

H5M0903A


- (1) Gusset
- (2) Weatherstrip
- (3) Stabilizer (Outer)
- (4) Stabilizer (Inner)
- (5) Protector
- (6) Stopper
- (7) Knock pin

- (8) Checker
- (9) Guide
- (10) Sealing cover
- (11) Door panel
- (12) Lower hinge
- (13) Upper hinge

Tightening torque: N·m (kg·m, ft·lb)

- T1: 7.4±2.0 (0.75±0.2, 5.4±1.4)
- T2: 13±3 (1.3±0.3, 9.4±2.2)
- T3: 25±3 (2.5±0.3, 18.1±2.2)
- T4: 29±5 (3.0±0.5, 21.7±3.6)

2. Rear Door

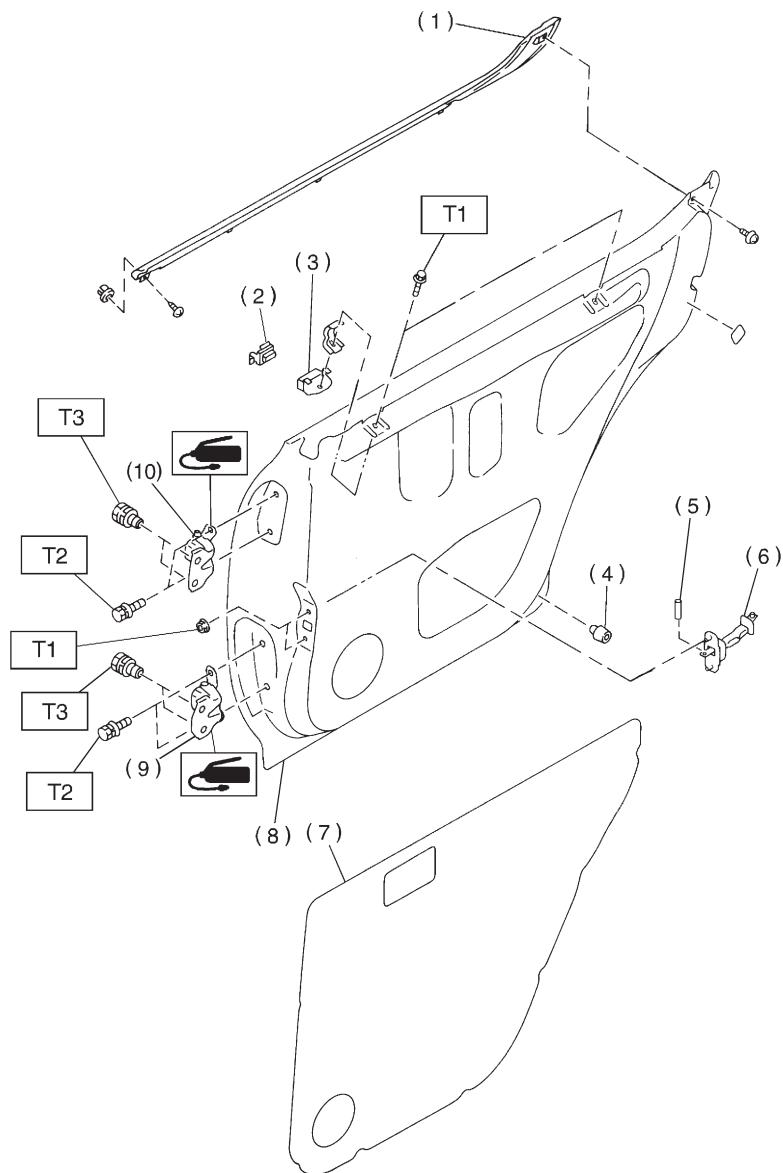


H5M0904A

- (1) Weatherstrip
- (2) Stabilizer (Outer)
- (3) Stabilizer (Inner)
- (4) Stopper
- (5) Knock pin
- (6) Checker

- (7) Seating cover
- (8) Door panel
- (9) Lower hinge
- (10) Upper hinge

Tightening torque: N·m (kg·m, ft·lb)
T1: 7.4 ± 2.0 (0.75 \pm 0.2, 5.4 \pm 1.4)
T2: 25 ± 3 (2.5 \pm 0.3, 18.1 \pm 2.2)
T3: 29 ± 5 (3.0 \pm 0.5, 21.7 \pm 3.6)

3. Fixed Glass

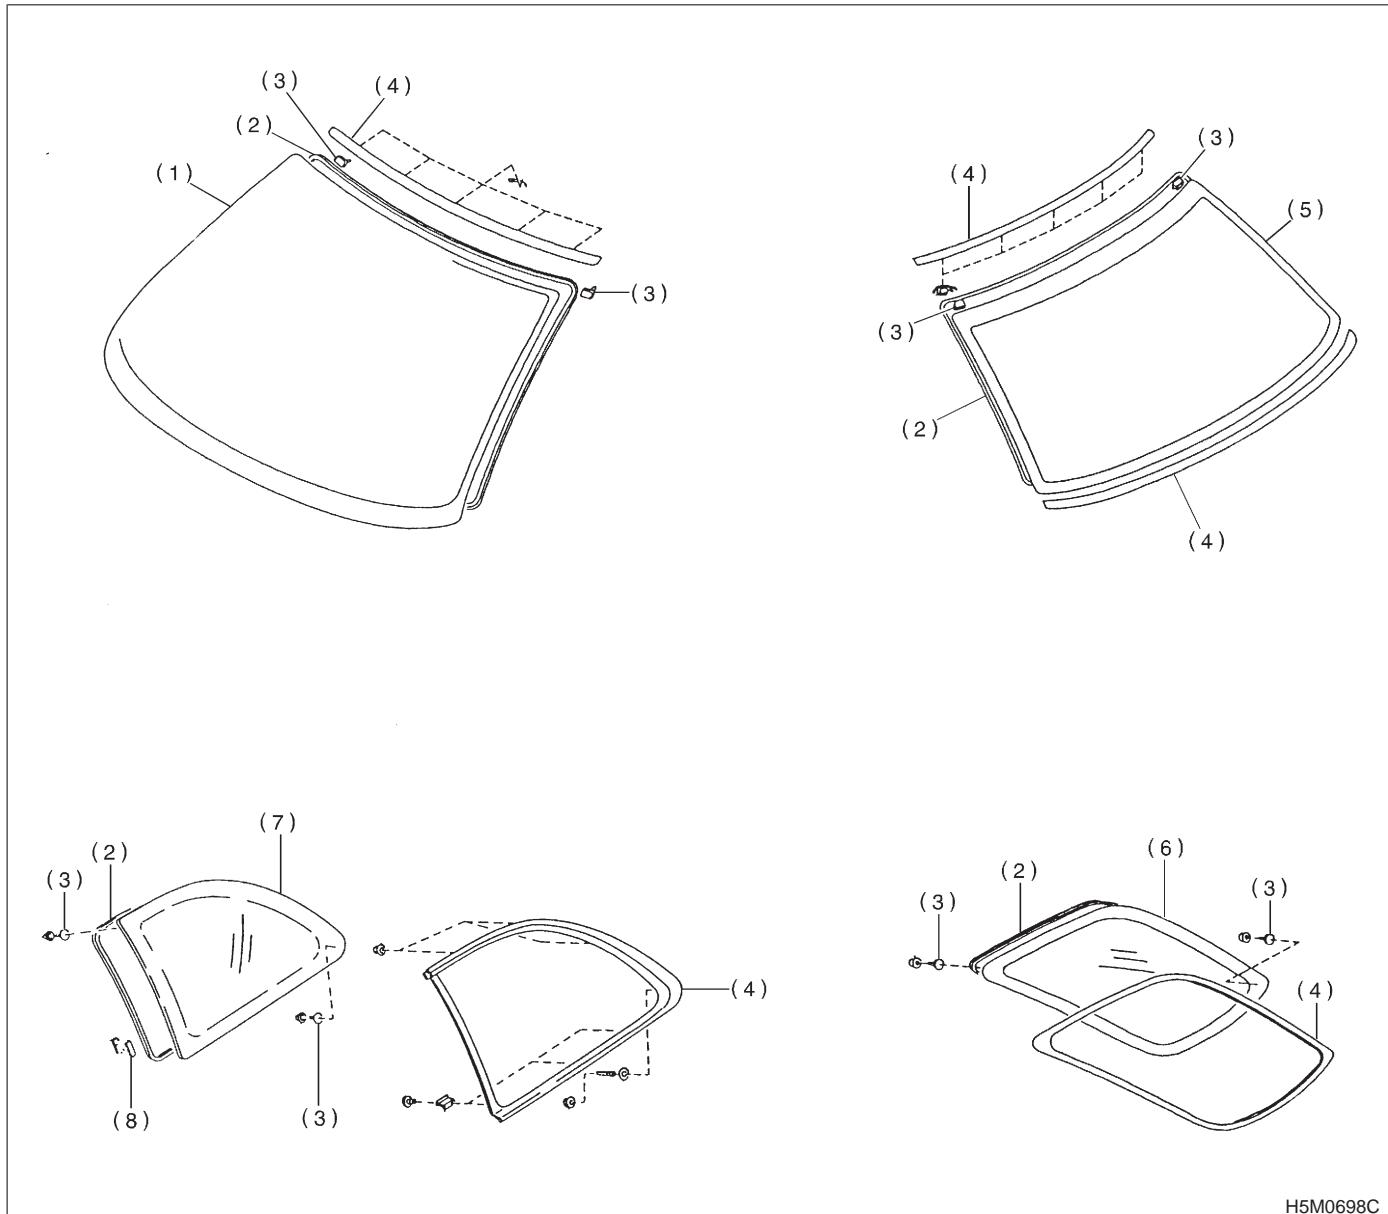

(1) Windshield glass

(2) Dam rubber

(3) Locate pin

(4) Molding


(5) Rear window glass

(6) Rear quarter glass (Wagon)

(7) Rear quarter glass (Coupe)

(8) Fastener

4. Front Door Glass

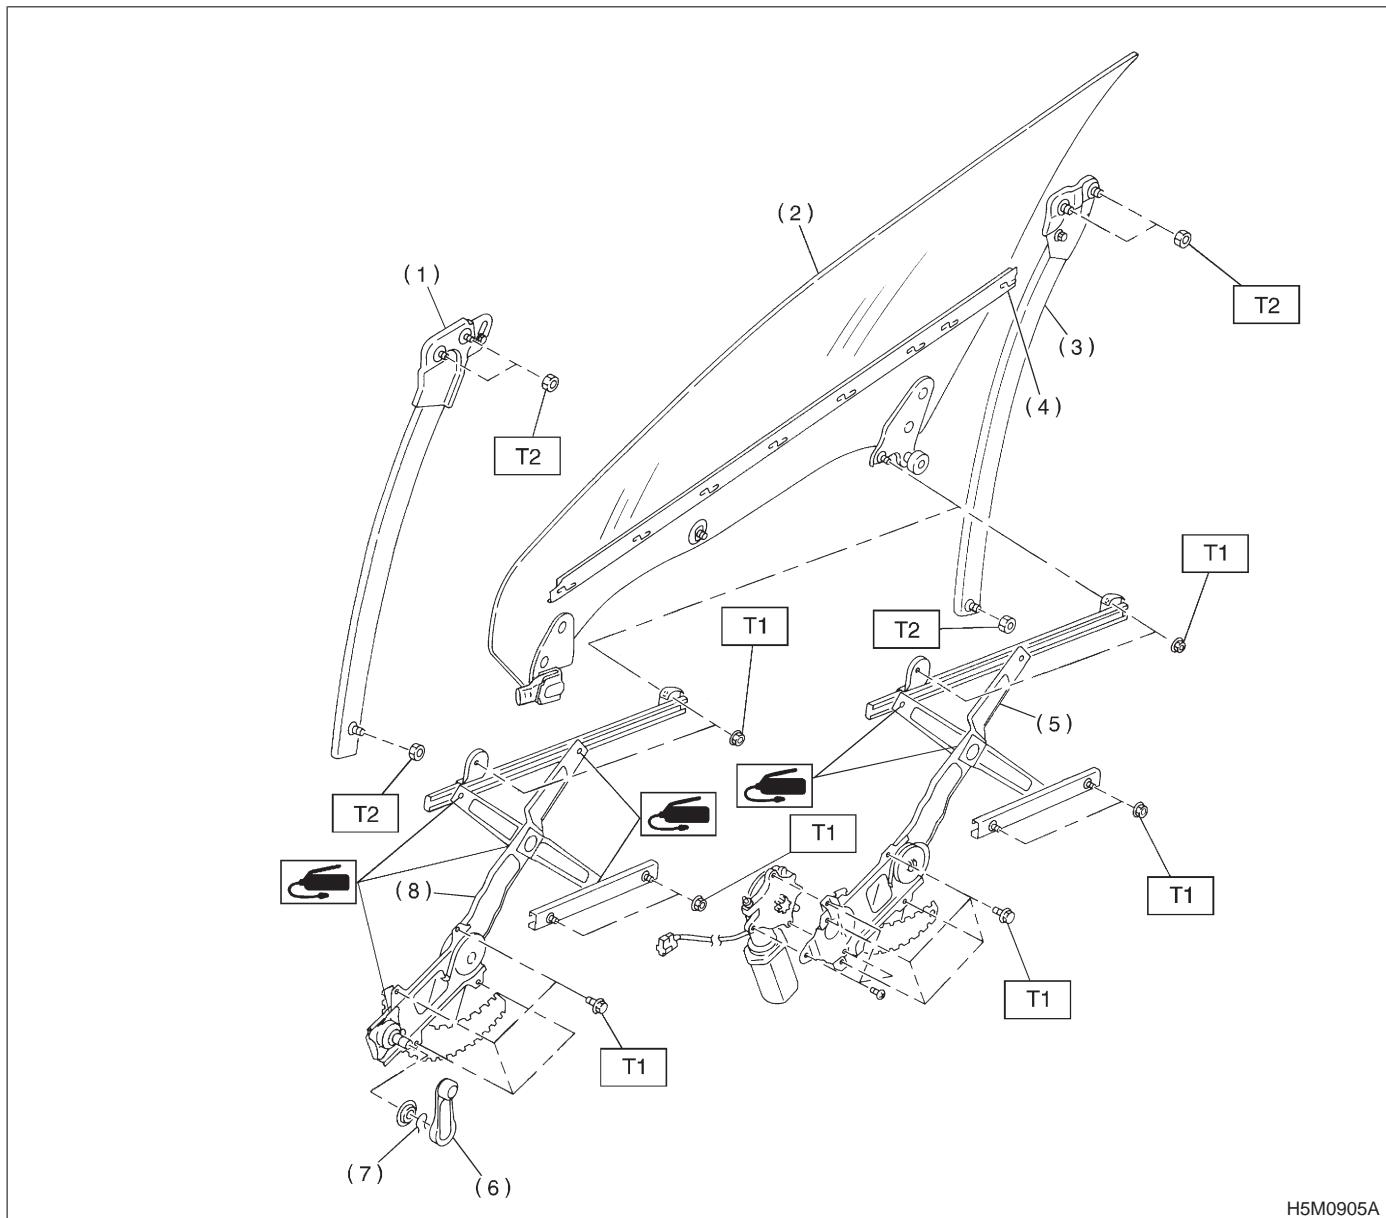


H5M0905A

(1) Door sash (Front)	(6) Regulator handle (Except power window)
(2) Glass	(7) Retainer spring
(3) Door sash (Rear)	(8) Regulator ASSY
(4) Weatherstrip (Inner)	
(5) Regulator and motor ASSY	

Tightening torque: N·m (kg·m, ft·lb)T1: 7.4 ± 2.0 (0.75 \pm 0.2, 5.4 \pm 1.4)T2: 14 ± 4 (1.4 \pm 0.4, 10.1 \pm 2.9)

5. Rear Door Glass

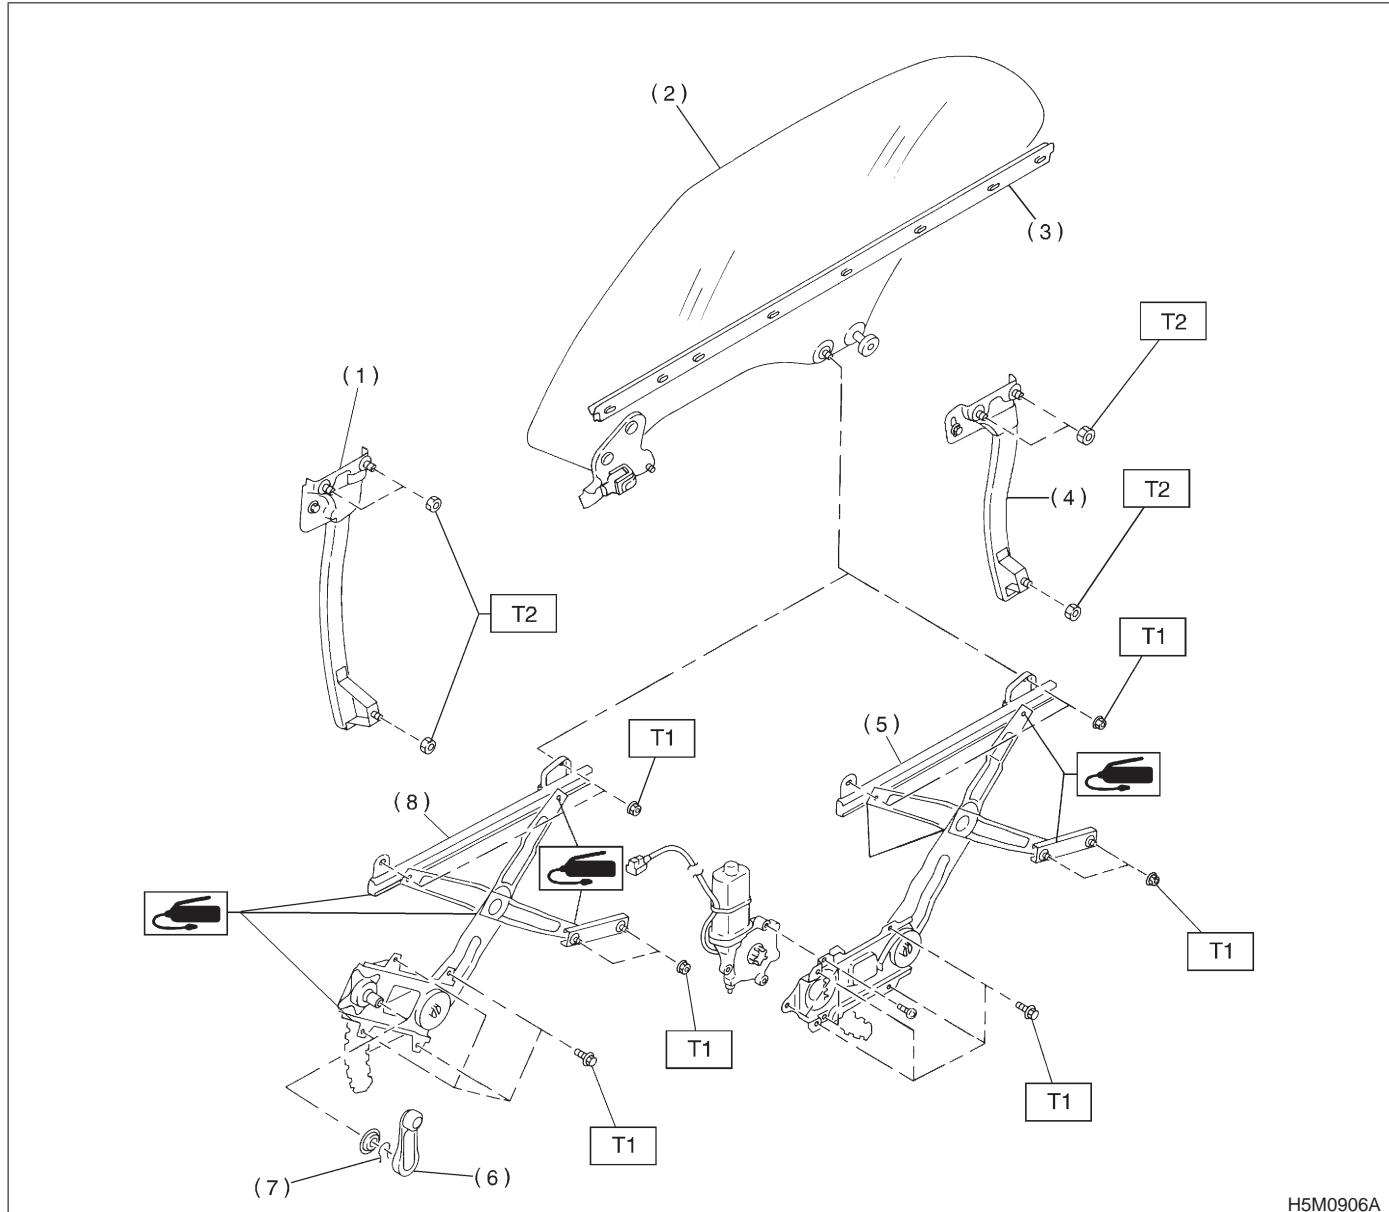


H5M0906A

(1) Door sash (Front)	(6) Regulator handle (Except power window)
(2) Glass	(7) Retainer spring
(3) Weatherstrip (Inner)	(8) Regulator ASSY
(4) Door sash (Rear)	
(5) Regulator and motor ASSY	

Tightening torque: N·m (kg·m, ft·lb)T1: 7.4 ± 2.0 (0.75 \pm 0.2, 5.4 \pm 1.4)T2: 14 ± 4 (1.4 \pm 0.4, 10.1 \pm 2.9)

6. Rear Gate and Glass

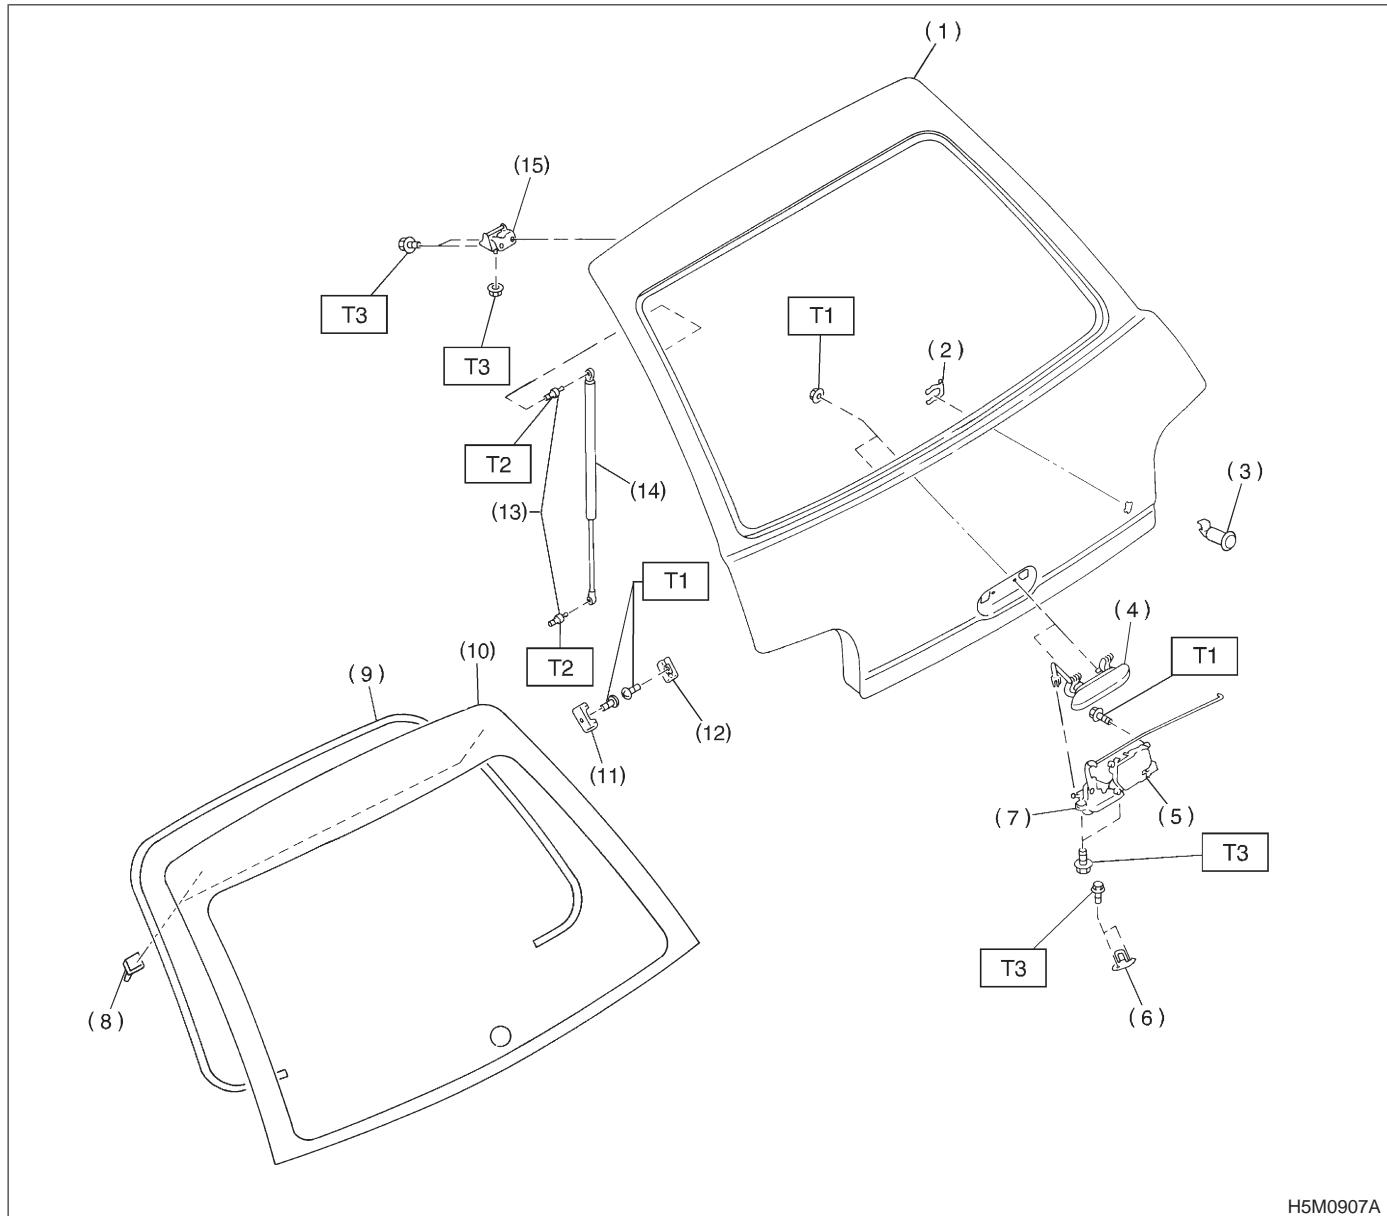


H5M0907A

(1) Rear gate	(8) Glass pin	(15) Hinge
(2) Clip	(9) Trim	
(3) Key cylinder	(10) Glass	
(4) Outer handle	(11) Buffer	
(5) Auto-door lock actuator	(12) Rear gate side buffer	
(6) Striker	(13) Stud	
(7) Latch	(14) Gas stay	

Tightening torque: N·m (kg·m, ft·lb)**T1: 7.4 ± 2.0 (0.75±0.2, 5.4±1.4)****T2: 14 ± 4 (1.4±0.4, 10.1±2.9)****T3: 25 ± 5 (2.5±0.5, 18.1±3.6)**

7. Door Lock Assembly

A: FRONT DOOR

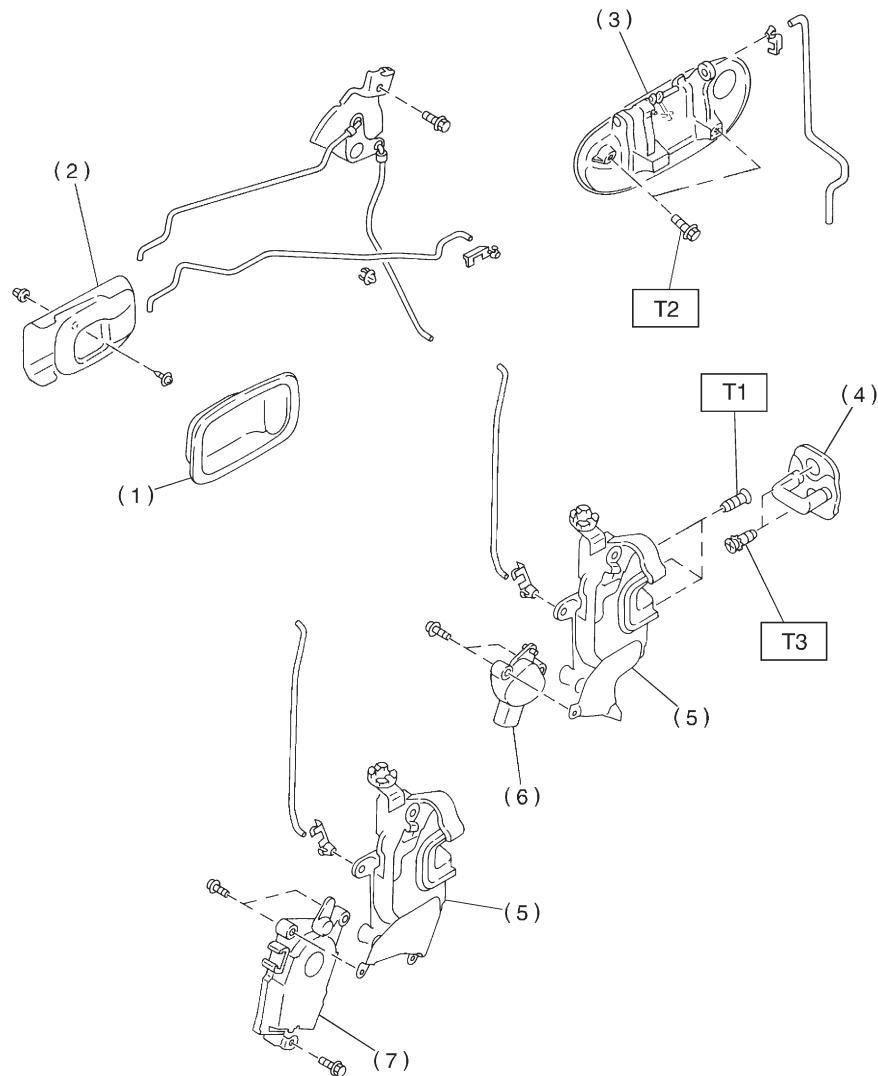

H5M0908A

- (1) Cover
- (2) Inner remote ASSY
- (3) Door outer handle
- (4) Striker
- (5) Door latch

- (6) Switch ASSY
- (7) Auto-door lock actuator


Tightening torque: N·m (kg·m, ft·lb)

T1: 6.4 ± 2.0 (0.65 \pm 0.2, 4.7 \pm 1.4)

T2: 7.4 ± 2.0 (0.75 \pm 0.2, 5.4 \pm 1.4)

T3: 14 ± 4 (1.4 \pm 0.4, 10.1 \pm 2.9)

B: REAR DOOR

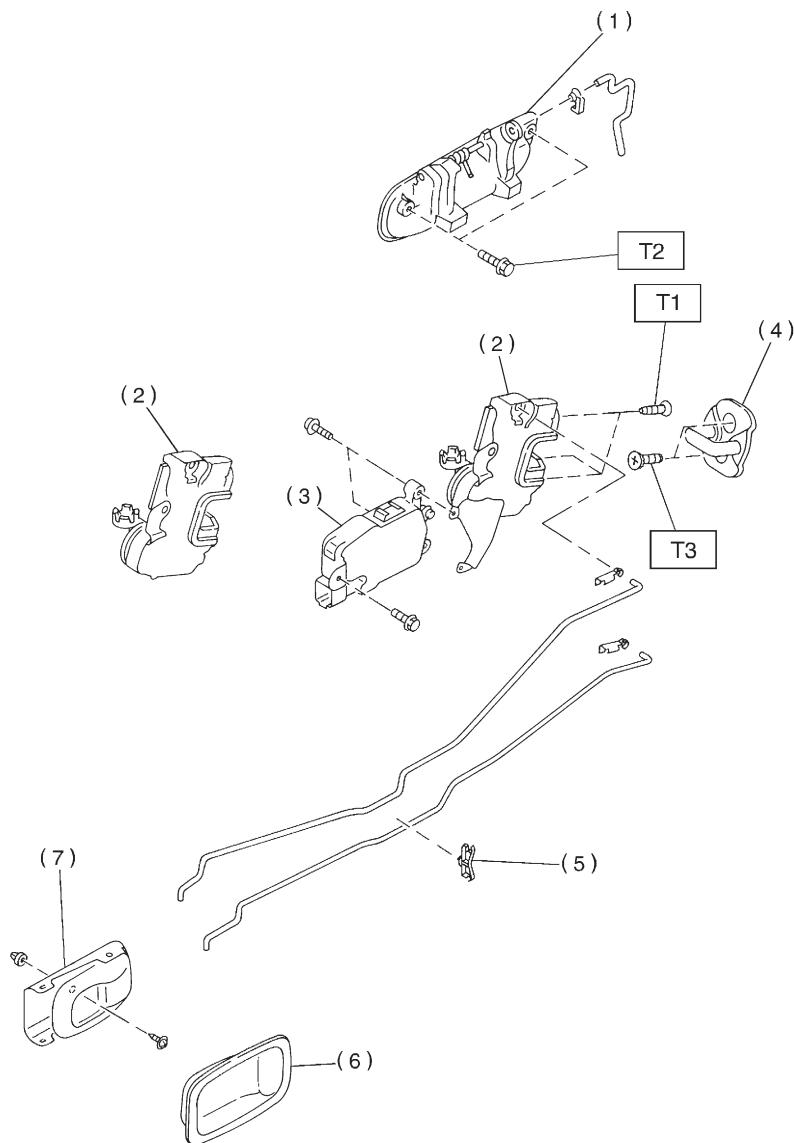


H5M0909A

(1) Door outer handle	(6) Cover
(2) Door latch	(7) Inner remote ASSY
(3) Auto-door lock actuator	
(4) Striker	
(5) Rod holder	

Tightening torque: N·m (kg·m, ft·lb)***T1: 6.4±2.0 (0.65±0.2, 4.7±1.4)******T2: 7.4±2.0 (0.75±0.2, 5.4±1.4)******T3: 14±4 (1.4±0.4, 10.1±2.9)***

8. Door Trim

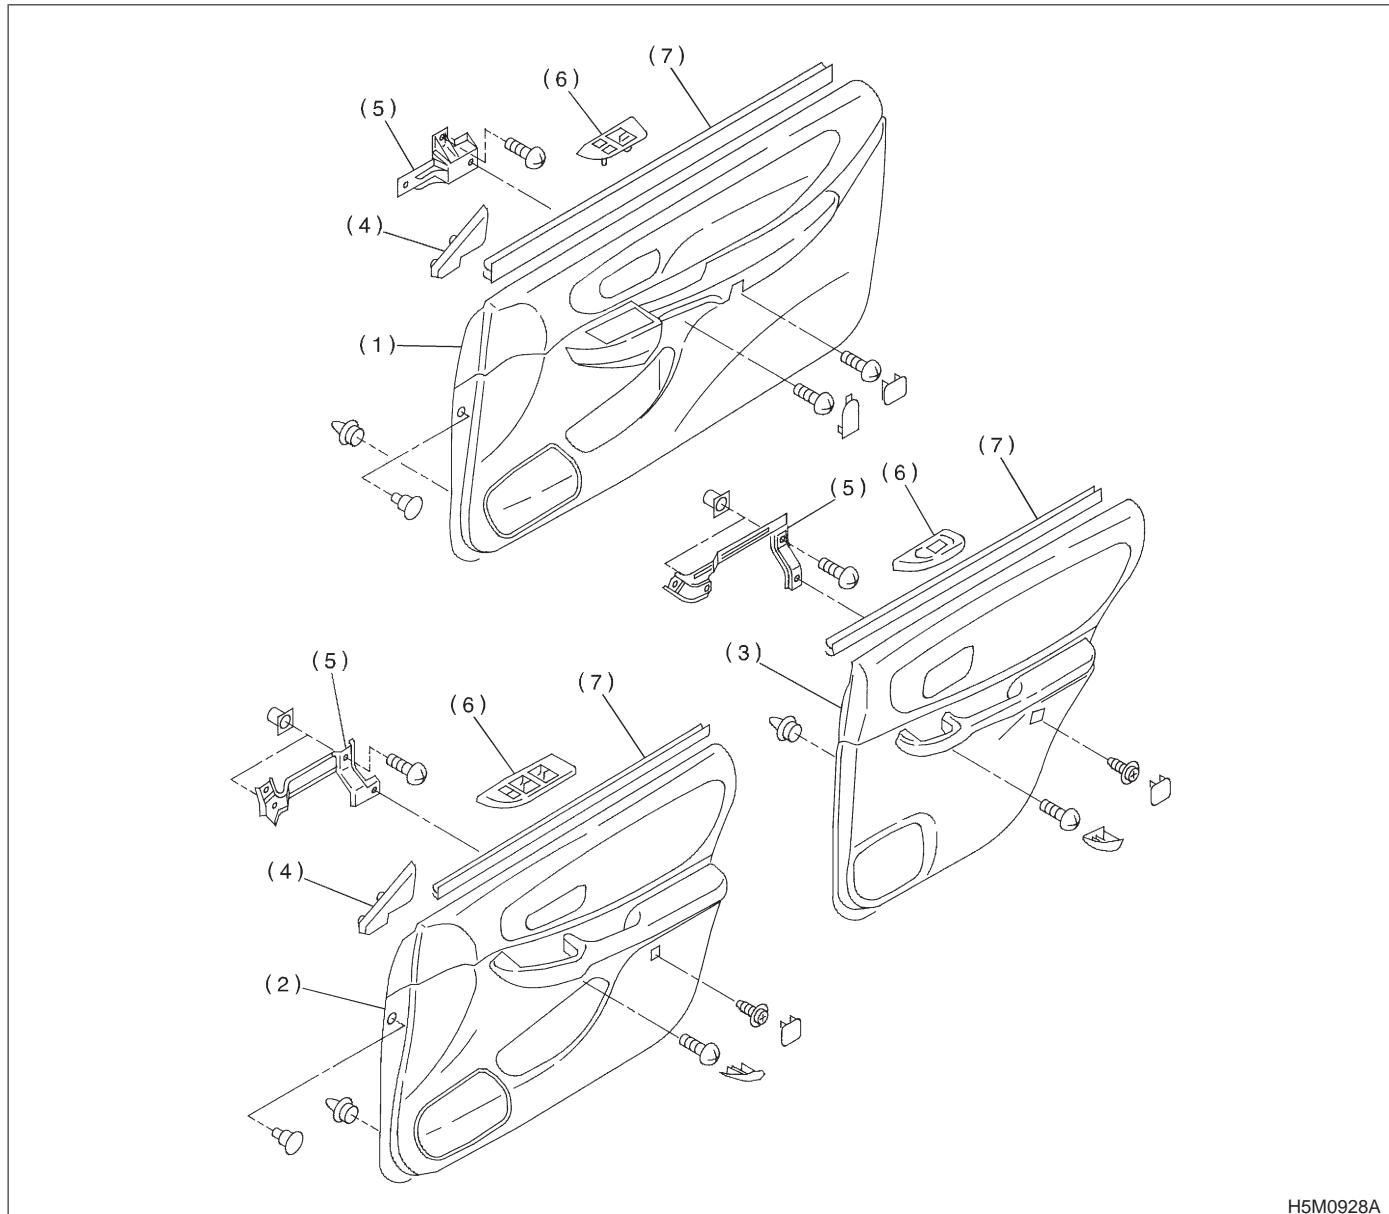

H5M0928A

(1) Trim panel (Coupe)

(2) Trim panel (Except coupe/front)

(3) Trim panel (Except coupe/rear)


(4) Gusset cover

(5) Bracket

(6) Cover

(7) Weatherstrip

9. Weatherstrip

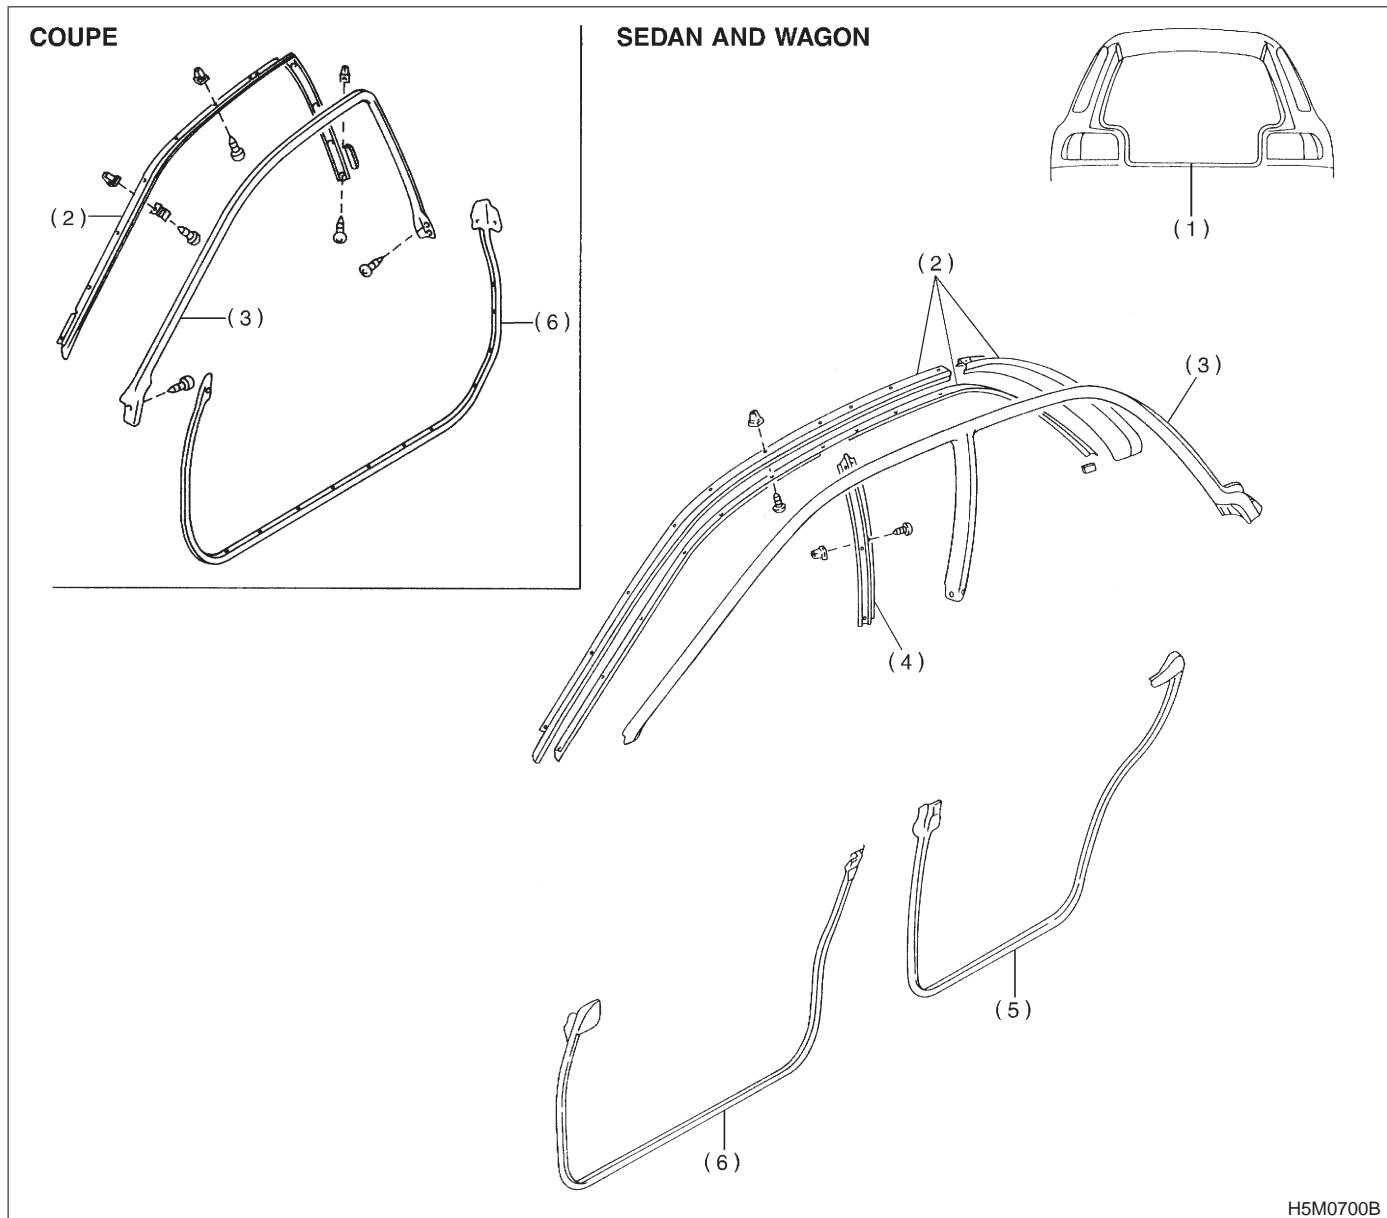


H5M0700B

- (1) Rear gate weatherstrip
(Wagon only)
- (2) Retainer and molding
- (3) Upper and side weatherstrip
- (4) Retainer (Center)
- (5) Weatherstrip (Rear door)
- (6) Weatherstrip (Front door)

1. Procedure Chart for Removing and Installing Door and Related Parts

NOTE:

This flowchart shows the main procedures for removing and installing the door and its related parts. For details, refer to the text.

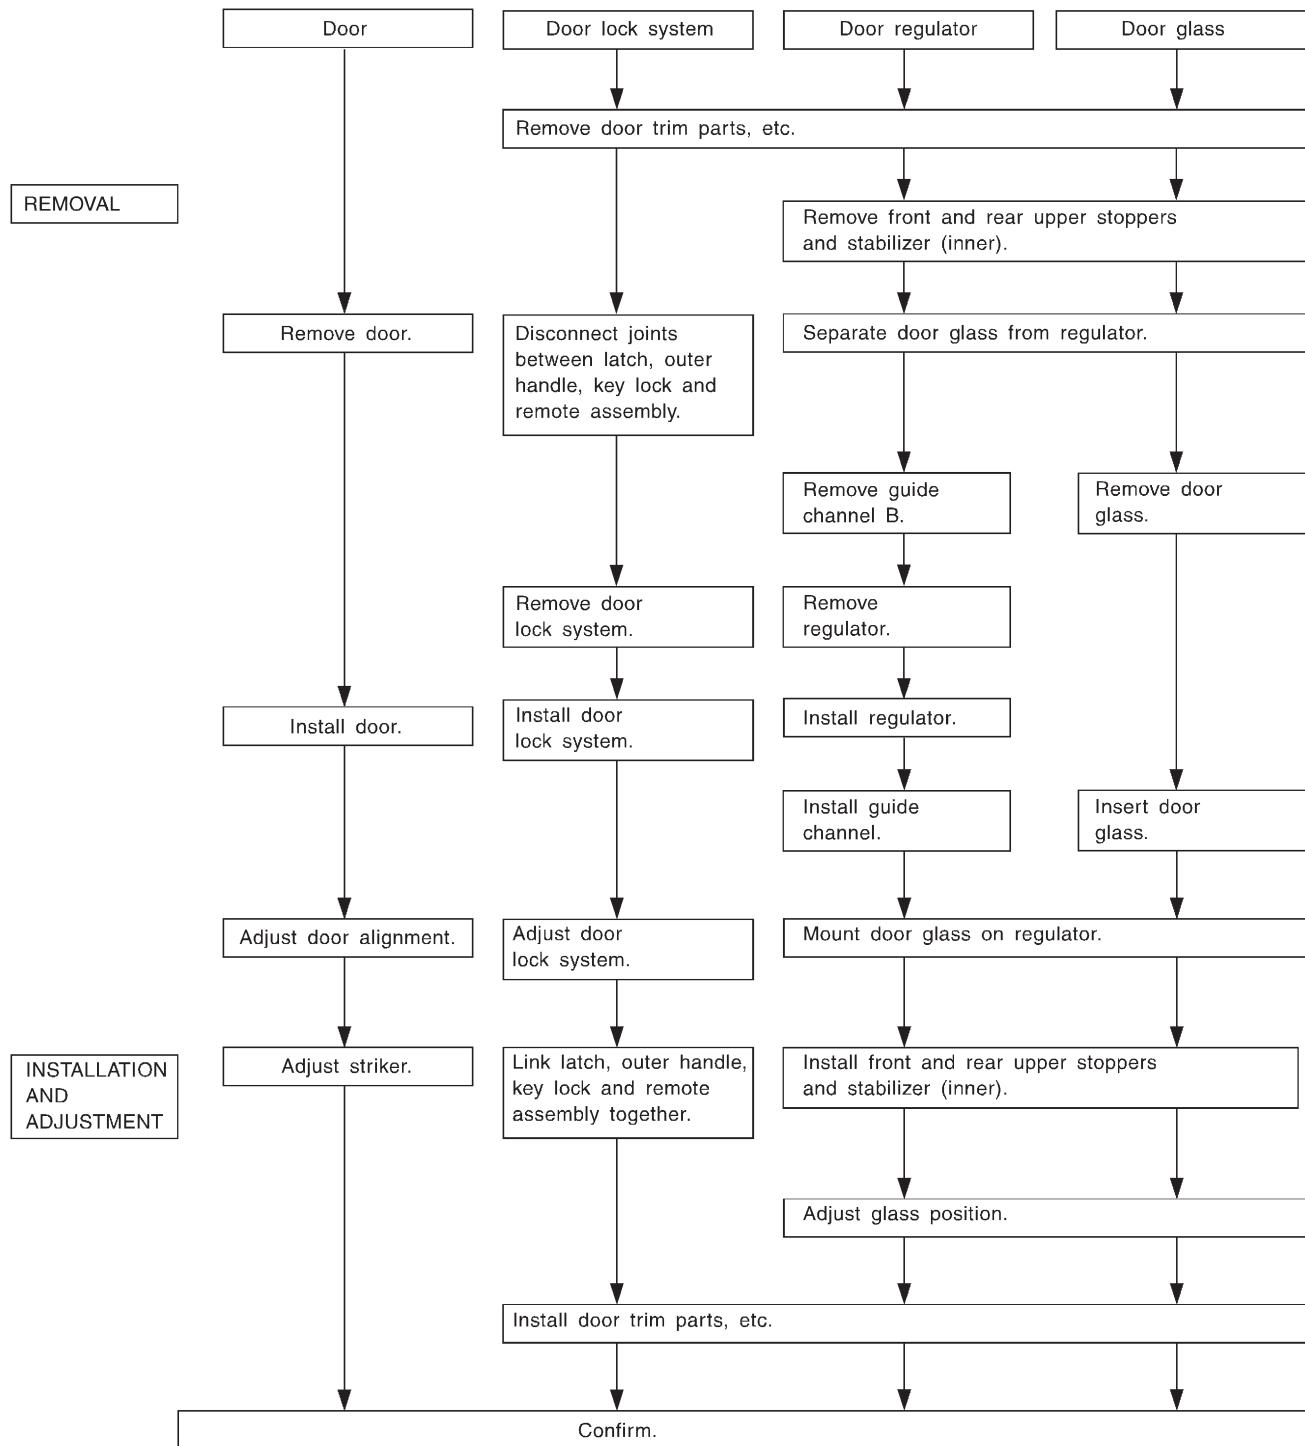


2. Door

A: REMOVAL AND INSTALLATION

1. DOOR ASSEMBLY

- 1) Remove lower trim and disconnect connectors from body harness.
- 2) Place a cloth or a wood block under door to prevent damage, and support it with a jack.
- 3) Remove checker pin by driving it upward. Be careful not to damage door and body.

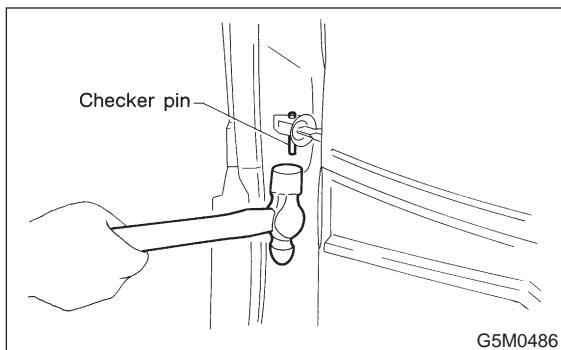

- 4) Remove bolts (M8) securing upper and lower hinges to door, and remove door from hinges.

Tightening torque:

$25 \pm 3 \text{ N}\cdot\text{m}$ ($2.5 \pm 0.3 \text{ kg}\cdot\text{m}$, $18.1 \pm 2.2 \text{ ft-lb}$)


- 5) Remove hinges by loosening hinges mounting bolt (M8) off of body.

Tightening torque:

$29 \pm 5 \text{ N}\cdot\text{m}$ ($3.0 \pm 0.5 \text{ kg}\cdot\text{m}$, $21.7 \pm 3.6 \text{ ft-lb}$)

CAUTION:

Work carefully to avoid damaging door.

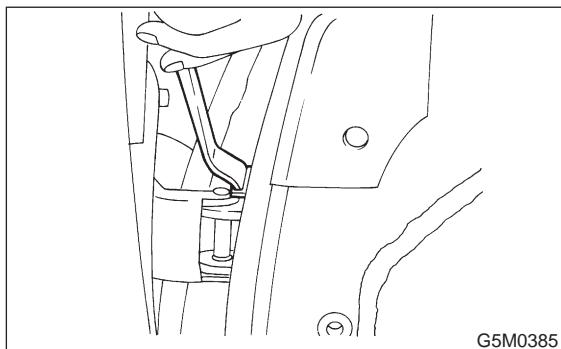


- 6) Installation is in the reverse order of removal.

NOTE:

Apply grease to moving parts of door hinges.


2. TRIM PANEL

- 1) Press retainer spring (A) with a thin flat-bladed screwdriver and then remove regulator handle (B). (models without power window)

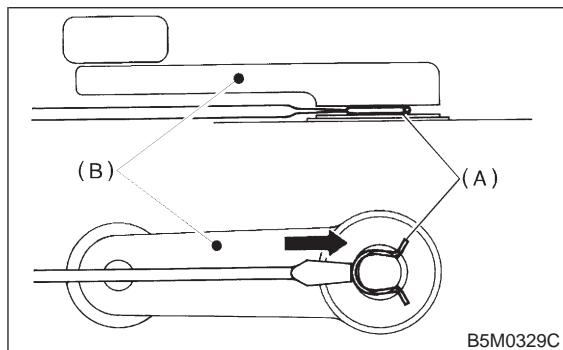

- 2) Using ST, disengage the clip.


ST 925580000 PULLER

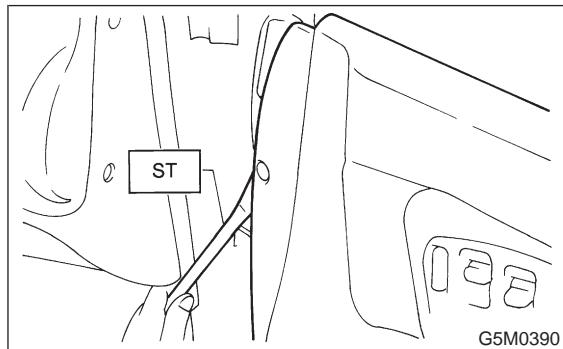

- 3) Remove gusset cover (C) and screws.
- 4) Remove trim panel and then disconnect connector. (models with power window)

CAUTION:

Be careful not to break clip by applying undue force.

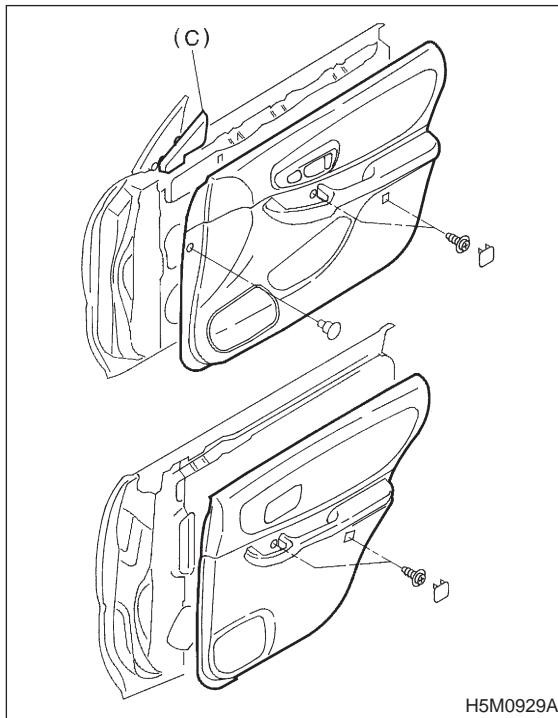


- 5) Installation is in the reverse order of removal.

3. SEALING COVER

- 1) Remove trim panel.
- 2) Remove speaker, trim bracket and remote assembly and disconnect connectors.
- 3) Remove sealer with a spatula.

CAUTION:

Be careful because cover may break if sealer is removed forcefully.

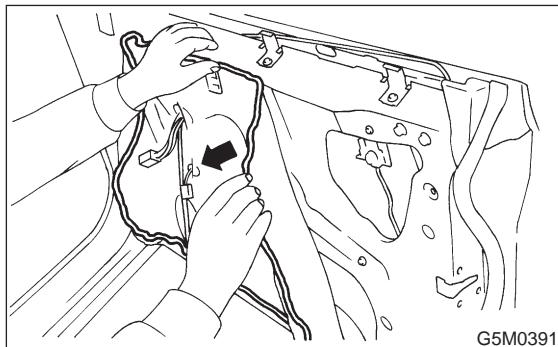

- 4) Installation is in the reverse order of removal.

NOTE:

- Confirm that sealer is properly applied without breaks. Then install sealing cover.

- When repairing or replacing sealing cover, use "CEMEDINE 5430L" as sealer. It may be overlaid on existing sealer.

Sealer:

CEMEDINE 5430L

CAUTION:


- Any breaks in sealer can cause water leakage or entry of air and dust. Be sure sealer is applied in a continuous line.
- Make sure sealing cover bonded areas are free from wrinkles or openings.

4. CHECKER

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Apply a cloth to door and body to prevent damaging them, and remove checker pin by driving it upward.

CAUTION:

Be careful not to damage door and body.

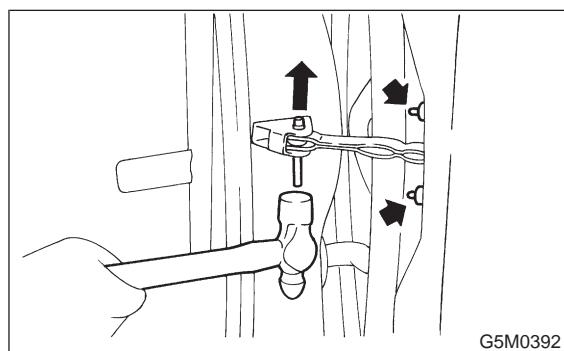


- 4) Completely close door glass.
- 5) Loosen two nuts securing checker, and take out checker through access hole in underside.
- 6) Installation should be made in the reverse order of removal.

Tightening torque:


$7.5 \pm 2.0 \text{ N}\cdot\text{m} (0.75 \pm 0.2 \text{ kg}\cdot\text{m}, 5.4 \pm 1.4 \text{ ft}\cdot\text{lb})$

5. INNER REMOTE

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Disconnect joints of two rods.

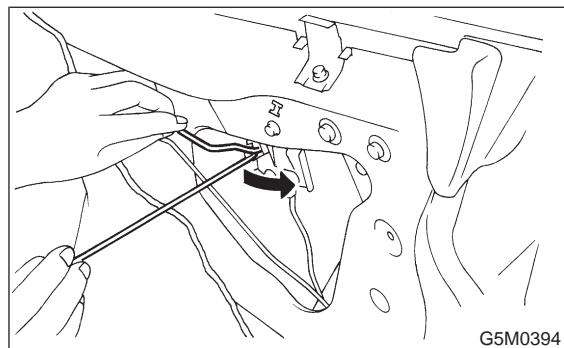

- 4) Unlatch rod holder.
- 5) Remove screws holding remote assembly.

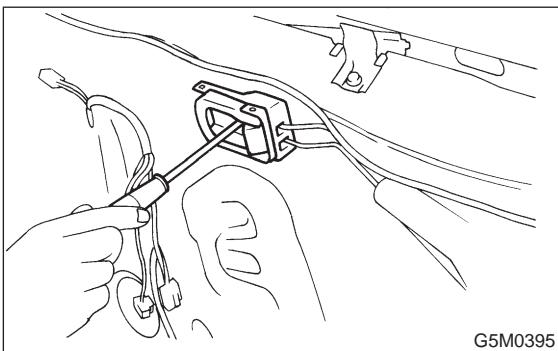

G5M0395


- 6) Installation is in the reverse order of removal.

NOTE:

If rear door is equipped with child safety lock, check that child lock lever moves without dragging.


6. DOOR LATCH

- 1) Remove trim panel.
- 2) Remove inner remote assembly.
- 3) Remove sealing cover around latch service hole.
- 4) Completely close door glass.
- 5) Remove latch and actuator assembly:
 - (1) Turn rod holder to disconnect joint between key lock and rod.
 - (2) Turn rod holder to disconnect joint between outer handle and rod.
 - (3) Turn rod holder to disconnect joint between crank and rod.

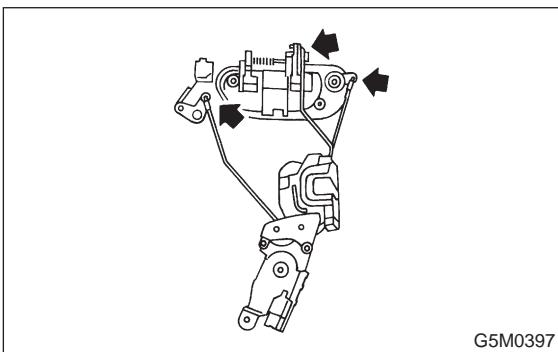

G5M0397

- 6) Loosen screws securing both latch and actuator, then remove latch and actuator assembly through service hole in bottom.

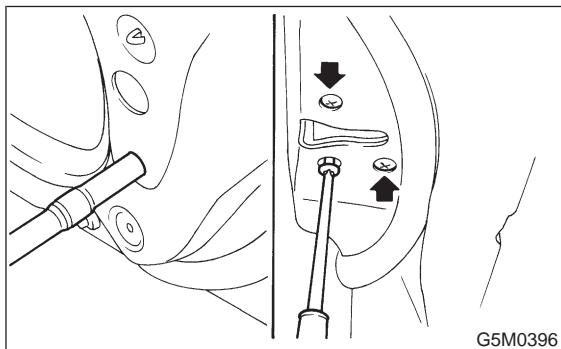

G5M0396

- 7) Installation is in the reverse order of removal.

Tightening torque (screw):

$6.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.65 \pm 0.2 \text{ kg}\cdot\text{m}$, $4.7 \pm 1.4 \text{ ft-lb}$)

NOTE:

- Check operation of each part.
- Check each sliding part for proper lubrication.

CAUTION:


After installation, be sure lock mechanism operates normally.

7. OUTER HANDLE

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Detach door latch rod from outer handle and key lock.
- 4) Loosen nut securing outer handle and then remove outer handle from outside.

CAUTION:

Be careful not to damage door.

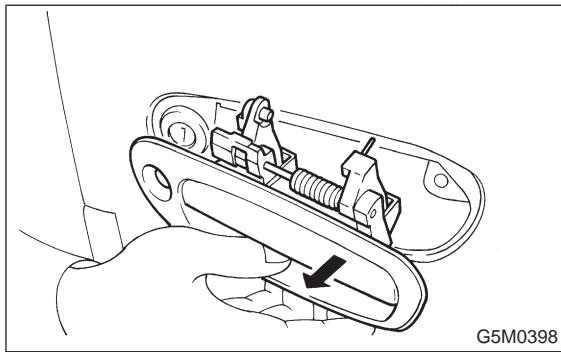

G5M0398

- 5) Installation is in the reverse order of removal.

Tightening torque:

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft-lb}$)

8. KEY LOCK

- 1) Remove trim panel.
- 2) Remove sealing cover.
- 3) Completely close door glass.
- 4) Remove outer handle.
- 5) Loosen spring securing key lock.

- 6) Remove key lock from outer handle.
- 7) Installation is in the reverse order of removal.

NOTE:

Install so that key slot in key lock comes to center of hole in outer handle.

9. GUSSET

- 1) Be sure window is all the way down.
- 2) Remove gusset cover.
- 3) Remove trim panel.
- 4) Remove door rearview mirror.
- 5) Remove outer weatherstrip.
- 6) Remove sealing cover.

NOTE:

Be careful not to drop nuts on the "IN" side.


- 7) Remove bolts and nuts which secure gusset.

Tightening torque: Bolt

3 ± 3 N·m (1.3±0.3 kg-m, 9.4±2.2 ft-lb)

Tightening torque: Nut

7.4 ± 2.0 N·m (0.75±0.2 kg-m, 5.4±1.4 ft-lb)

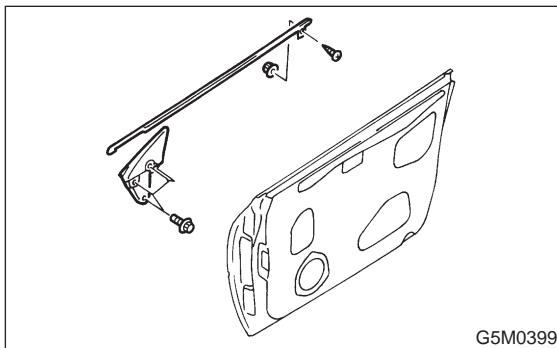

G5M0399

- 8) Lift out gusset.
- 9) Installation is in the reverse order of removal.

B: ADJUSTMENT**1. DOOR ASSEMBLY**

- 1) Using ST, loosen bolts securing upper and lower hinges to body, and adjust fore-and-aft and vertical alignment of door.

ST 925610000 DOOR HINGE WRENCH



G5M0487

- 2) Loosen screw one complete rotation, and adjust opening/closing direction of door using a hammer covered with a cloth.

CAUTION:

Be careful not to damage striker.

Hinge tightening torque (body side):


29 ± 5 N·m (3.0±0.5 kg-m, 21.7±3.6 ft-lb)

Striker tightening torque:

14 ± 4 N·m (1.4±0.4 kg-m, 10.1±2.9 ft-lb)


2. INNER REMOTE

- 1) Lock the door.
- 2) Loosen bolt (A).
- 3) Lower bell crank (B) and then tighten bolt (A).

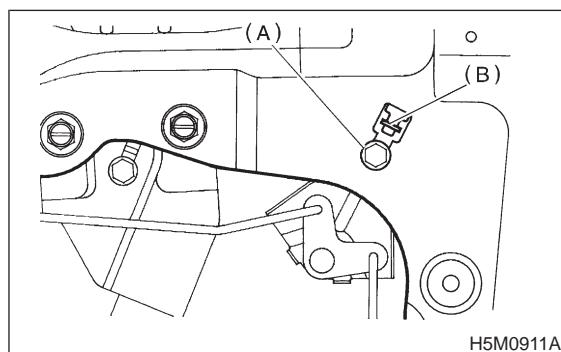

H5M0911A


3. PROCEDURE CHART FOR ADJUSTING DOOR GLASS

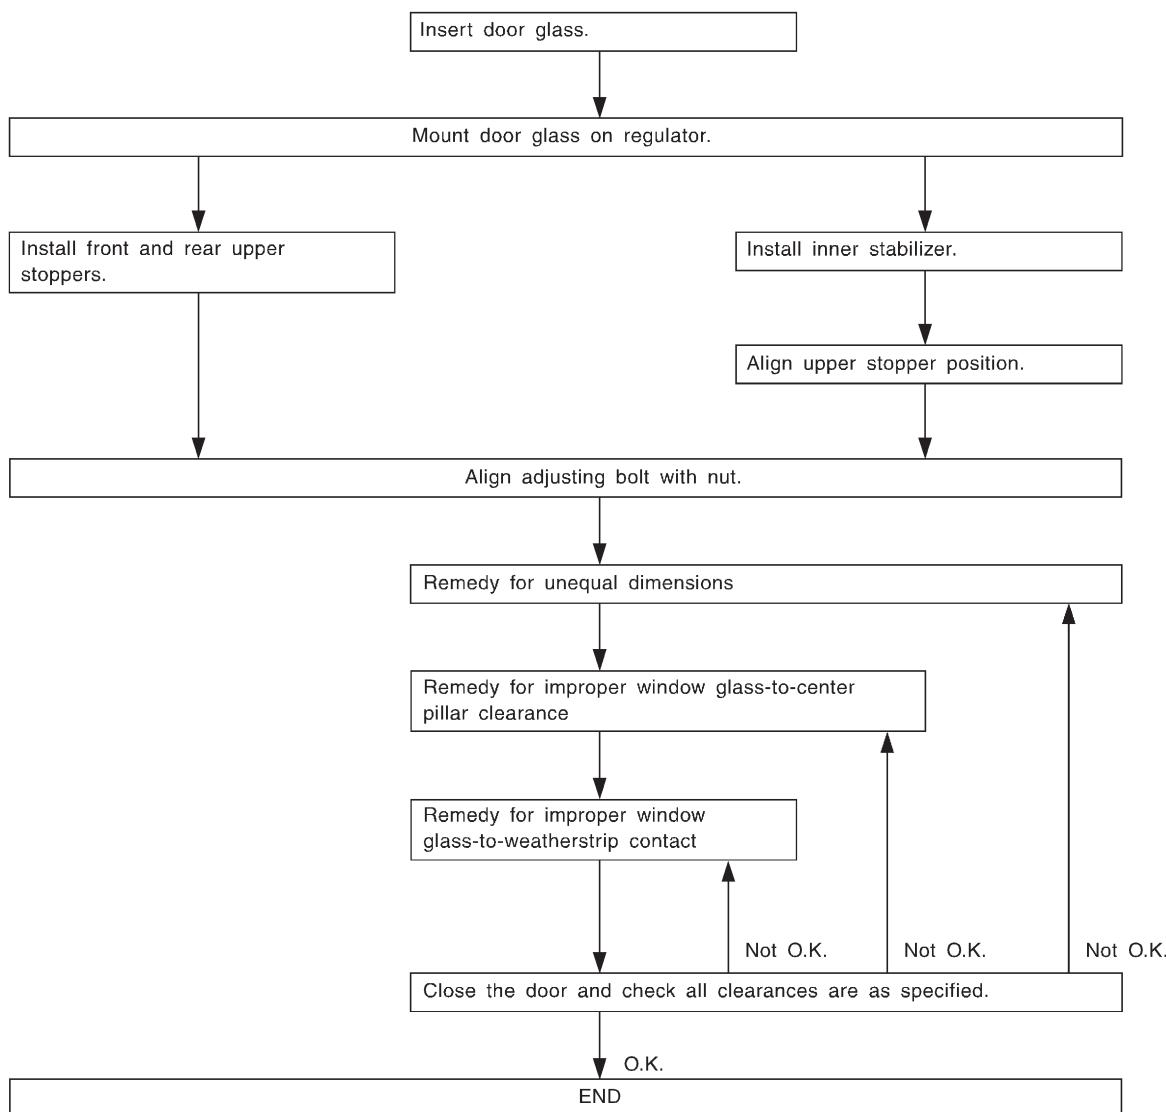

H5M0912A


4. FRONT DOOR GLASS

SEDAN AND WAGON

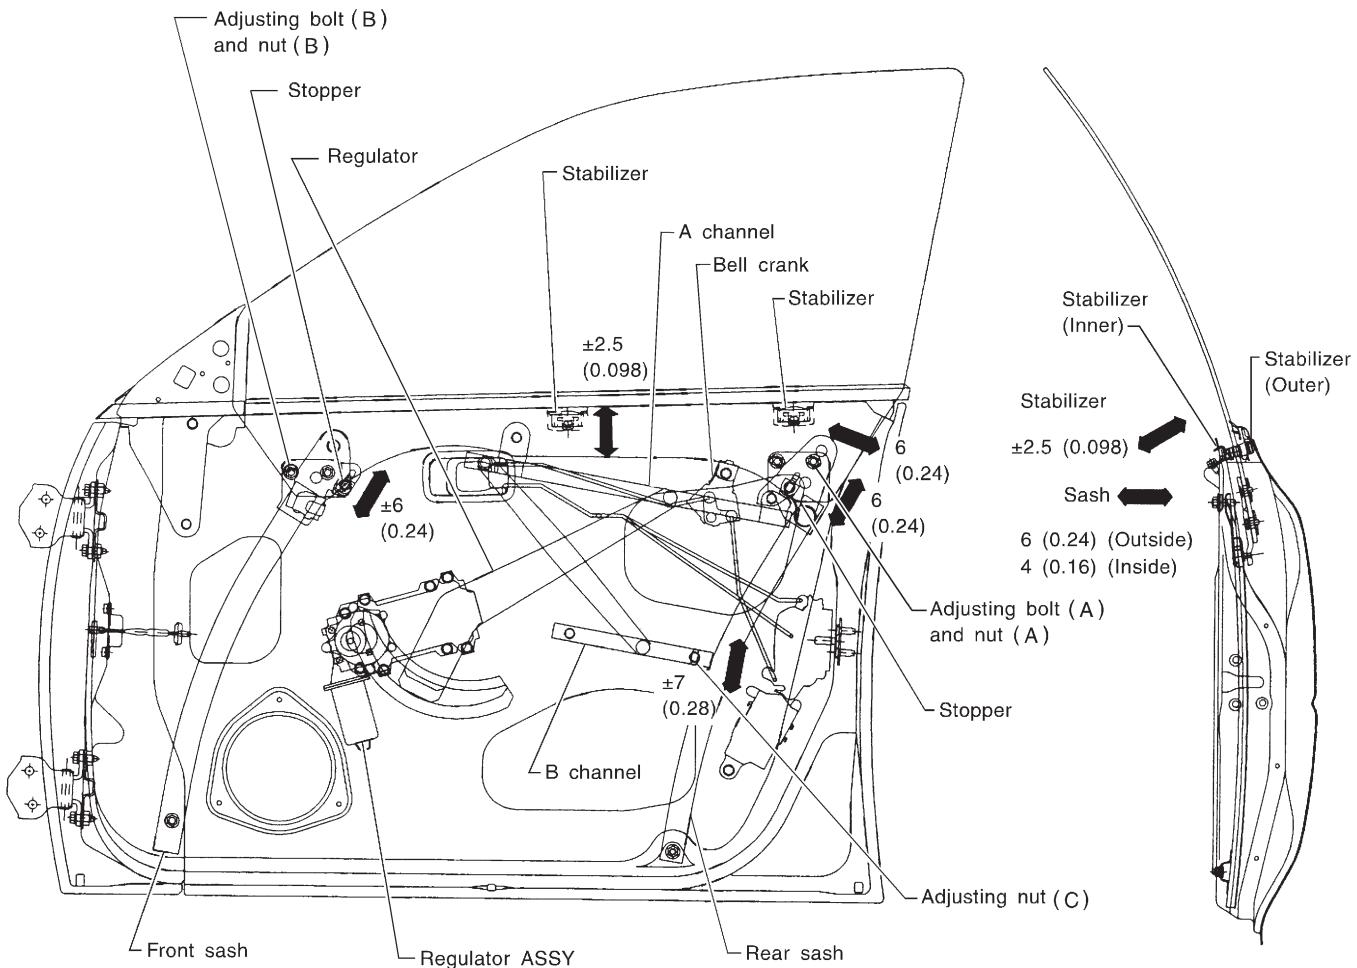

H5M0697B

COUPE

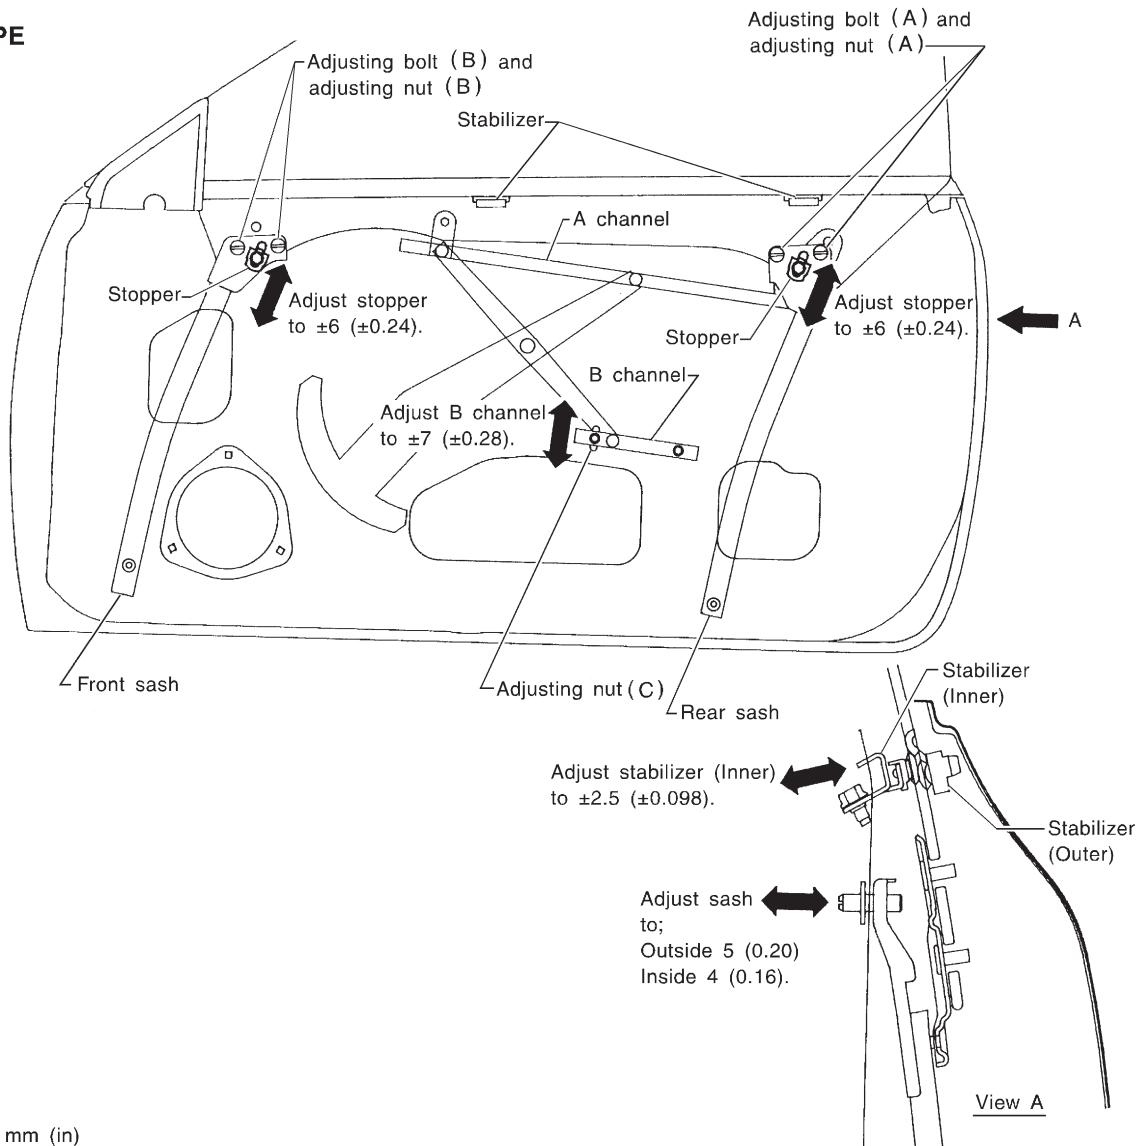

H5M0728B

● Door glass fit adjustment

Before adjusting door glass alignment, ensure adjusting bolts for stabilizers, upper stoppers and sashes are loose and glass is raised so that it is in contact with upper and side weatherstrip.


- 1) temporarily tighten one of the two rear sash adjusting bolts, at midpoint of oblong hole on inner panel.
- 2) Temporarily tighten regulator B channel at a position slightly lower than midpoint of oblong hole on inner panel.

3) Lower door glass 10 to 15 mm (0.39 to 0.59 in) from fully closed position. While applying outward pressure (load) to upper edge of glass above midpoint of two outer stabilizers, press inner stabilizer until it just touches the glass, then secure it.

Load: F


Front door glass $44.1 \pm 4.9 \text{ N}$ ($4.5 \pm 0.5 \text{ kg}$, $9.9 \pm 1.1 \text{ lb}$)

Rear door glass $44.1 \pm 4.9 \text{ N}$ ($4.5 \pm 0.5 \text{ kg}$, $9.9 \pm 1.1 \text{ lb}$)

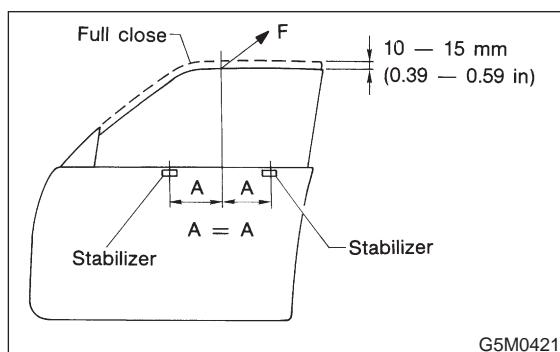

● **Remedy for unequal dimensions, between upper, lower and center pillar sides**



- 1) Close front door and raise door glass.
- 2) Make sure of unequal dimensions.

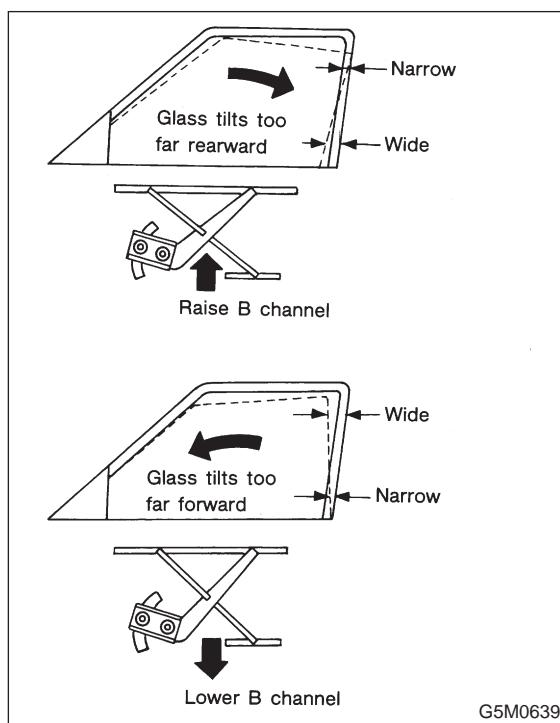

3) If glass tilts to far rearward, loosen adjusting nut (0C) and adjust glass to be parallel with center pillar, then after adjustment, tighten adjusting nut (0C).

Tightening torque:

$7.4 \pm 2.0 \text{ N}\cdot\text{m}$ ($0.75 \pm 0.2 \text{ kg}\cdot\text{m}$, $5.4 \pm 1.4 \text{ ft}\cdot\text{lb}$)

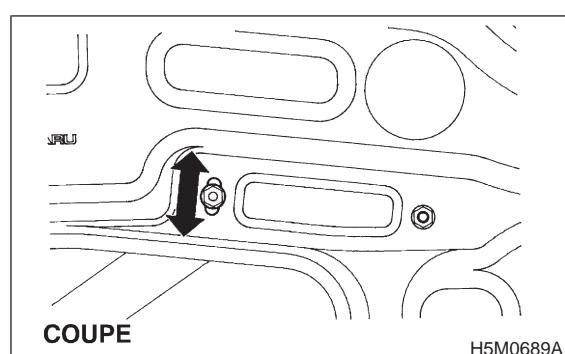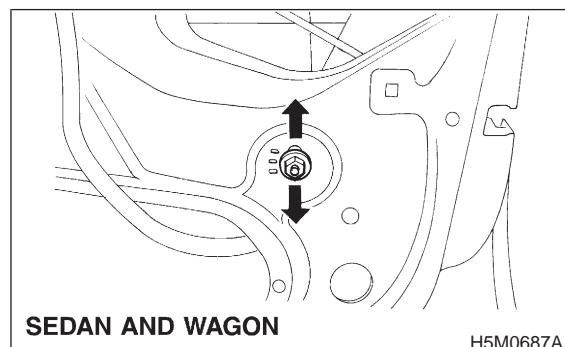


● **Remedy for improper glass to center pillar clearance**


- 1) Close front door and raise door glass.

2) Make sure of improper clearance.

SEDAN AND WAGON

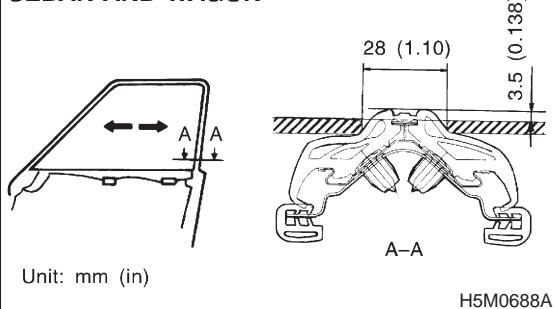


COUPE

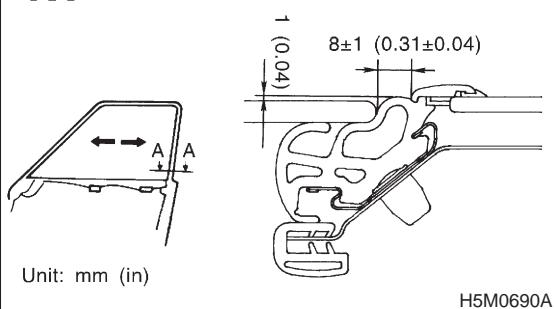


3) If clearance is improper, loosen adjusting nut (A), bolt (A) and adjust glass to center pillar.


SEDAN AND WAGON

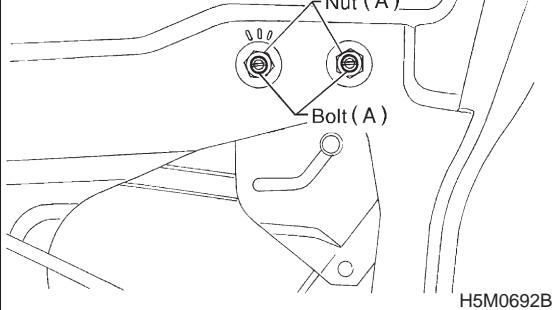

COUPE

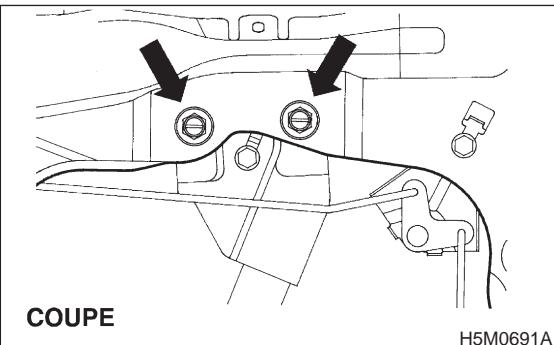

2) Increase the upward travel of window glass up to the position where upper edge just touches weatherstrip surface with door closed.

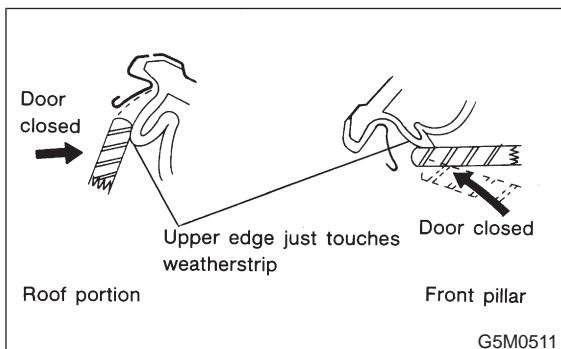


3) After adjustment, temporarily tighten stoppers.

NOTE:

Make sure that each glass stopper is touched.

● **Remedy for incorrect contact of door glass to weatherstrip**

- 1) Close front door and raise door glass.
- 2) If clearance is below specifications, loosen bolt (A) and bolt (B).
- 3) If clearance is over specifications, tighten bolt (A) and bolt (B).

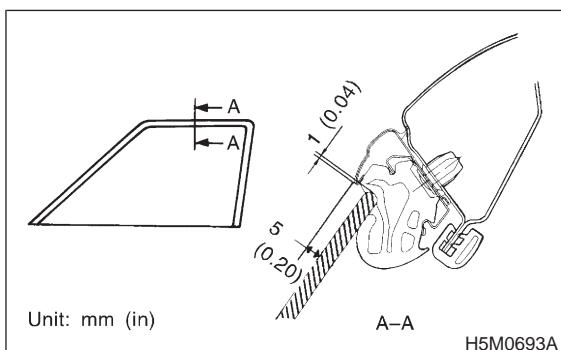

● **Fit adjustment**

Door glass fit is adjusted by displacing the glass front edge with a stabilizer.

NOTE:

Before adjusting glass fit, visually check to determine relative adjusting positions of retainer and molding (on roof side) and glass surface.


● **Remedy for improper upper stop point of door glass**

1) Loosen front and rear sash stoppers.

1) Alternately adjust two rear sash adjusting bolts (0A) until dimensions are obtained.

CAUTION:

Do not loosen two adjusting nuts (A) at the same time, as this moves sash fore and aft, creating unequal glass-to-sash clearance. During adjustment, loosen only one nut and keep the other tightened.

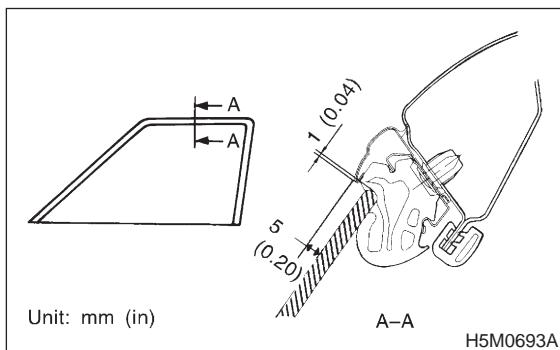

2) Adjust front sash fit using rear sash adjustment procedure outlined in the former procedure as a guide. Two adjusting bolts must be adjusted by the same amount.

NOTE:


- Front and rear sash adjustment procedures are basically the same; however, the amount of adjustment is not always the same due to alignment dispersion of individual doors.

- Adjust front and rear sash fit, as equally as possible. Otherwise, effort required to operate regulator may increase.

3) After adjusting front sash-to-glass fit, secure front sash.


NOTE:

Always adjust two rear sash adjusting bolts (0A) by the same amount. Do not adjust the adjusting bolts with sash bracket inclined toward inner panel, as this increases effort required to operate regulator.

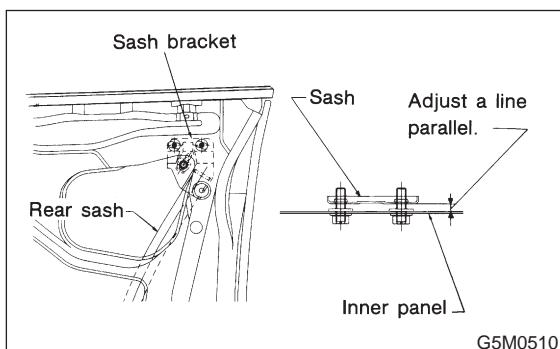

5. REAR DOOR GLASS

Alignment of rear door glass is basically the same as for the front door glass. Due to slight difference in adjustment dimensions for fore-aft, up-down, and in-out alignments, key points for rear door adjustment are described.

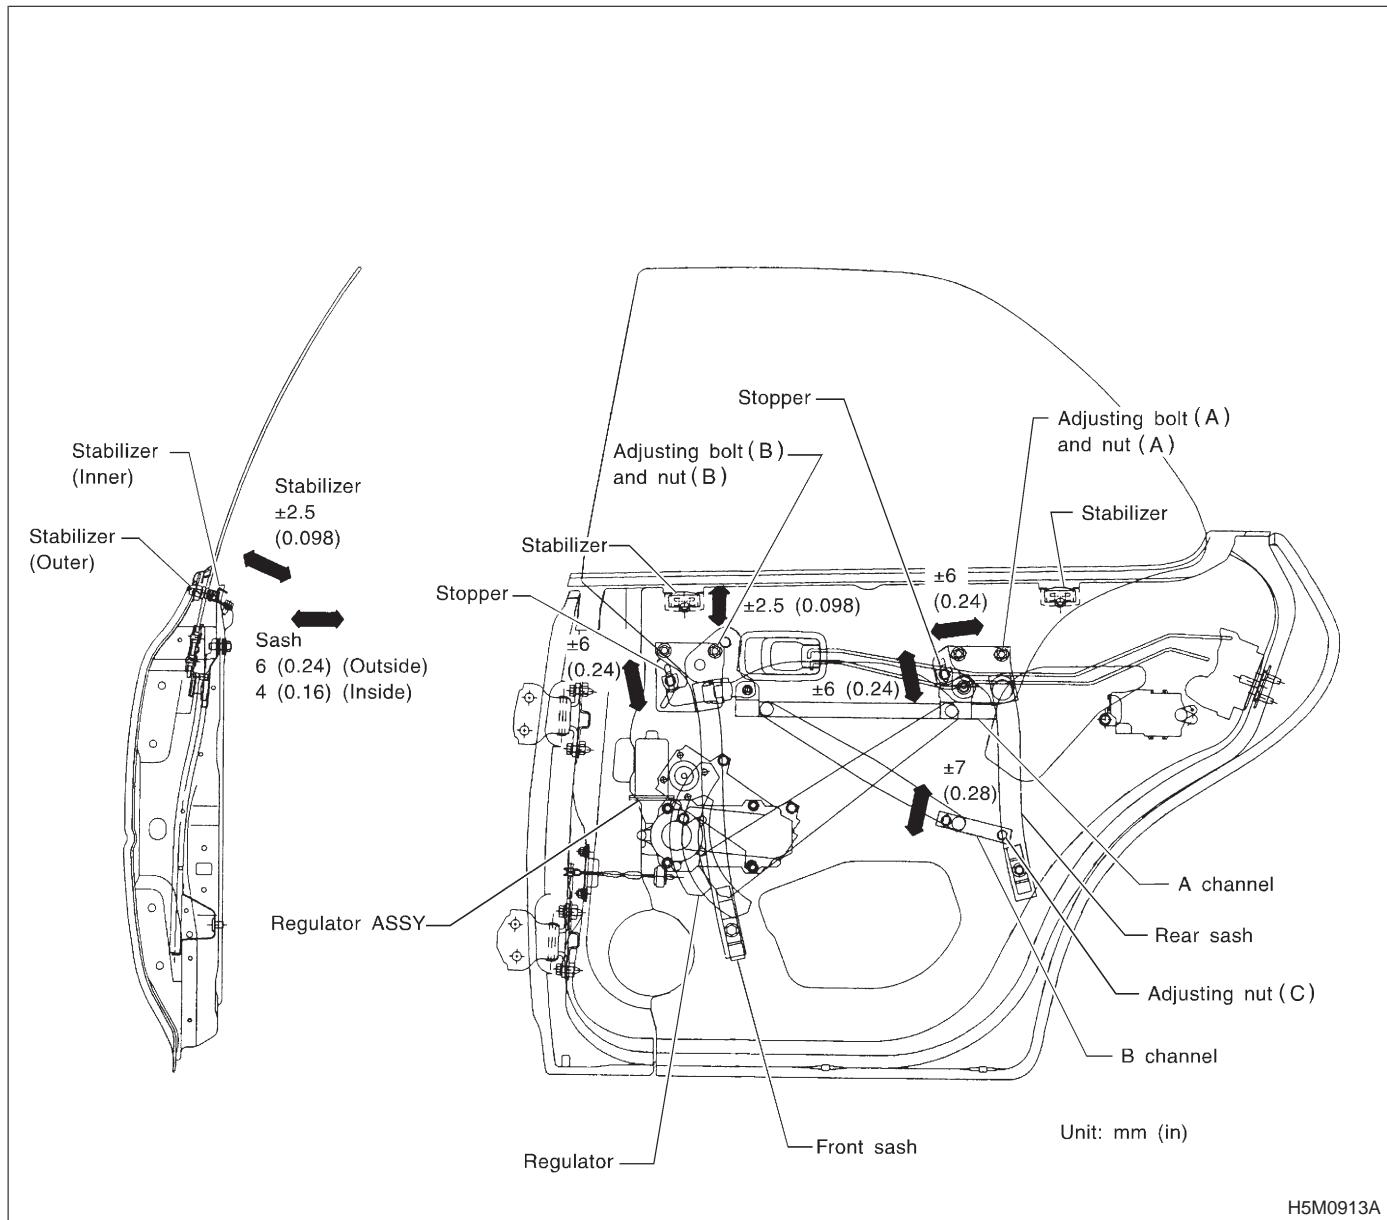


H5M0913A

● Fore-aft adjustment

1) Door glass alignment must be adjusted so that glass-to-center pillar fit is equal at all points. Always use dimensions as a guide during adjustment.


NOTE:

If dimensions are smaller than those indicated, glass will be caught in weatherstrip and may not raise to the fully closed position.

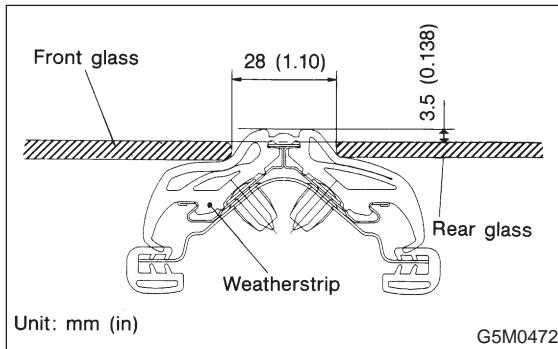

● Fit adjustment

Increasing contact pressure causes rear door glass to be caught in center pillar upper and lower weatherstrip; this will cause premature weatherstrip wear. For this reason, always use dimensions indicated in figure as a guide during glass fit adjustment.


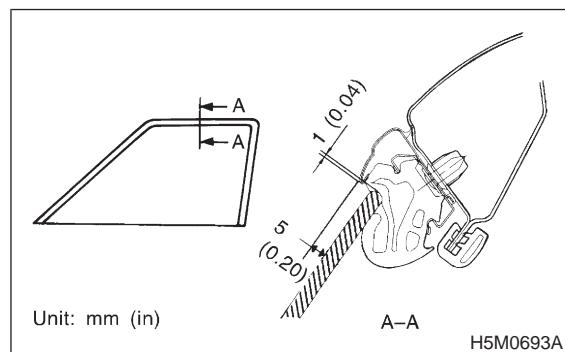


2) After making fore-aft adjustment, raise and lower glass to ensure it is free from any binding.

C: INSPECTION

1. FRONT DOOR GLASS

1) Close front door and make sure of all clearances.

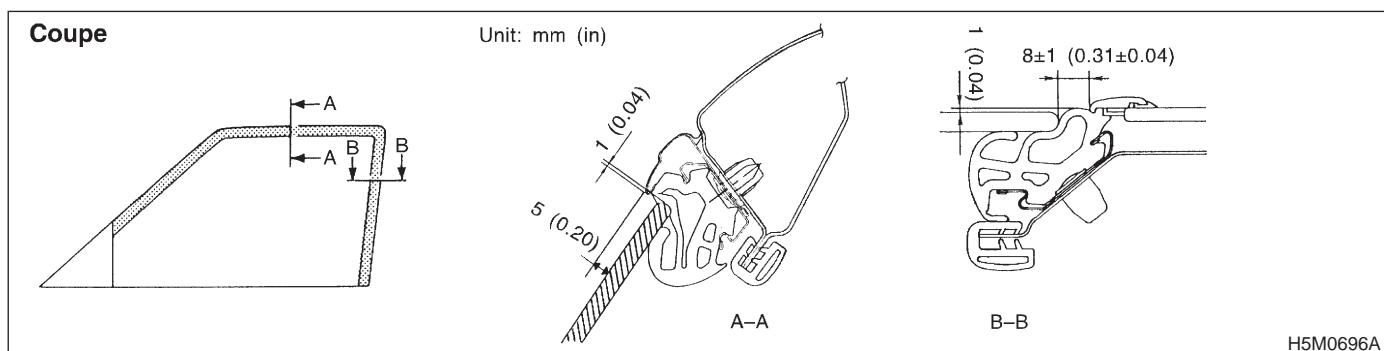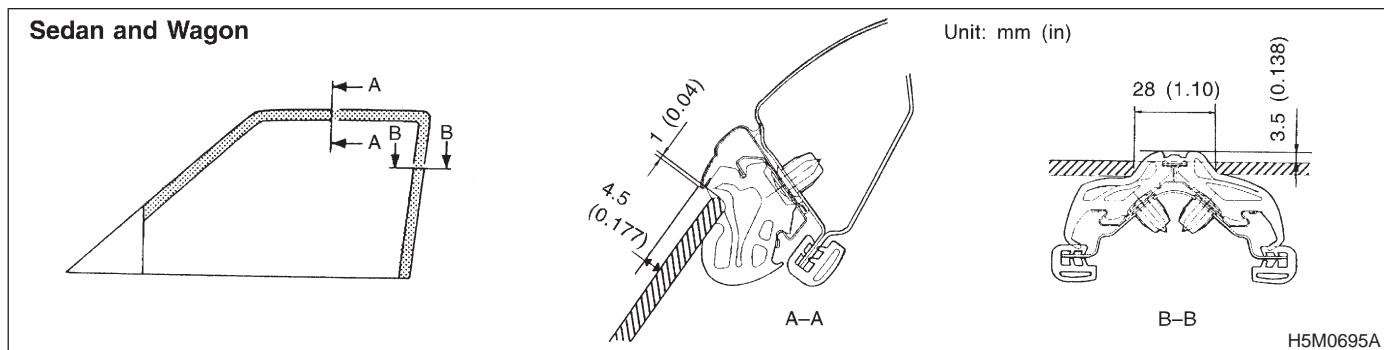

2) If any clearance is not correct, adjust affected parts. Re-check that all clearances are correct.


● After clearance adjustment, make sure that all adjusting bolts and nuts are tightened.

CAUTION:

● Repeatedly adjust parts until all clearances are correct.

2. REAR DOOR GLASS

- 1) Close rear door and make sure of all clearances.

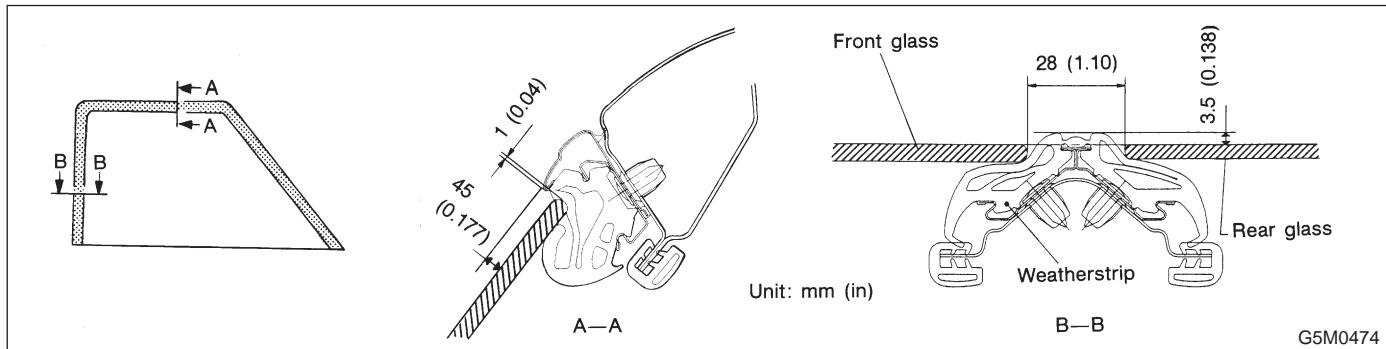

- 2) If any clearance is not correct, adjust affected parts. Re-check that all clearances are correct.

CAUTION:

- Repeatedly adjust parts until all clearances are correct.
- After clearance adjustment, make sure that all adjusting bolts and nuts are tightened.

3. Rear Gate

A: REMOVAL AND INSTALLATION

CAUTION:


- Be careful not to scratch coated surfaces of vehicle body and window glass during removal. Place a cloth over the affected area.
- Be careful not to damage trim panels.
- Use an assistant when handling heavy parts.
- Be careful not to damage or lose small parts.

1. REAR GATE ASSEMBLY

- 1) Remove clips from trim panel and detach trim panel.

CAUTION:

Be careful not to damage clips or their holes.

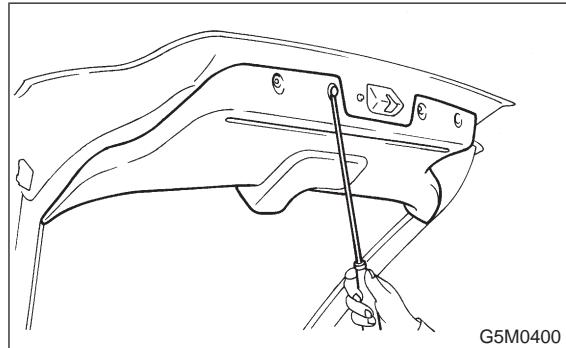


- 2) Disconnect connectors and terminal.
- 3) Disconnect rear washer hose from wiper motor.
- 4) Remove high-mounted stop light.

- 5) If disconnected harness is re-used, tie connector with a string and place on the upper side of rear gate for ready use.

CAUTION:


Do not forcefully pull cords, lead wires, etc. since damage may result; carefully extract them in a wavy motion while holding connectors.

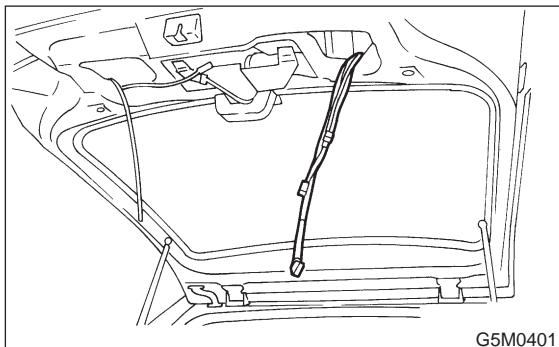


- 6) Remove rear wiper. <Ref. to 6-2 [W6B0].>
- 7) Remove both rubber ducts and then extract washer hose and harness connector.
- 8) Gas stay:
 - (1) Completely open rear gate.
 - (2) Remove bolts which hold gas stay to rear gate.

CAUTION:

- Be careful because rear gate drops while removing bolts. Have an assistant support it while removing bolts.
- Be sure to place a folded cloth between rear gate and body to prevent scratches.

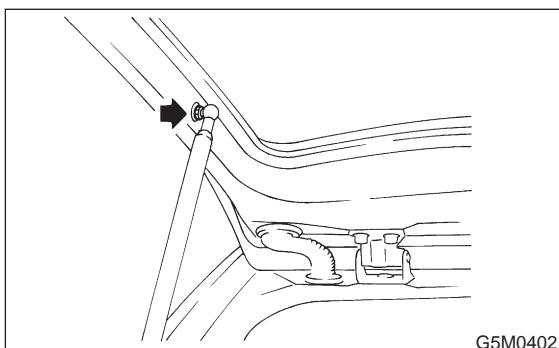


9) Remove the bolts which hold rear gate to hinge and then detach rear gate.

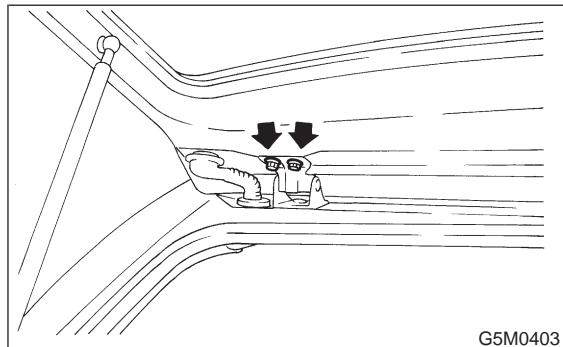


10) General precautions in handling rear gate gas stay

CAUTION:

- Do not attempt to disassemble gas stay because its cylinder is filled with gas.
- Before discarding gas stay, place it at a slight angle with the cylinder body side facing up and drill a 2 to 3 mm (0.08 to 0.12 in) dia. hole to completely discharge the content. (Gas is odorless, colorless and harmless; however, metal powder may come out of the hole.)

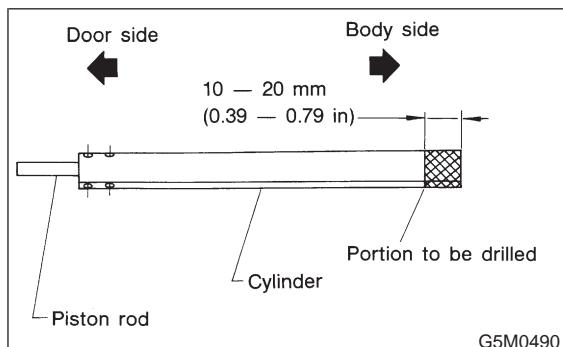

- It is good practice to place a vinyl sack over it before drilling the hole because oil may spurt out. Be careful to prevent vinyl cover from becoming entangled on the drill.

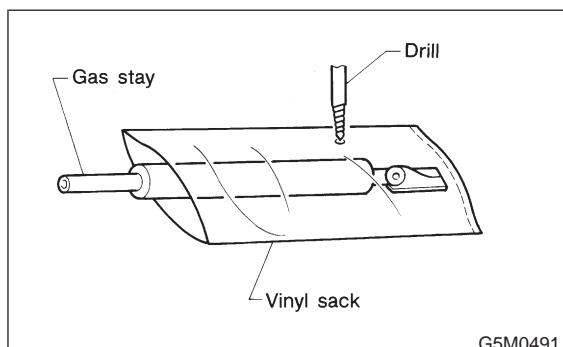

- Be careful not to scratch the exposed section of piston rod or allow oil or paint to come in contact with it.

- Do not attempt to rotate the extended piston rod.


11) Installation is in the reverse order of removal.

CAUTION:

- Be careful not to mistake RH and LH body side buffers.
- Be sure to add sealer to hinge.
- When installing rear gate, be careful not to damage coating on body and rear gate.

2. LATCH

- 1) Remove trim panel.
- 2) Disengage rod from holder (= key cylinder).
- 3) Remove bolts from auto-door lock actuator.
- 4) Remove bolts from latch, and detach latch.

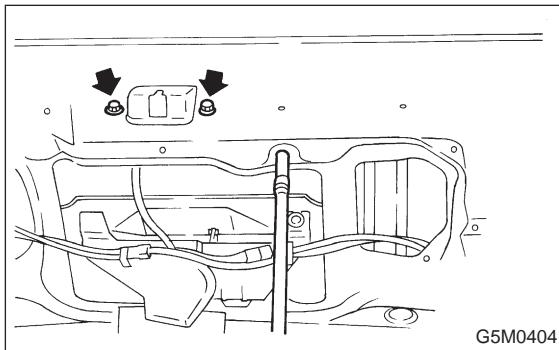

G5M0404

- 5) Disconnect rear gate switch connector.
- 6) Disconnect auto-door lock actuator connector.
- 7) Detach latch.
- 8) Installation is in the reverse order of removal.

CAUTION:


Firmly join latch with key cylinder, and outer handle.

3. OUTER HANDLE

- 1) Remove trim panel.
- 2) Remove latch.
- 3) Remove two nuts used to hold outer handle to the inside of rear gate, and detach outer handle.

CAUTION:

Be careful not to damage packing when removing outer handle.

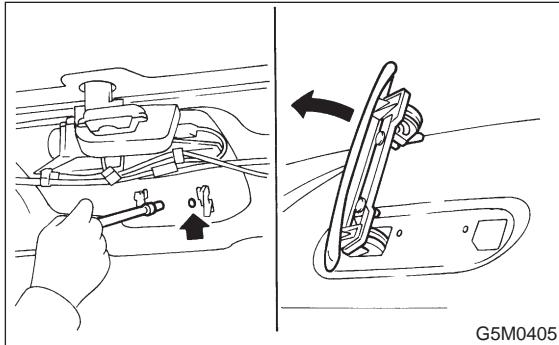

G5M0405

- 4) Installation is in the reverse order of removal.

CAUTION:


Completely insert latch pin into handle lever.

4. KEY CYLINDER

- 1) Remove trim panel.
- 2) Disengage rod from holder.
- 3) Remove retaining spring from key cylinder, and detach key cylinder from outside.
- 4) Installation is in the reverse order of removal.

5. STRIKER

- 1) Remove rear skirt trim.
- 2) Remove two bolts from striker and detach striker.

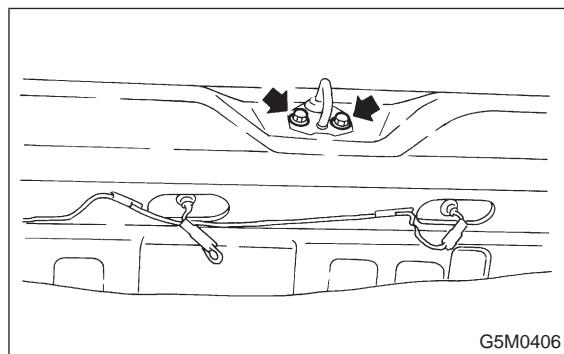


G5M0406

- 3) Installation is in the reverse order of removal.

6. WEATHERSTRIP

- 1) Place weatherstrip so that its joints meet at lower center of vehicle body, and install by inserting flanged portion from below, as shown in section A-A in figure.

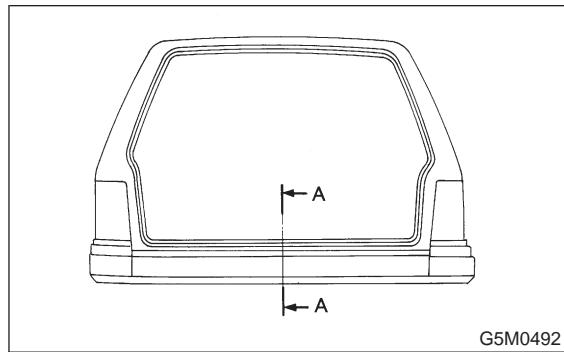


G5M0492

2) Tap along entire length with a rubber hammer to firmly insert body flange into weatherstrip.


CAUTION:

- Be careful not to install in wrong direction.
- Install weatherstrip carefully and firmly.

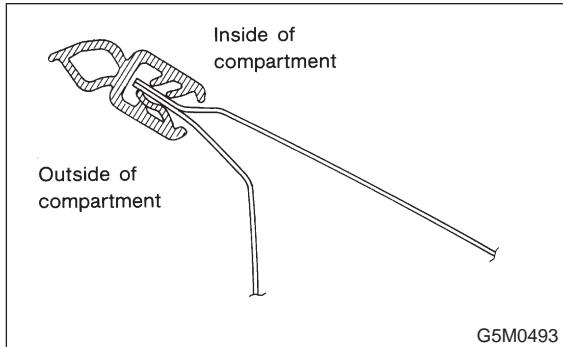

4. Procedure Chart for Removal and Installing Window Glass

A: REMOVAL AND INSTALLATION

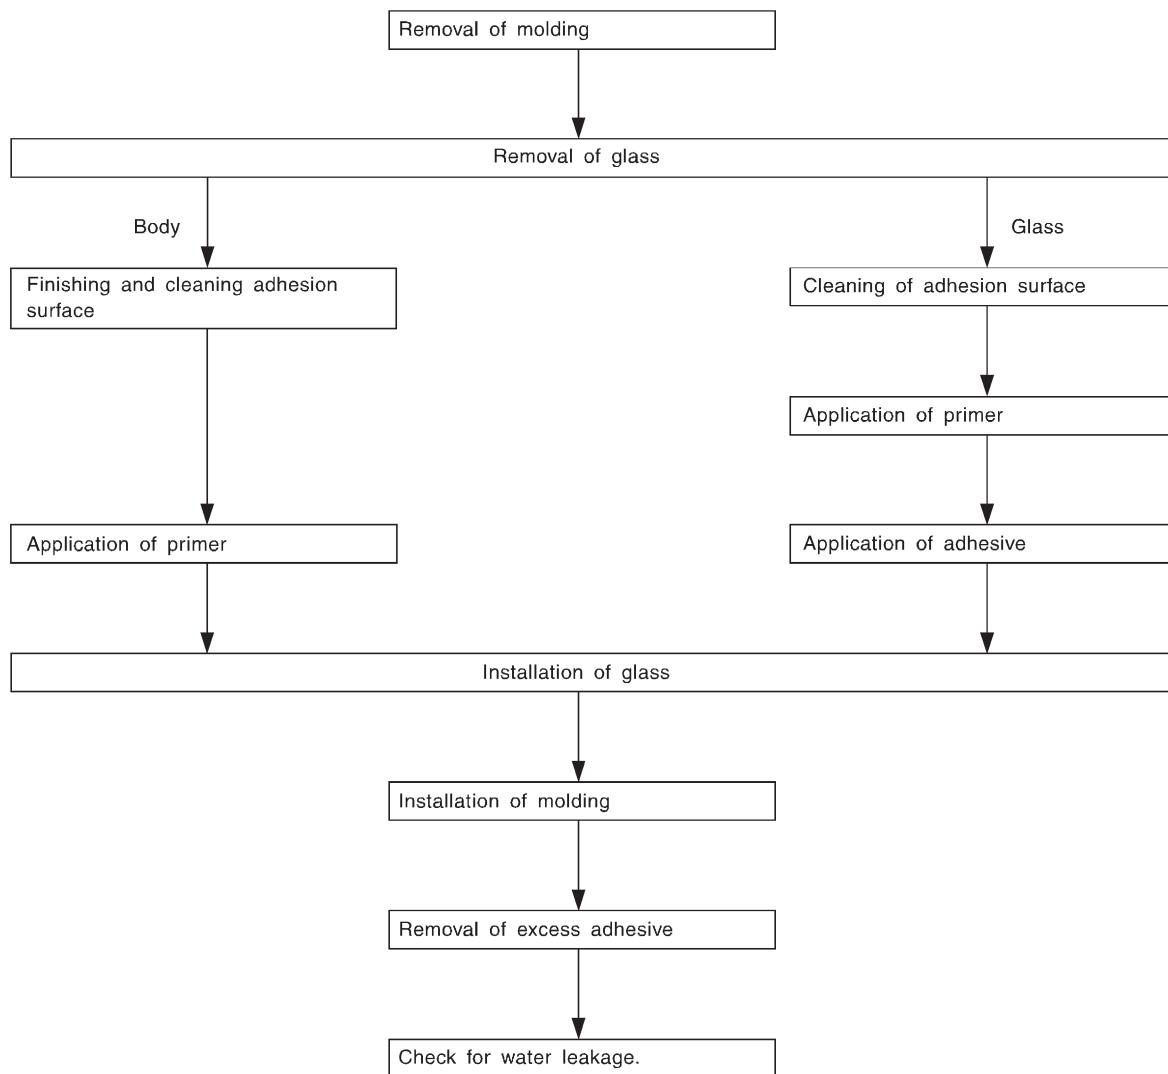

H5M0914A

1. MATERIALS REQUIRED FOR APPLICATION

Description	Remarks
Repair adhesive set	Sunstar No. 580 or Essex Chemical Corp's Urethane E
• Cartridge of single-liquid urethane adhesive	Sunstar No. 435-580
• Primer for glass and body	
Windshield knife or piano wire	For cutting windshield
Sealant gun	For applying adhesive
Suction cups	For holding glass
Putty knife	For finishing adhesion surface and cutting spacer
Sponge	For applying primer
Gauze or cloth	For cleaning
Alcohol or white gasoline	For cleaning adhesion surface
Tape	For preventing damage to painted surface

5. Windshield

A: REMOVAL

1. USING WINDSHIELD KNIFE

The following procedure for the front windshield can also be applied to other window glass.


- 1) Remove wiper arm and cowl panel.
- 2) Remove roof molding and front window molding upper.

3) Remove glass:

- (1) Put protective tape on body to prevent damage.
- (2) Apply soapy water to the surface of the adhesive agent so the knife blade slides smoothly.
- (3) Cut off excess adhesive agent.
- (4) Put windshield knife into layer of adhesive.
- (5) Cut adhesive layer with the windshield knife.


CAUTION:

- Keep knife edge along glass surface and end face.
- When first putting knife into layer of adhesive, select point with wide gap between body and glass.

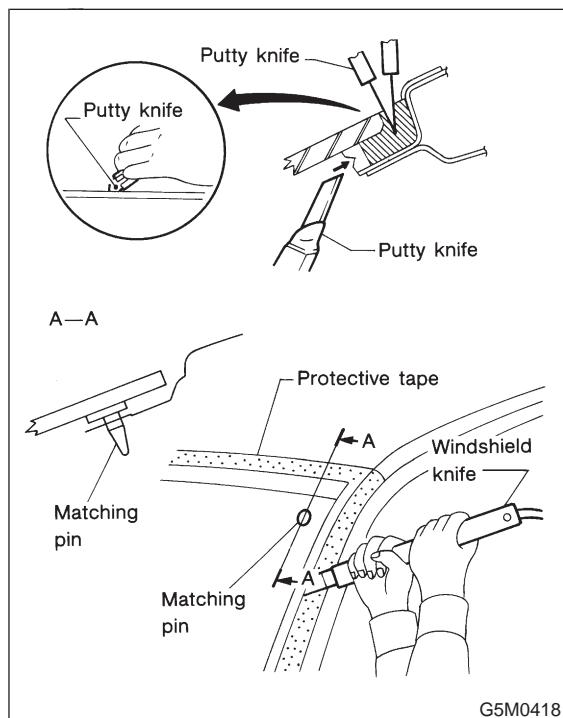


NOTE:

A matching pin is cemented to corners of glass on compartment side. Use a piano wire when cutting each pin.

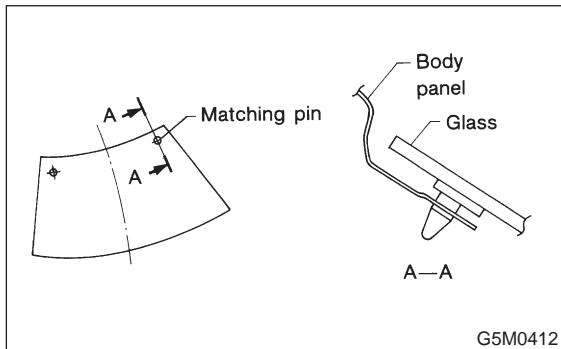**2. USING PIANO WIRE**

- 1) Remove wiper arm and cowl panel.
- 2) Remove roof molding and front window molding upper.
- 3) Remove glass:
 - (1) Put protective tape on body to prevent damage.
 - (2) Using drill or putty knife, make through-hole (one place) in adhesive agent.
 - (3) Pass piano wire through the hole from inside the compartment, and connect both ends of wire securely to wooden blocks.

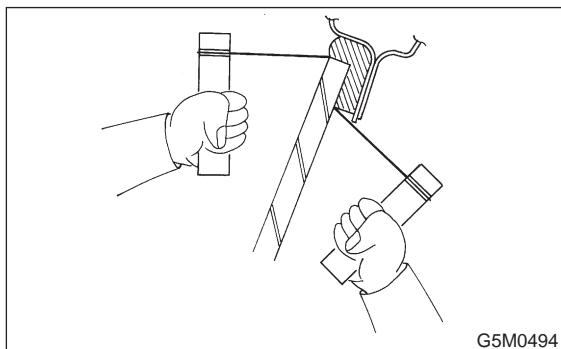

- (4) Cut adhesive layer with the wire by pulling it back and forth.

CAUTION:

When making through-hole into adhesive layer and cutting the adhesive, be careful not to damage interior and exterior parts.


B: INSTALLATION

- 1) After cutting layer of adhesive, remove gum rubber remaining on body.


- 2) Finishing adhesion surface on body side: Using a cutter knife etc., cut layer of adhesive sticking firmly to body, and finish it to a smooth surface of about 2 mm (0.08 in) in thickness.

CAUTION:

Take extra care not to cause damage to body paint.

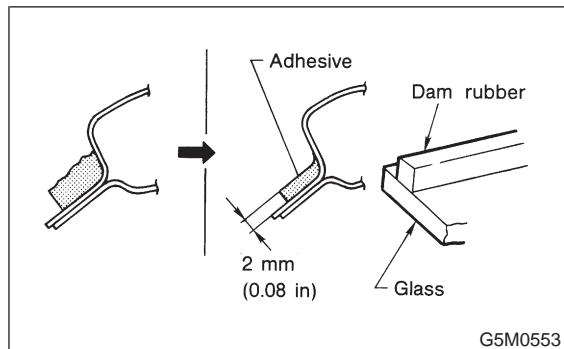

- 3) Cleaning body surface:
 - (1) Thoroughly remove chips, dirt and dust from body surface.
 - (2) Clean body wall surface and upper surface of layer of adhesive with a solvent such as alcohol or white gasoline.
- 4) Positioning glass:
 - (1) Mount glass on body.
 - (2) Adjust position of glass so that gap between body and glass is uniform on all sides.
 - (3) Put matching pin on body and glass in several places.

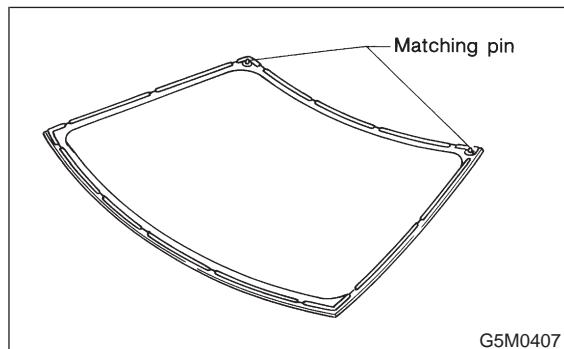


- 5) Cleaning glass:
 - (1) Dismount glass from body.
 - (2) Clean surface of glass to be adhered with alcohol or white gasoline.

6) Application of primer:

- (1) Using a sponge, apply primer to part of glass to be adhered.
- (2) Apply primer to part of body to be adhered.


CAUTION:

- Primer is hard to wipe off of body paint, instrument panel, inner trim, etc. So put masking around these areas for protection.
- After application, let 1st primer dry spontaneously for about 10 minutes.
- Do not touch primer-coated surface under any circumstances.

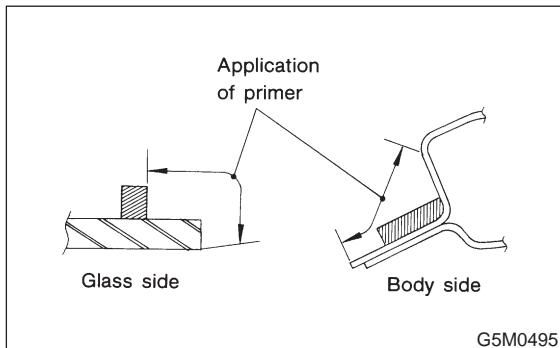

7) Application of adhesive:

- (1) Cut nozzle tip of cartridge as shown in figure.

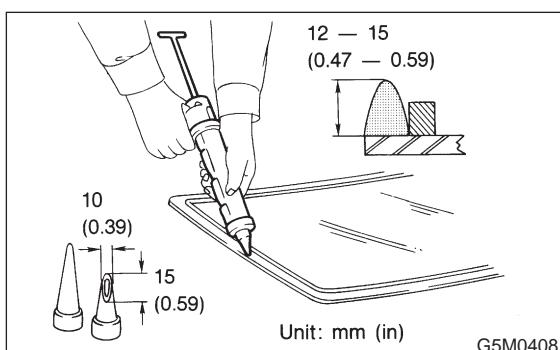


- (2) Open cartridge and put it into a gun with nozzle attached.
- (3) Apply adhesive uniformly to all sides of adhesion surface while operating gun along glass end face.

8) Installation of glass:

- (1) Hold glass with rubber suction cups.


- (2) Mount glass on body with matching pin aligned.

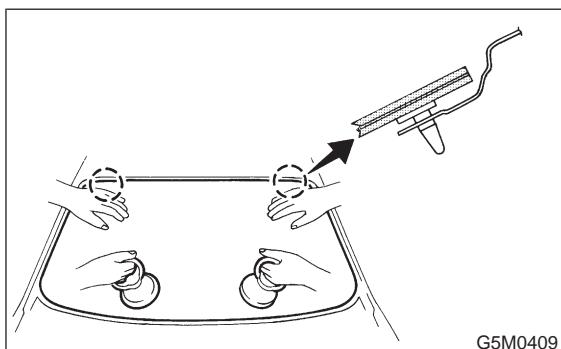

- (3) Stick them fast by pressing all sides lightly.

9) Installation of molding:


- (1) Remove adhesive overflowing from outside of glass until it becomes level with outer height of glass. Then, add adhesive to portions that need it, and clean with alcohol or white gasoline line.

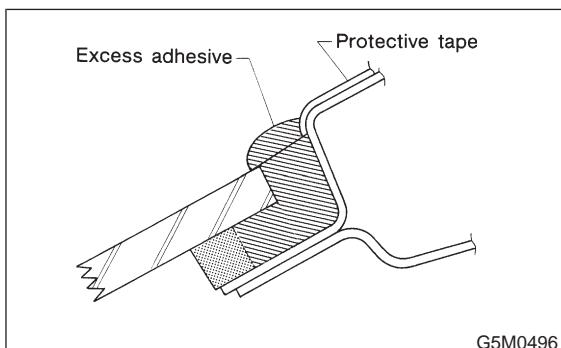

- (2) Firstly, press-fit front window molding upper and lastly, roof molding.

CAUTION:

Do not open and close door after moldings have been installed. When opening and closing door for unavoidable reason, lower door glass and gently move door.

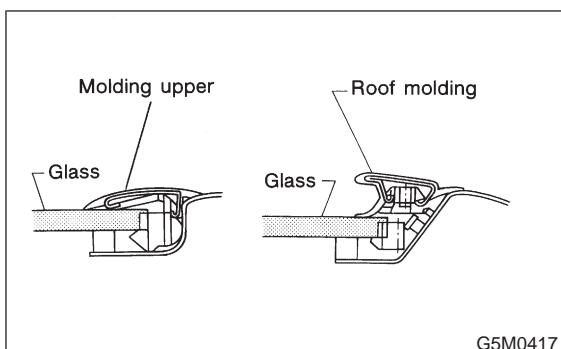

- (10) Water leakage test:
Test for water leakage about one hour after installation.

CAUTION:

- Move vehicle very gently.
- Do not squirt strong hose stream on vehicle.

11) Spontaneous drying:

After completing all operations, leave vehicle alone for 24 hours.


CAUTION:

When delivering vehicle to user, tell him that vehicle should not be subjected to heavy shocks for at least three days.


12) Install cowl panel and wiper arm.

6. Rear Window Glass**A: REMOVAL****1. SEDAN AND COUPE MODEL**

- 1) Remove roof molding.
- 2) Remove rear window molding upper and lower.
- 3) Disconnect connector from rear defogger terminal.
- 4) Remove glass in same manner as in windshield.

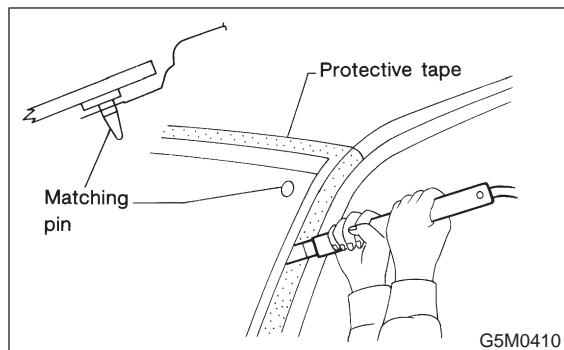**NOTE:**

A matching pin is cemented to the corners of glass on compartment side. Use a piano wire when cutting each pin.

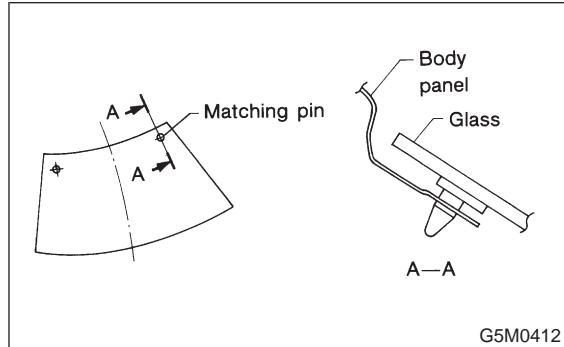**2. WAGON MODEL****NOTE:**

It is impossible to remove the molding from the glass. If molding is broken, replace rear glass.

- 1) Remove rear wiper and rear gate trim.
- 2) Disconnect connector from rear defogger terminal.
- 3) Remove high mount stop light.
- 4) Remove glass in same manner as for windshield.


CAUTION:

Be careful not to damage molding re-installing the old rear window glass using a piano wire.

NOTE:

A matching pin is cemented to corners of glass on compartment side. Use a piano wire when cutting each pin.


- 3) After installation, test for water leakage after about one hour, and leave vehicle alone for 24 hours.
- 4) Make rear defogger connections.

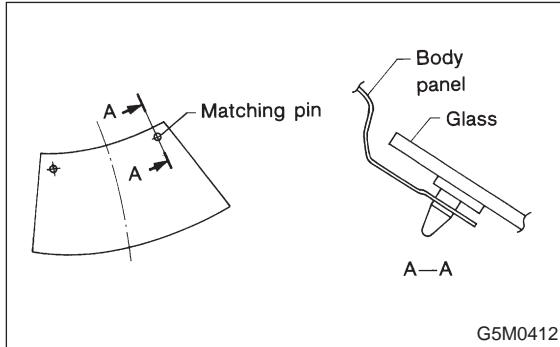

G5M0412

B: INSTALLATION**1. SEDAN AND COUPE MODEL**


- 1) Install glass in same manner as in windshield.
- 2) Firstly, press-fit molding upper, then lower and lastly, roof molding.

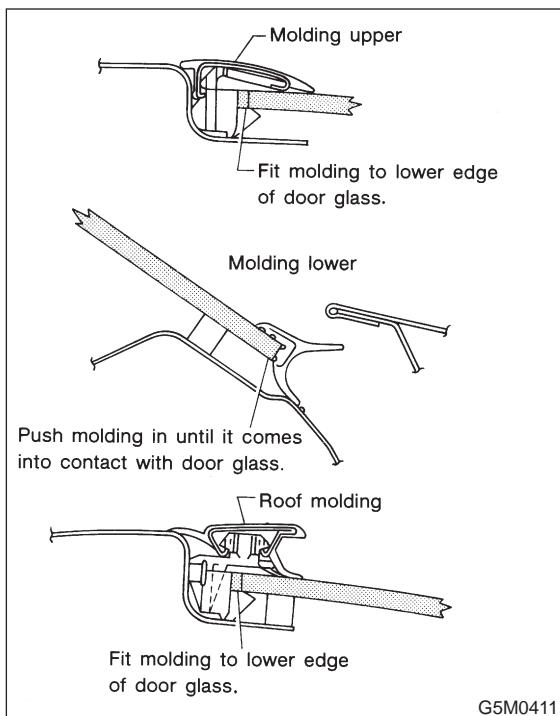

G5M0411

2. WAGON MODEL

- 1) Install rear gate trim.
- 2) Install glass in same manner as windshield.

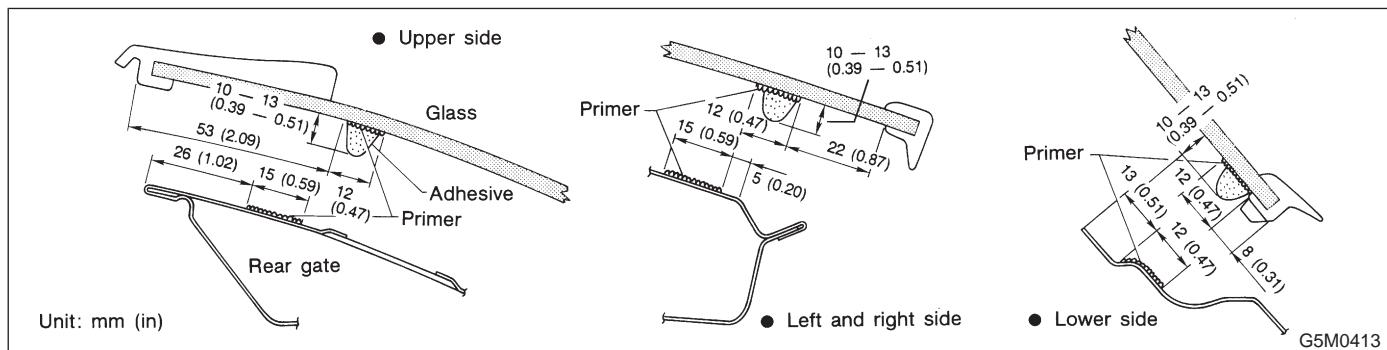


- 3) About one hour after installation, test for water leakage. Leave vehicle for 24 hours before using it.
- 4) Connect rear defogger connections.
- 5) Install high mount stop light and rear wiper.

7. Rear Quarter Glass

A: REMOVAL


1. WAGON MODEL

- 1) Remove rear quarter molding on corner.
- 2) Remove glass in same manner as in windshield.

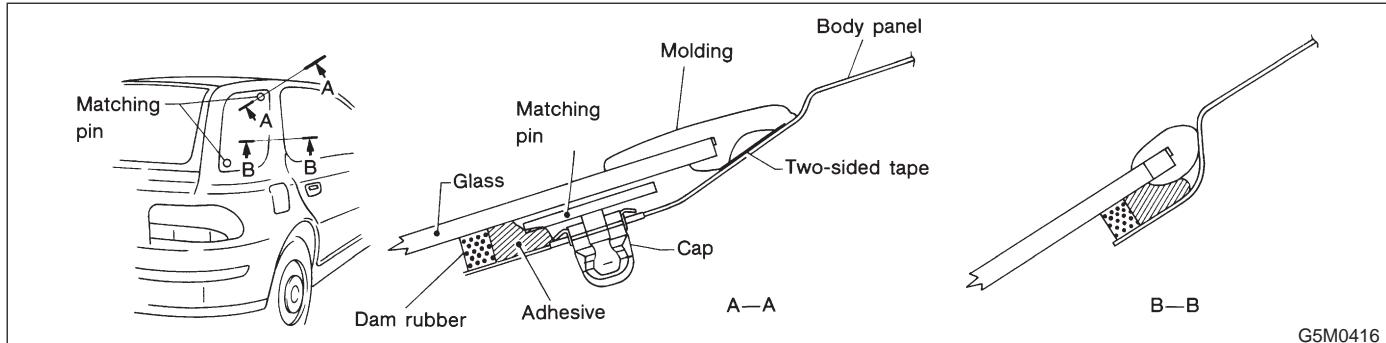


2. COUPE MODEL

- 1) Remove rear quarter molding.

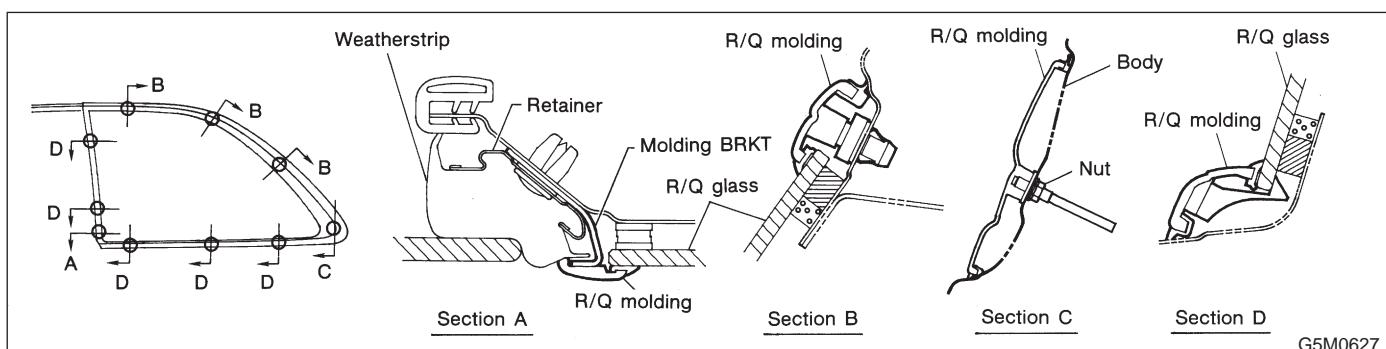

- 2) Remove glass in same manner as in windshield.

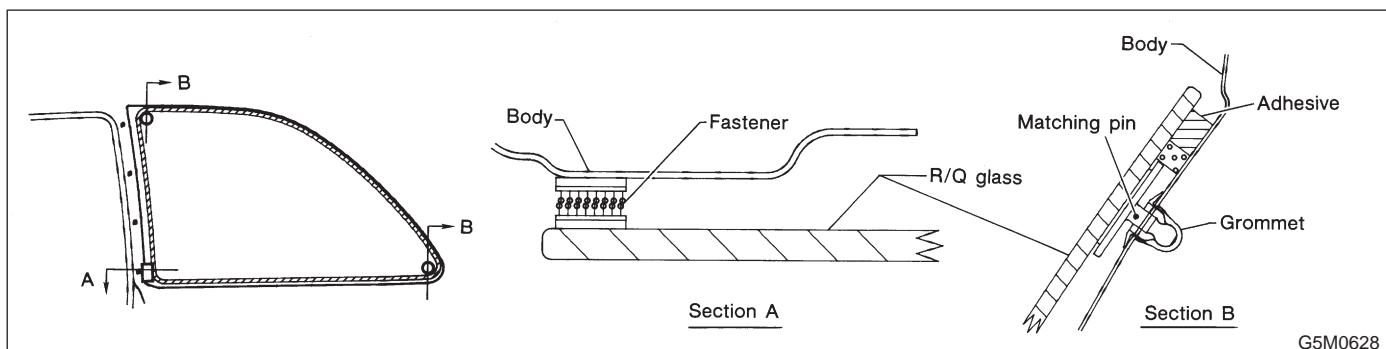


B: INSTALLATION

1. WAGON MODEL

1) Finish surface of adhesive layer on body: Using a putty knife, etc., cut layer of adhesive stick firmly to body and finish it into a smooth surface of about 2 mm (0.08 in) in thickness.

CAUTION:

Be careful not to damage body finish.

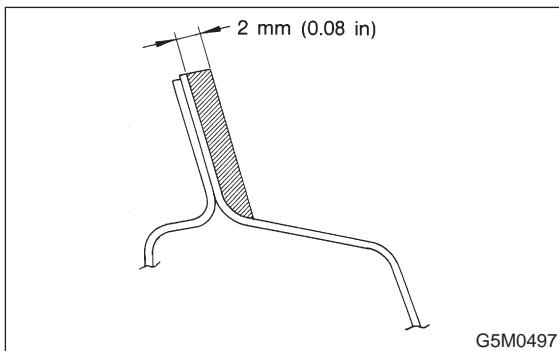

2) Cleaning of body surface:

(1) Remove chips, dirt and dust from body surface.

(2) Clean body wall surface and upper surface of adhesive layer with a solvent such as alcohol or white gasoline.

3) Cleaning glass:

(1) Remove dirt and dust from surface of glass to be adhered.

(2) Clean surface of glass to be adhered with alcohol or white gasoline.


4) Application of primer:

(1) Using a sponge, apply primer to surface of glass to be adhered.

(2) Apply primer to surface of body to be adhered.


CAUTION:

- If primer has dropped on body finish, it is hard to wipe it off. So protect with masking.
- Primer must not project from black frame of glass.
- After applying primer, let it dry spontaneously for about 10 minutes.

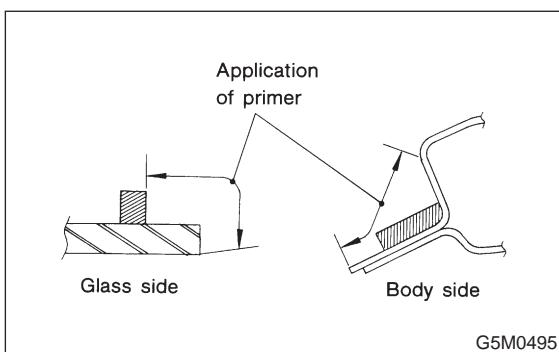

5) Application of adhesive:

(1) Cut nozzle tip as shown in figure.

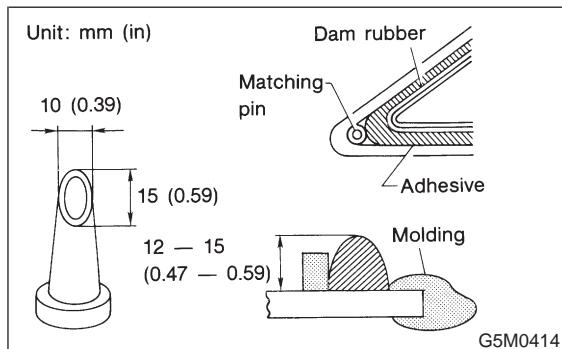


(2) Open cartridge and put it into a gun with nozzle attached.

(3) Apply adhesive uniformly to all sides of adhesion surface while operating gun along glass end face.

6) Installation of glass:

(1) Hold glass with rubber suction cups.

(2) Mount glass on body with matching pin aligned.

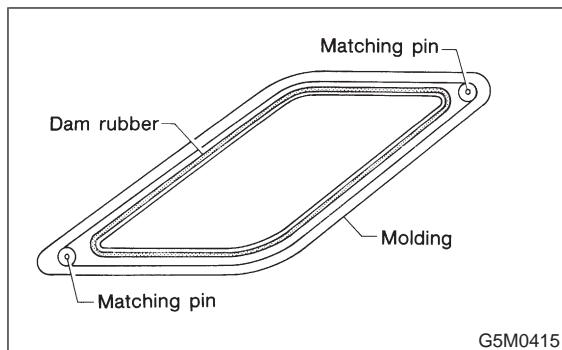

(3) Stick them fast by pressing all sides lightly.

7) Water leakage test:

After installing glass, test for water leakage after about one hour.

CAUTION:

- Move vehicle slowly.
- When opening and closing door, lower door glass and move door gently.
- Do not squirt strong hose stream on vehicle.

8) Spontaneous drying:

After completing all operations, leave vehicle alone for 24 hours.

CAUTION:


When delivering vehicle to user, tell him or her that vehicle should not be subjected to heavy shocks for at least three days.

2. COUPE MODEL

1) Finish surface of adhesive layer on body: Using a putty knife, etc., cut layer of adhesive stick firmly to body and finish it into a smooth surface of about 2 mm (0.08 in) in thickness.

CAUTION:

Be careful not to damage body finish.

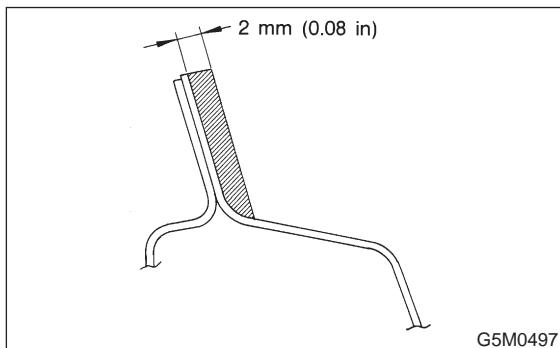

2) Cleaning of body surface:

- (1) Remove chips, dirt and dust from body surface.
- (2) Clean body wall surface and upper surface of adhesive layer with a solvent such as alcohol or white gasoline.

3) Cleaning glass:


- (1) Remove dirt and dust from surface of glass to be adhered.
- (2) Clean surface of glass to be adhered with alcohol or white gasoline.

4) Application of primer:

- (1) Using a sponge, apply primer to surface of glass to be adhered.
- (2) Apply primer to surface of body to be adhered.


CAUTION:

- If primer has dropped on body finish, it is hard to wipe it off. So protect with masking.
- Primer must not project from black frame of glass.
- After applying primer, let it dry spontaneously for about 10 minutes.

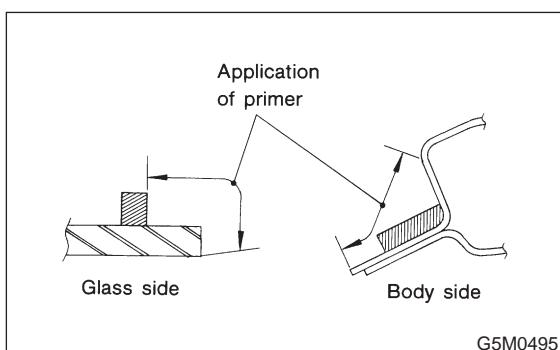

5) Application of adhesive:

- (1) Cut nozzle tip as shown in figure.

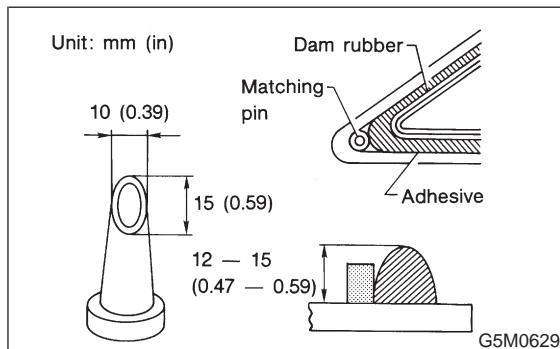


- (2) Open cartridge and put it into a gun with nozzle attached.

(3) Apply adhesive uniformly to all sides of adhesion surface while operating gun along glass end face.

6) Installation of glass:

- (1) Hold glass with rubber suction cups.
- (2) Mount glass on body with matching pin aligned.

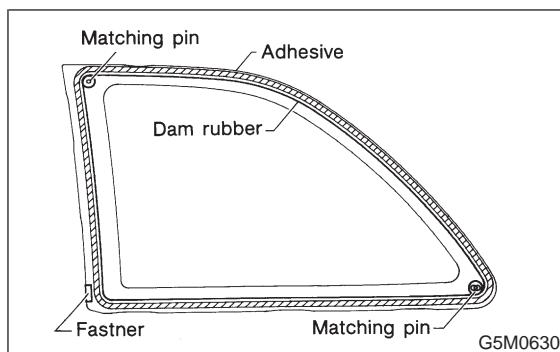

- (3) Stick them fast by pressing all sides lightly.

7) Water leakage test:

After installing glass, test for water leakage after about one hour.

CAUTION:

- Move vehicle slowly.
- When opening and closing door, lower door glass and move door gently.
- Do not squirt strong hose stream on vehicle.




8) Spontaneous drying:




After completing all operations, leave vehicle alone for 24 hours.




CAUTION:

When delivering vehicle to user, tell him or her that vehicle should not be subjected to heavy shocks for at least three days. **DIAGNOSTICS**

1. Door Glass

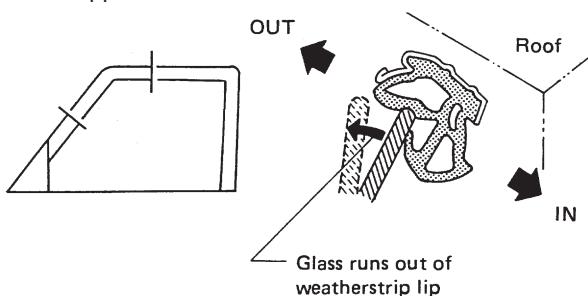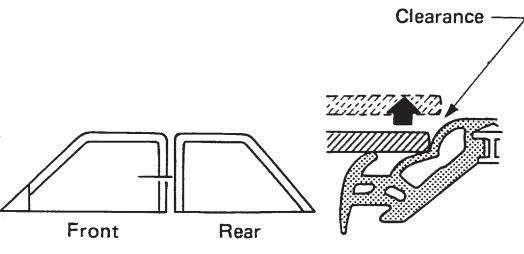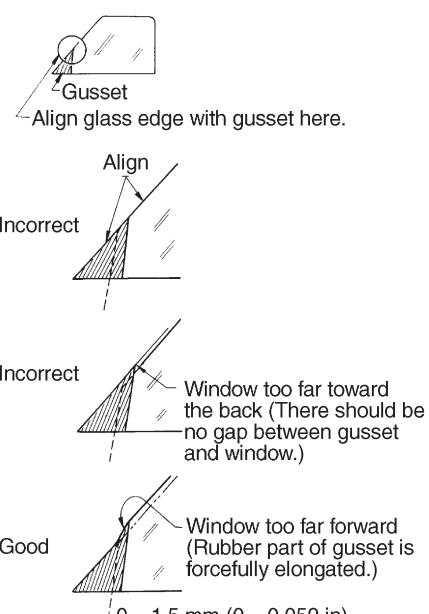Condition	Apparent cause/Correction
<p>Glass in fully closed position</p> <p>1) Glass runs out of weatherstrip lip when considerable hand pressure is applied to it from inside.</p>  <p>(This condition may cause wind/booming noise during high-speed operation.)</p>	<ul style="list-style-type: none"> Insufficient upward travel of glass Increase upward travel of glass.
<p>2) Clearance exists between glass and weatherstrip when light hand pressure is applied to it at center and rear pillar locations.</p>  <p>(This condition may cause wind noise and/or water leakage.)</p>	<ul style="list-style-type: none"> Insufficient glass-to-door weatherstrip contact Check stabilizer and glass for proper contact. Increase contact using upper sash adjustment bolt. Insufficient glass-to-door weatherstrip contact Check stabilizer and glass for proper contact. Increase contact using upper sash adjustment bolt.
<p>3) Adjust door glass so that it is aligned with door rearview mirror gusset</p>  <p>0 – 1.5 mm (0 – 0.059 in)</p>	<ul style="list-style-type: none"> Window is not properly adjusted in up-down/fore-aft direction. Adjust window. If necessary, move "B" channel for regulator to eliminate window "tilt". Gusset is not properly adjusted in fore-aft direction. Adjust gusset after loosening all bolts and nuts with tightening it.

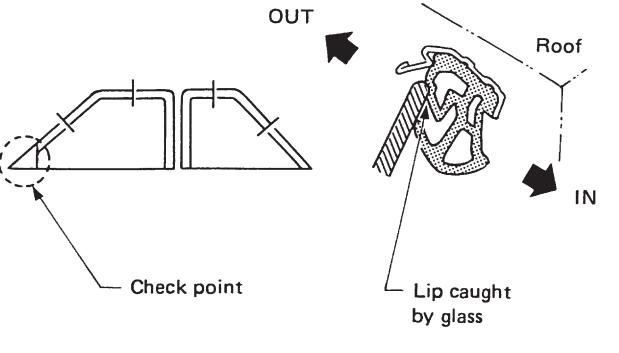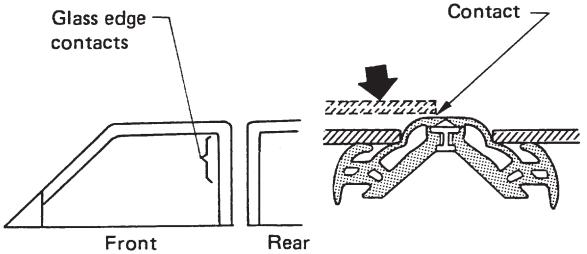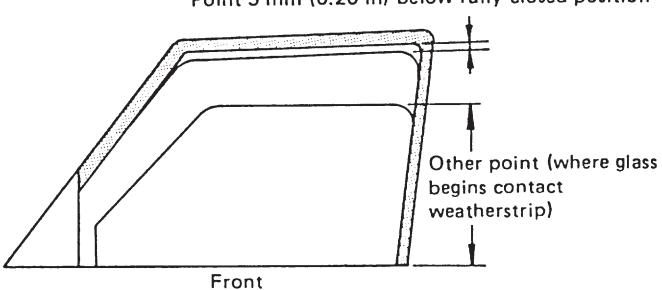Condition	Apparent cause/Correction
<p>Door in fully closed/ open position</p> <p>1) Glass rides over weatherstrip lip when door is closed.</p>  <p>(This condition increases wind/booming noise, leakage and/or effort required to close door.)</p>	<ul style="list-style-type: none"> Improper up-down and in-out glass alignments <p>Adjust glass for up-down and in-out alignments (incl. rear sash, upper stopper adjustment, etc.). If necessary, correct glass tilt by moving regulator "B" channel.</p>
<p>2) Edge of glass contacts retainer when door is fully closed.</p> 	<ul style="list-style-type: none"> Improper glass-to-center pillar weatherstrip or excessive glass contact to weatherstrip <p>Excessive adjusting in contact to weatherstrip causes rear edge of glass to tilt inboard closer to center pillar. Adjust rear sash adjustment bolt to reduce glass contact to weatherstrip.</p>
<p>Raise or lower window glass</p> <p>1) Considerable effort or time is required to operate regulator. Standard operating effort:</p> <ul style="list-style-type: none"> Entire up-down travel except for point 5 mm (0.20 in) below fully closed position: 29.4 N (3.0 kg, 6.6 lb) Point 5 mm (0.20 in) below fully closed position: 45.0 N (4.5 kg, 10.12 lb) 	<ul style="list-style-type: none"> Sliding resistance increased due to high stabilizer-to-glass contact pressure <p>Reduce contact by mounting inner stabilizer to inside of the car.</p> <ul style="list-style-type: none"> High glass-to-windshield contact pressure <p>Reduce contact using upper sash adjustment bolt.</p> <ul style="list-style-type: none"> Unequal contact adjustment stroke between front and rear sashes <p>Set to equal stroke.</p> <ul style="list-style-type: none"> Tilt of rear sash adjustment bolt mounting bracket <p>Correct tilt of bracket so it is parallel to inner panel.</p>

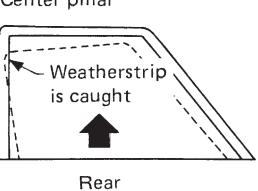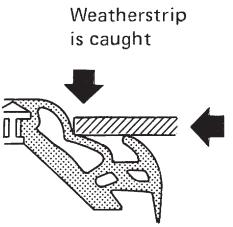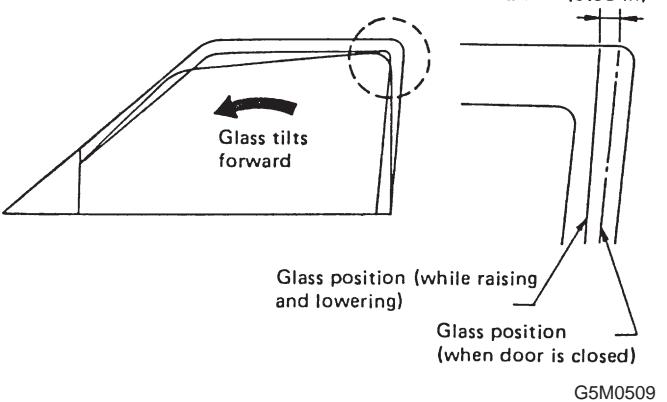Condition		Apparent cause/Correction
Raise or lower window glass	<p>2) Center pillar weatherstrip is caught by rear window glass when glass is raised.</p> <p>Center pillar</p>  <p>Weatherstrip is caught</p>  <p>Rear</p> <p>G5M0508</p>	<ul style="list-style-type: none"> Improper fore-aft or in-out alignment of window glass Lower regulator "B" channel to tilt window glass back.
	<p>3) Glass tilts forward by more than 2 mm (0.08 in).</p>  <p>2 mm (0.08 in)</p> <p>Glass position (while raising and lowering)</p> <p>Glass position (when door is closed)</p> <p>G5M0509</p> <p>(Excessive tilt of glass forward is due to excessive glass "contact" which causes reaction of center pillar weatherstrip.) Glass can be tilted forward due to increase in reaction of shoulder weatherstrip or free play between sash and roller. Taking these symptoms into account, glass should be aligned.</p>	<ul style="list-style-type: none"> Excessive glass contact pressure or improper in-out alignment 1) Lower regulator "B" channel to tilt glass rearward. 2) Reduce contact pressure using upper sash adjustment bolt.

2. Door Lock System

No.	Trouble	Possible cause	Remedy
1	Door cannot be opened by outer handle. (Door can be opened by inner handle.)	Disconnect outer handle rod.	Connect firmly.
2	Door cannot be opened by inner handle. (Door can be opened by outer handle.)	a. Joint of upper rod is disconnected. b. Rear door child lock lever is set to lock side.	Connect firmly. Functionally normal.
3	Door does not open when outer or inner handle is operated with inner lock knob set to unlock position.	a. Joint of lower rod is disconnected. b. Lock is not released due to improper adjustment of lower rod.	Connect firmly. Remove rod from latch. Adjust rod so that lock knob is set in "lock" position is locked.
4	Door opens even when inner lock knob is set to lock position. (Keyless locking is impossible.)	a. Lower rod joint is separated. b. Door is not locked due to improperly adjusted lower rod.	Same as a in No. 3. Same as a in No. 3.
5	Child lock lever will not come up.	a. Inner handle fails to return completely. b. Joint of upper rod is disconnected.	Refer to No. 6.
6	Inner handle stops halfway.	Contact of upper rod with inner handle mounting case.	Eliminate contact by bending upper rod properly.
7	Door cannot be locked or unlocked by key.	Joint of key lock rod is disconnected.	Connect firmly.
8	Auto door-lock switch does not act when inner lock knob is pushed.	Auto door-lock switch does not act due to improperly adjusted lower rod.	Same as a in No. 3.

3. Power Window

	Symptom			
	All windows do not move.	The window of driver side does not move.	The window of driver side does not move "AUTO" down.	The window of each passenger sides does not move.
Battery	(1)			
Fuse in fuse box	(2)			
Circuit breaker and relay	(3)			
Main switch	(4)	(1)	(1)	(1)
Sub switch of each passenger sides				(2)
Motor of driver side		(2)	(2)	
Motor of each passenger sides				(3)
Regulator assembly of each windows				(4)
Power supply line of main switch	(5)	(3)	(3)	
Ground line	(6)			
Harness and connector	(7)	(4)	(4)	(5)

(): Figures in a parenthesis refer to diagnostics procedures.