

## 7. Clutch Switch S912258


### A: REMOVAL S912258A18

Disconnect the connector from the switch, and then remove the switch. <Ref. to CL-22 REMOVAL, Pedal.>

### B: INSTALLATION S912258A11

Install in the reverse order of removal.

### C: INSPECTION S912258A10

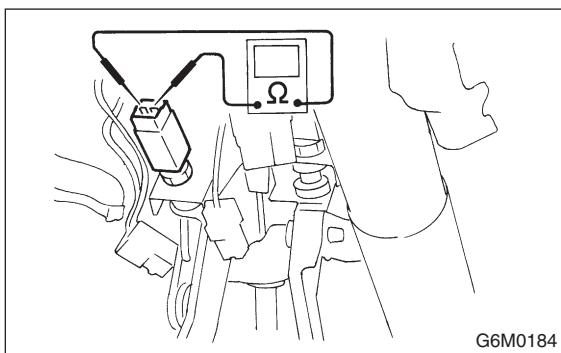

Check continuity between clutch switch terminals.

Switch	Pedal	Tester connection	Specified condition
Clutch	Released	1 — 2	Continuity
	Depressed	1 — 2	No continuity

If NG, replace the clutch switch.

# CLUTCH SWITCH

Cruise Control System

---

**MEMO:**