

CRUISE CONTROL MAIN SWITCH


Cruise Control System

4. Cruise Control Main Switch


S912498

A: REMOVAL S912498A18


- 1) Remove screws and clip from instrument panel lower cover.
- 2) Remove panel lower cover.

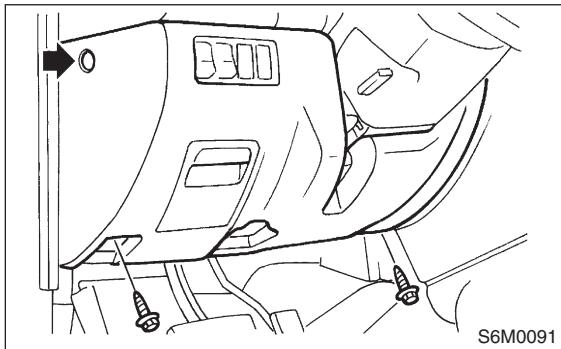


- 3) Disconnect connector from cruise control main switch.

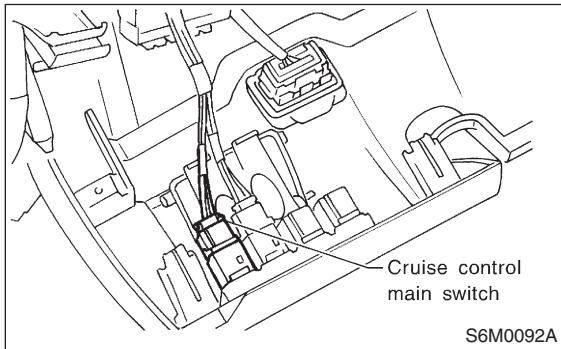

- 4) Remove main switch by pushing it outward.

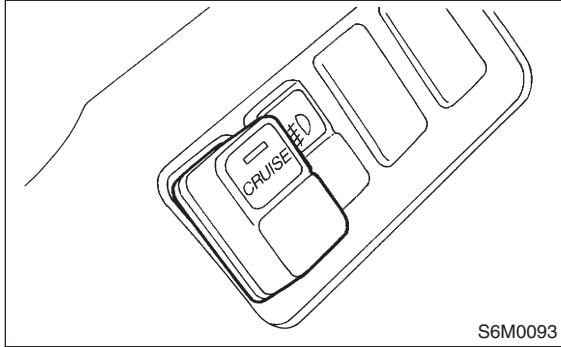

C: INSPECTION S912498A10

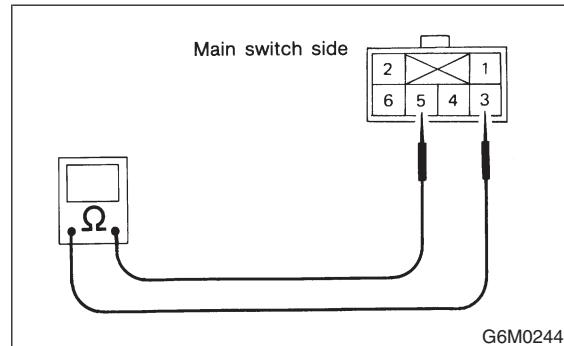

Check continuity between cruise control main switch terminals.

Switch position	Tester connection	Specified condition
OFF	3 — 5	No continuity
ON	3 — 5	Continuity

If NG, replace cruise control main switch.

B: INSTALLATION S912498A11

Install in the reverse order of removal.