


1. General Description S912001

A: COMPONENT S912001A05

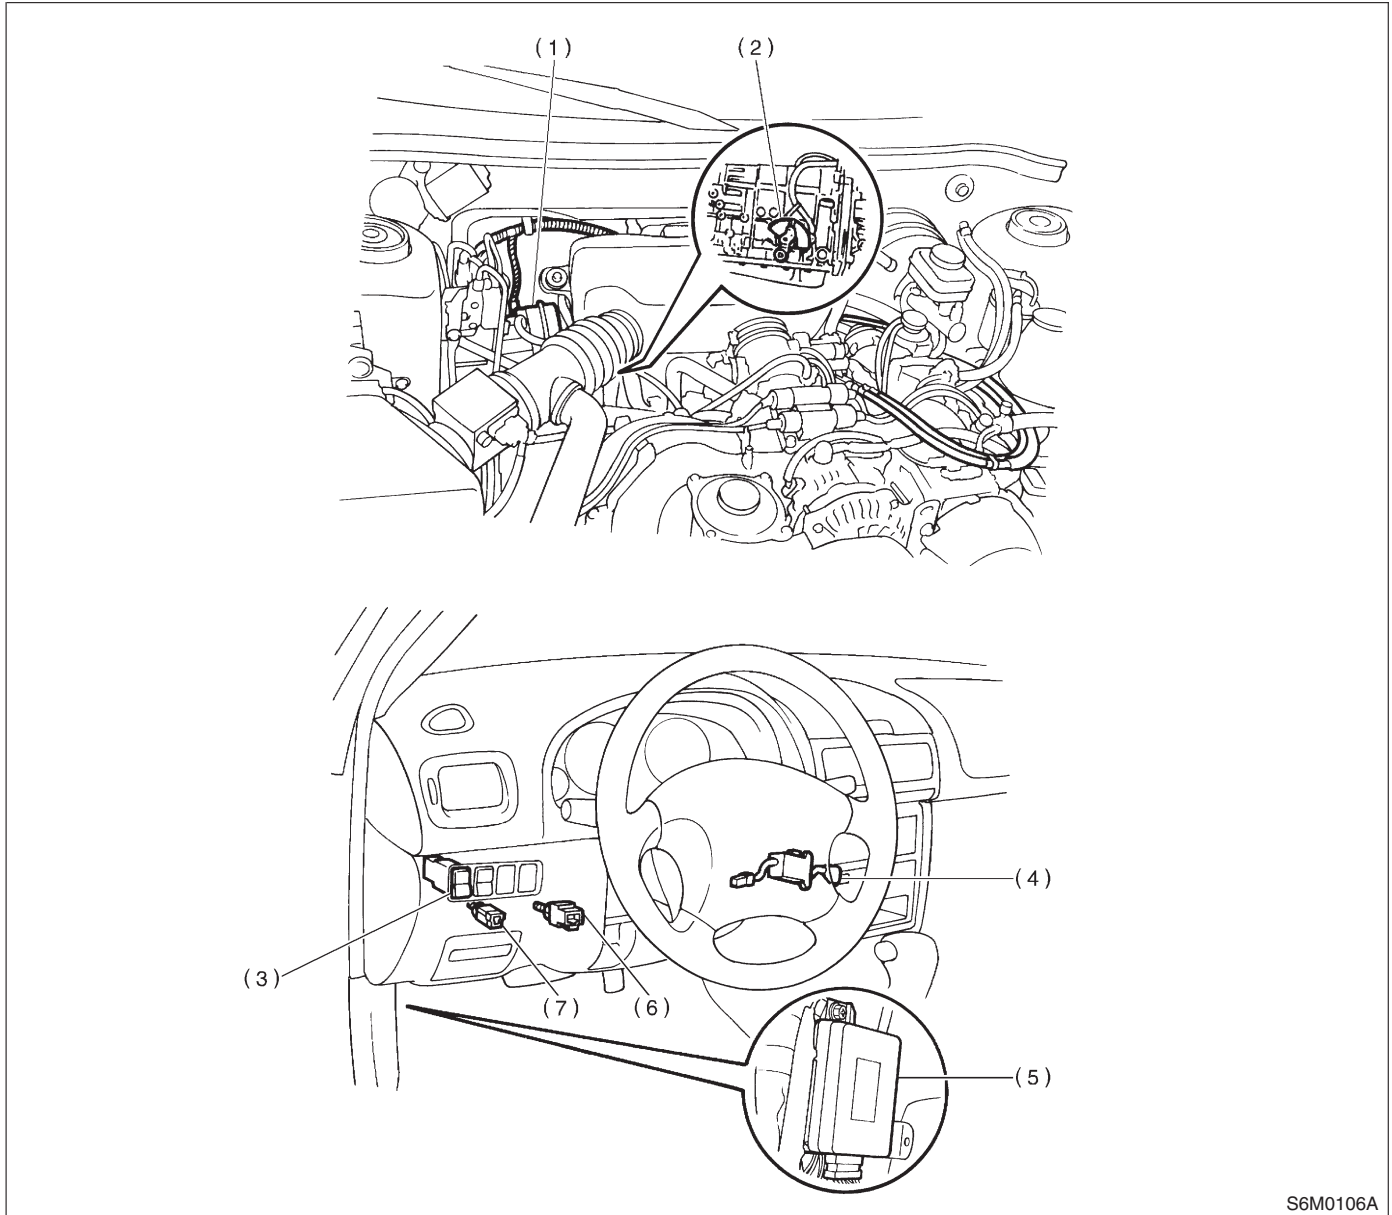

S6M0106A

- | | | |
|--------------------------------|-----------------------------------|------------------------|
| (1) Actuator (with valves) | (4) Cruise control command switch | (7) Clutch switch (MT) |
| (2) Inhibitor switch (AT) | (5) Cruise control module | |
| (3) Cruise control main switch | (6) Stop and brake switch | |

B: CAUTION S912001A03

- Before disassembling or reassembling parts, always disconnect the battery ground cable. When repairing the radio, control module and other parts with memory functions, make note of the memory before disconnecting the battery ground cable. All memory will be erased.
- Reassemble parts in the reverse order of disassembly unless otherwise indicated.
- Adjust parts to specifications specified in this manual.
- Connect connectors and hoses securely during reassembly.
- After reassembly, ensure functional parts operate properly.

C: PREPARATION TOOL S912001A17**1. GENERAL TOOL** S912001A1701

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.