

STOP AND BRAKE SWITCH

Cruise Control System

6. Stop and Brake Switch S912496


A: REMOVAL S912496A18

Disconnect connector from switch, and then remove the switch. <Ref. to BR-57 REMOVAL, Stop Light Switch.>

B: INSTALLATION S912496A11

Install in the reverse order of removal.

C: INSPECTION S912496A10

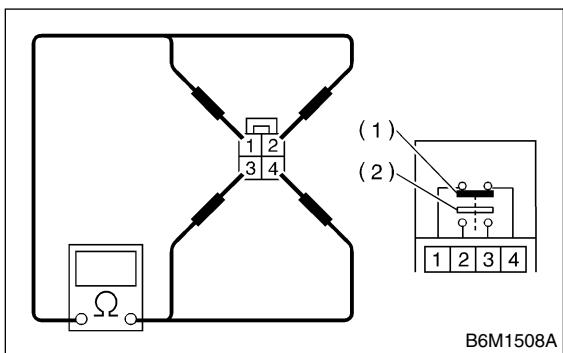

Check continuity brake switch (1) and stop light switch (2) between terminals.

Switch	Pedal	Tester connection	Specified condition
Brake	Released	1 — 4	Continuity
	Depressed	1 — 4	No continuity
Stop light	Released	2 — 3	No continuity
	Depressed	2 — 3	Continuity

If NG, replace stop and brake switch.