

2. Front Hood S913367


A: REMOVAL S913367A18

NOTE:

The hood lock has a dual locking design which consists of a main lock and a safety lock mechanism. When the release knob located at the front pillar on the driver's side is pulled back, the main lock is released through the cable attached to the knob.

The safety lock can be released by pushing the lever protruding above the front grill while opening the hood.

- 1) Open front hood, and remove washer hose.
- 2) Remove attaching bolts.

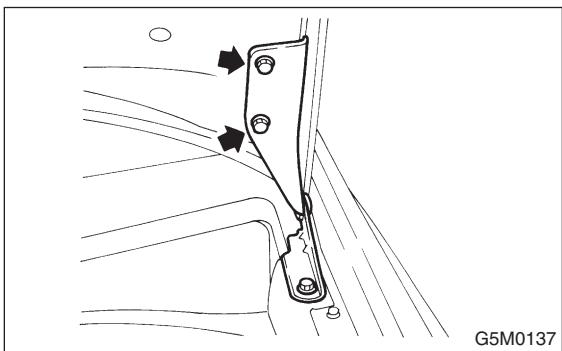

- 3) Detach front hood from hinges.

B: INSTALLATION S913367A11

- 1) Install in the reverse order of removal.
- 2) Adjust clearance between hood and fender. Clearance must be equal on both sides.

C: ADJUSTMENT S913367A01

Rotate hood buffer to adjust lateral height.

CAUTION:

Adjust buffer assembly on each end so that main lock is applied securely when hood is released from a height of approx. 20 mm (0.79 in).

