

5. Sealing Cover

S913580


A: REMOVAL

S913580A18

- 1) Remove trim panel.
- 2) Remove speaker, trim bracket and remote assembly and disconnect connectors.
- 3) Remove sealer with a spatula.

CAUTION:

Be careful because cover may break if sealer is removed forcefully.

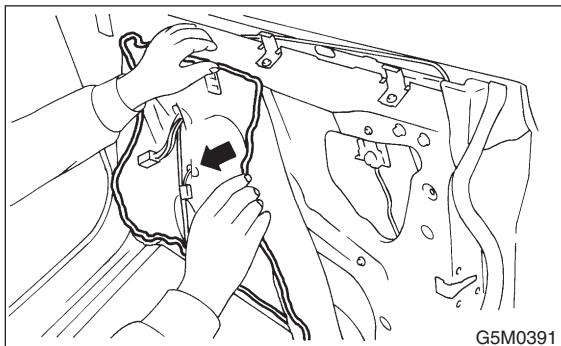

B: INSTALLATION

S913580A11

Install in the reverse order of removal.

NOTE:

- Confirm that sealer is properly applied without breaks. Then install sealing cover.
- When repairing or replacing sealing cover, use "CEMEDINE 5430L" as sealer. It may be overlaid on existing sealer.

Sealer:**CEMEDINE 5430L****CAUTION:**

- Any breaks in sealer can cause water leakage or entry of air and dust. Be sure sealer is applied in a continuous line.
- Make sure sealing cover bonded areas are free from wrinkles or openings.