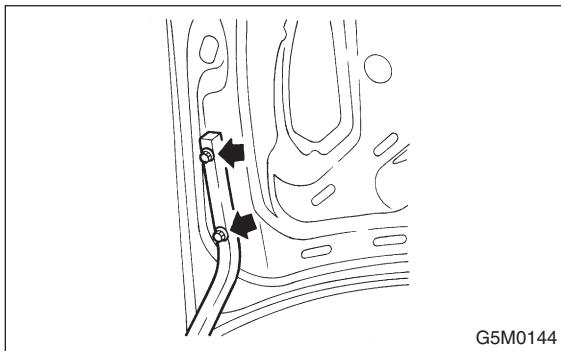


6. Trunk Lid Panel S913365**A: REMOVAL** S913365A18**1. TRUNK LID** S913365A1801

- 1) Open trunk lid.
- 2) Remove trunk lid mounting bolts and detach trunk lid from hinges.


**2. TORSION BAR** S913365A1802

- 1) Open trunk lid. Remove torsion bars from hinge links using ST.

ST 927780000 REMOVER

CAUTION:

Be careful because torsion bar quickly swings back when released.

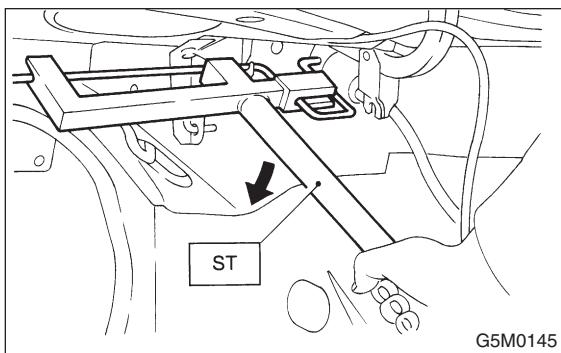

- 2) Remove the left and right torsion bars.

WARNING:

Be careful because trunk lid drops under its own weight when torsion bars are removed.

B: INSTALLATION S913365A11**1. TRUNK LID** S913365A1101

Install in the reverse order of removal.

2. TORSION BAR S913365A1102

Install in the reverse order of removal.

NOTE:

Apply a coat of grease to the rotary section of hinges and contact surfaces of torsion bars.

C: ADJUSTMENT S913365A01

- 1) To adjust left-right lid positioning, loosen bolts which hold trunk lid to hinges.
- 2) To adjust up-down lid alignment, place washer(s) between trunk lid and hinges or move trunk lock assembly up or down.

