


GENERAL DESCRIPTION

Exterior/Interior Trim

1. General Description S911001

A: COMPONENT S911001A05

1. FRONT BUMPER S911001A0501

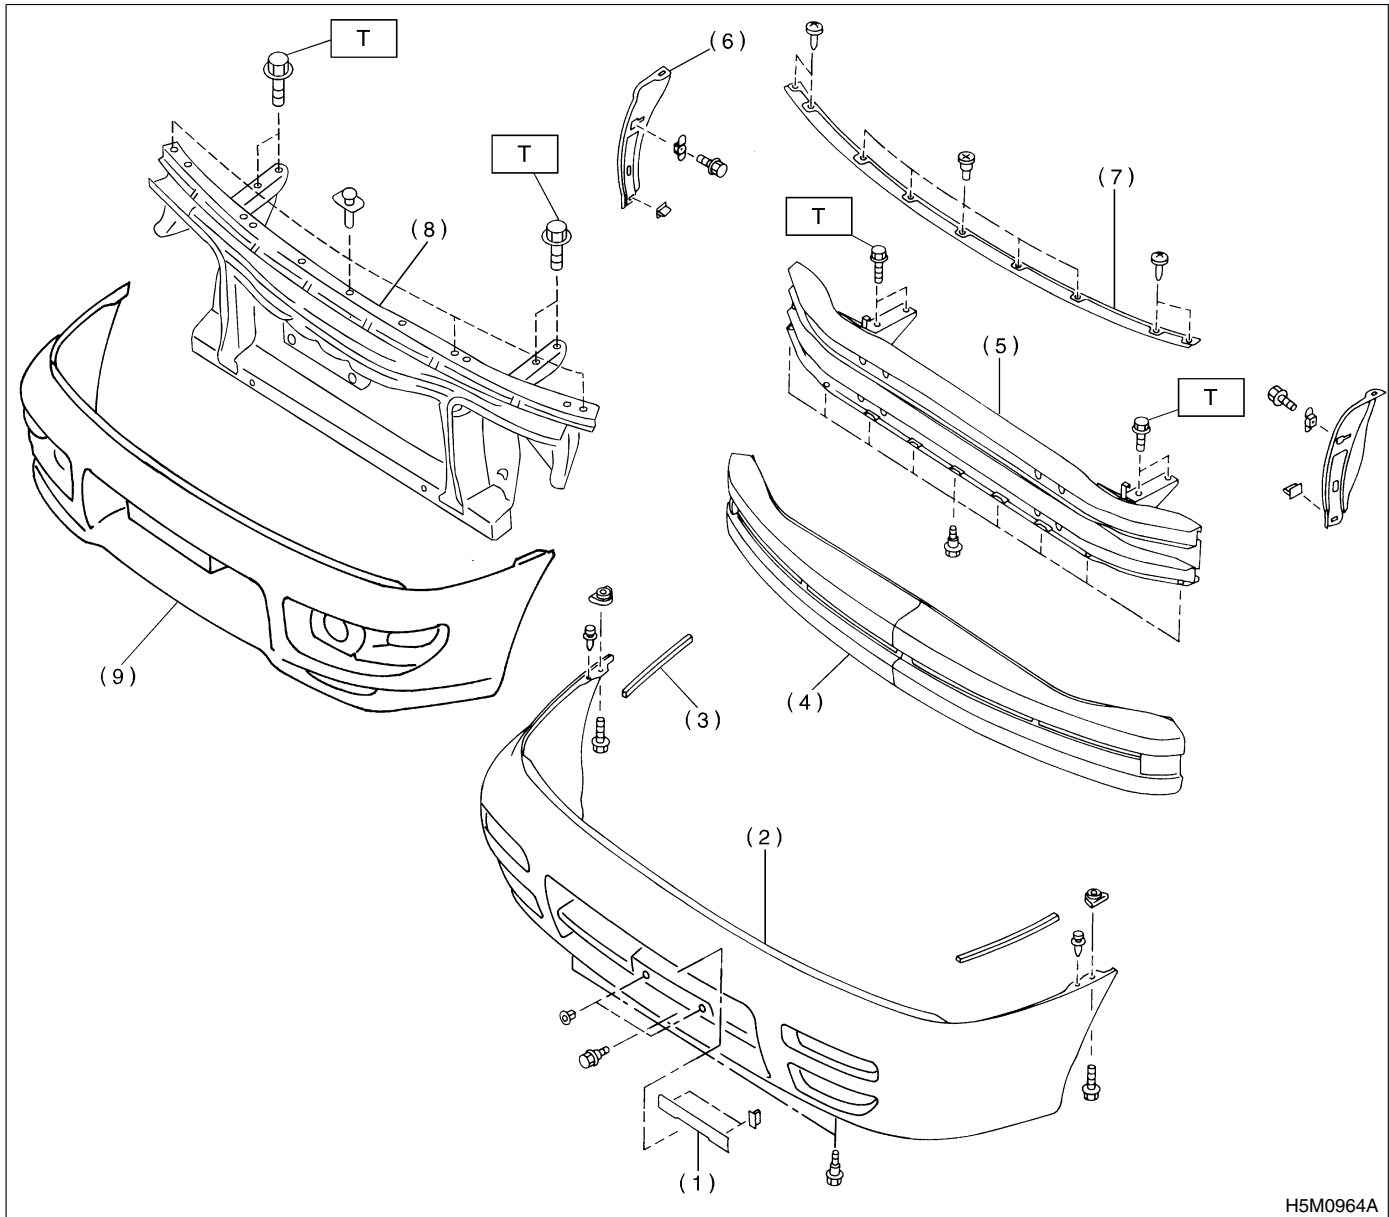


- (1) Plate
- (2) Bumper face (Except USA 2500 cc)
- (3) Spacer
- (4) E/A form bumper

- (5) Front beam (Except USA 2500 cc)
- (6) Bracket (Side)
- (7) Holder upper
- (8) Front beam (USA 2500 cc)

- (9) Bumper face (USA 2500 cc)

Tightening torque: N·m (kgf-m, ft-lb)
T: 93 (9.5, 69)

2. REAR BUMPER S911001A0511

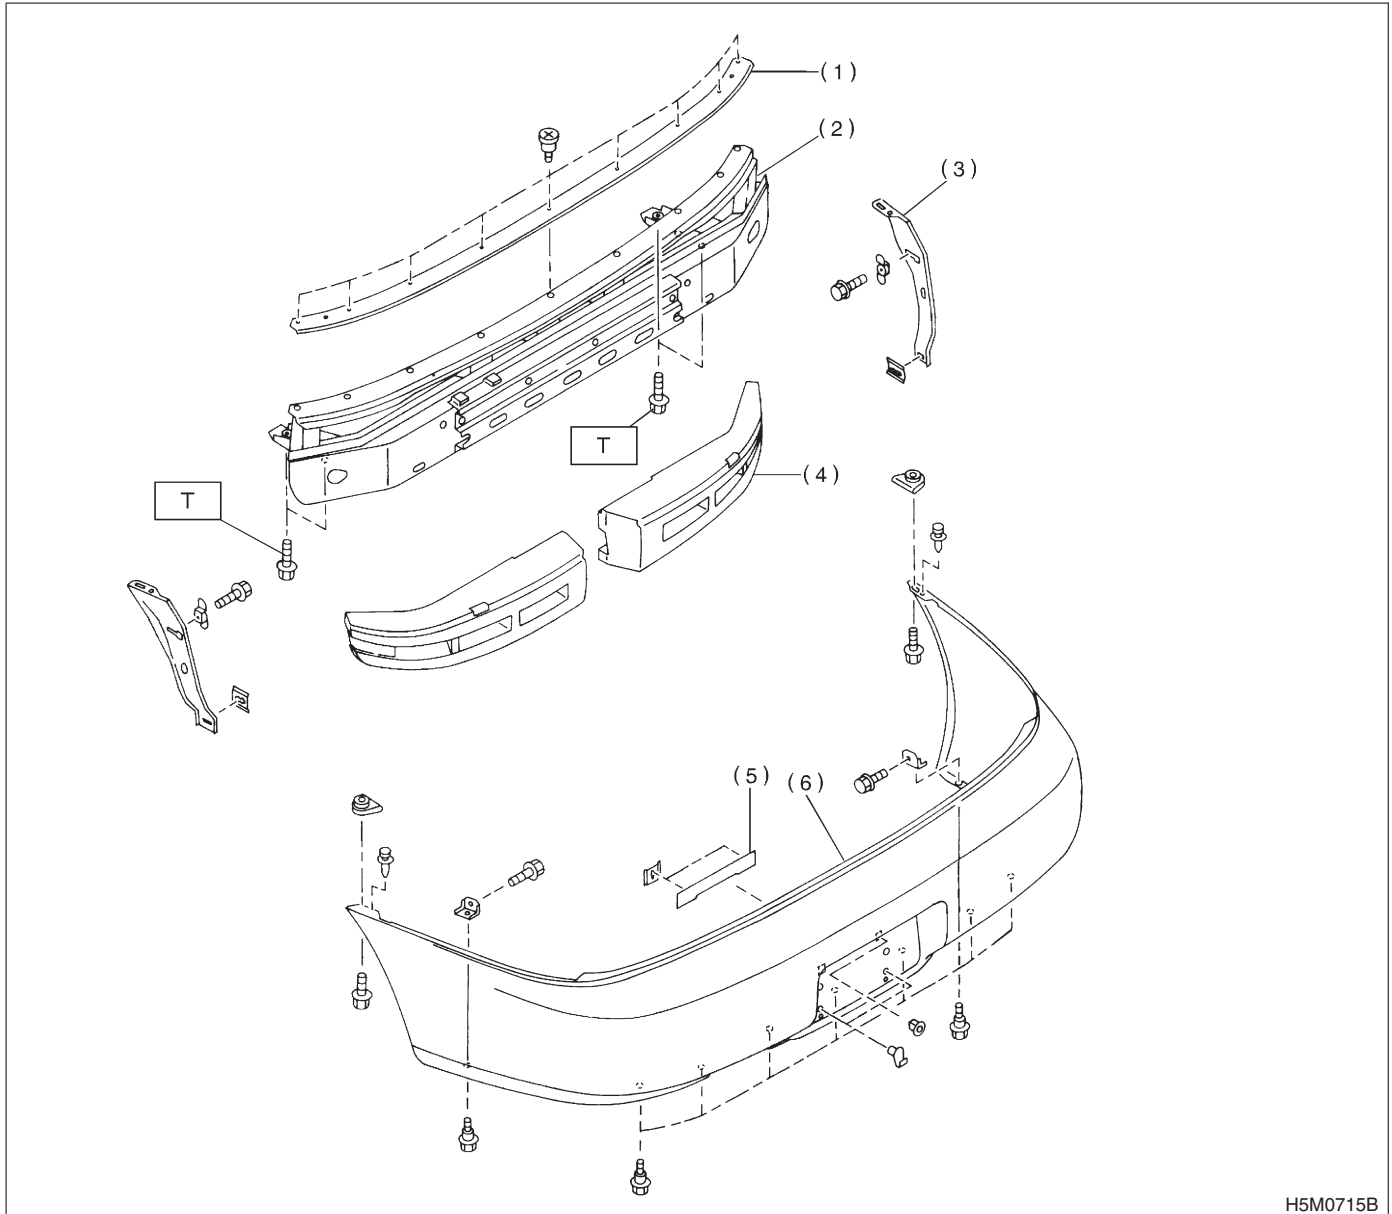

H5M0715B

- | | |
|--------------------|---------------------|
| (1) Holder upper | (4) E/A from bumper |
| (2) Bumper beam | (5) Plate |
| (3) Bracket (Side) | (6) Bumper surface |


Tightening torque: N·m (kgf-m, ft-lb)

T: 93 (9.5, 69)

GENERAL DESCRIPTION

Exterior/Interior Trim


3. DOOR TRIM S911001A0505

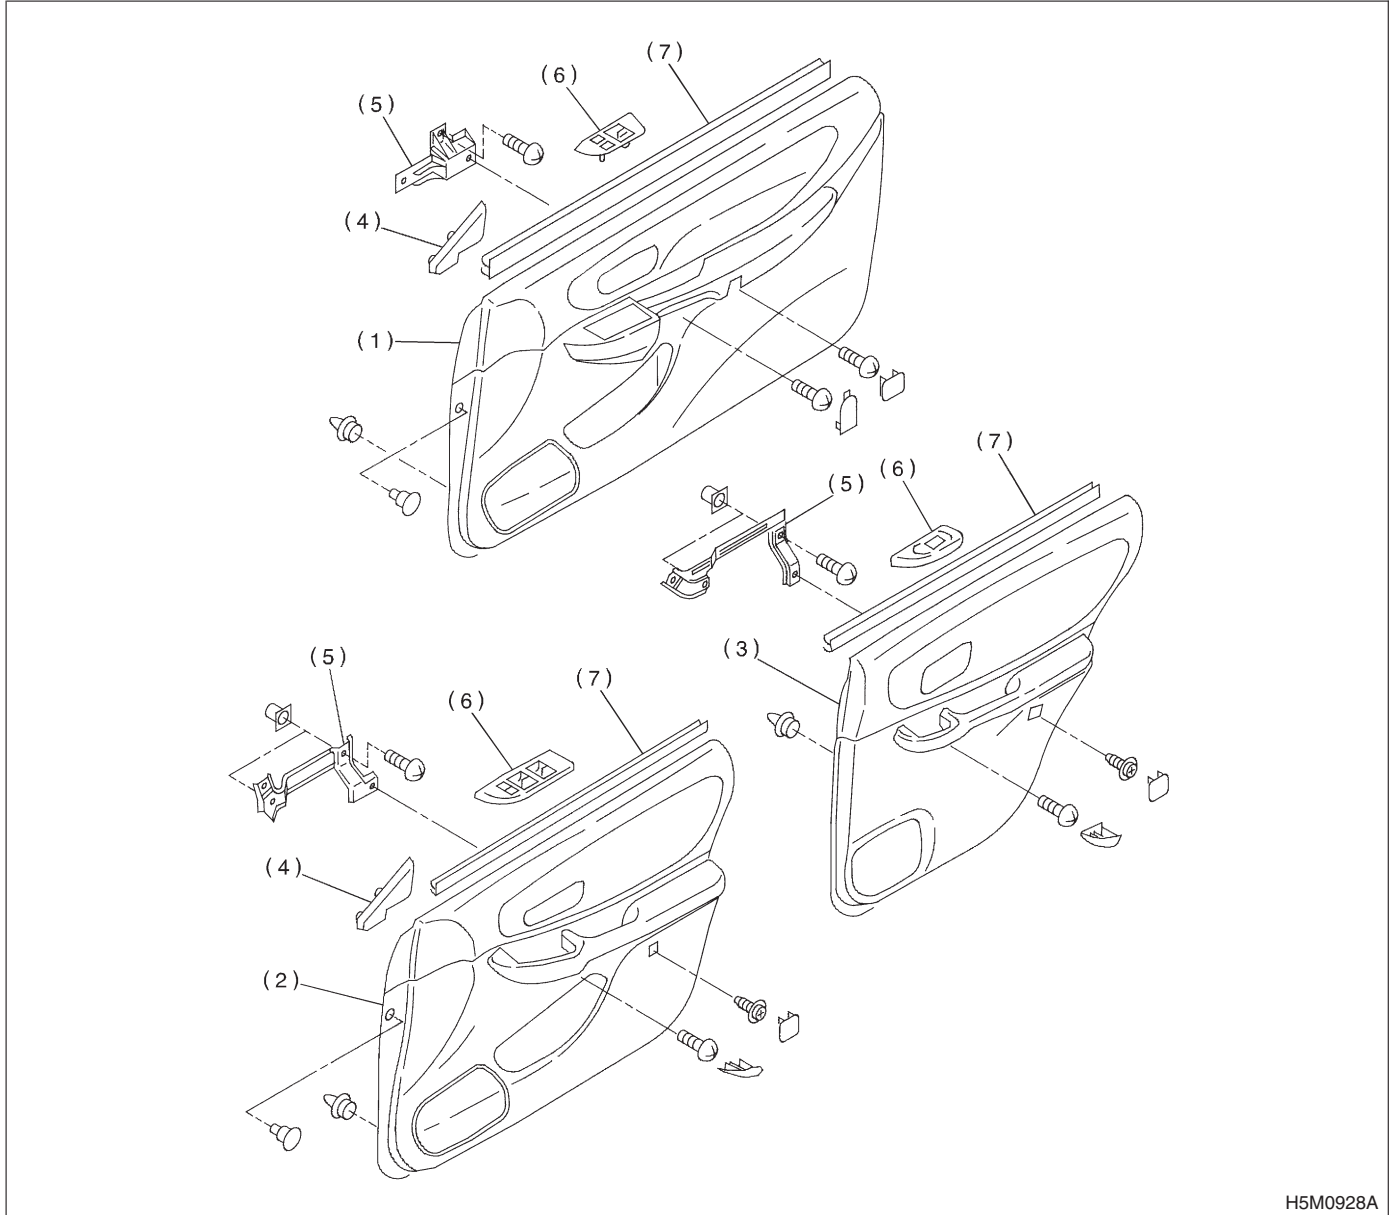

H5M0928A

- | | | |
|-------------------------------------|------------------|------------------|
| (1) Trim panel (Coupe) | (4) Gusset cover | (7) Weatherstrip |
| (2) Trim panel (Except coupe/front) | (5) Bracket | |
| (3) Trim panel (Except coupe/rear) | (6) Cover | |

4. INNER TRIM S911001A0512

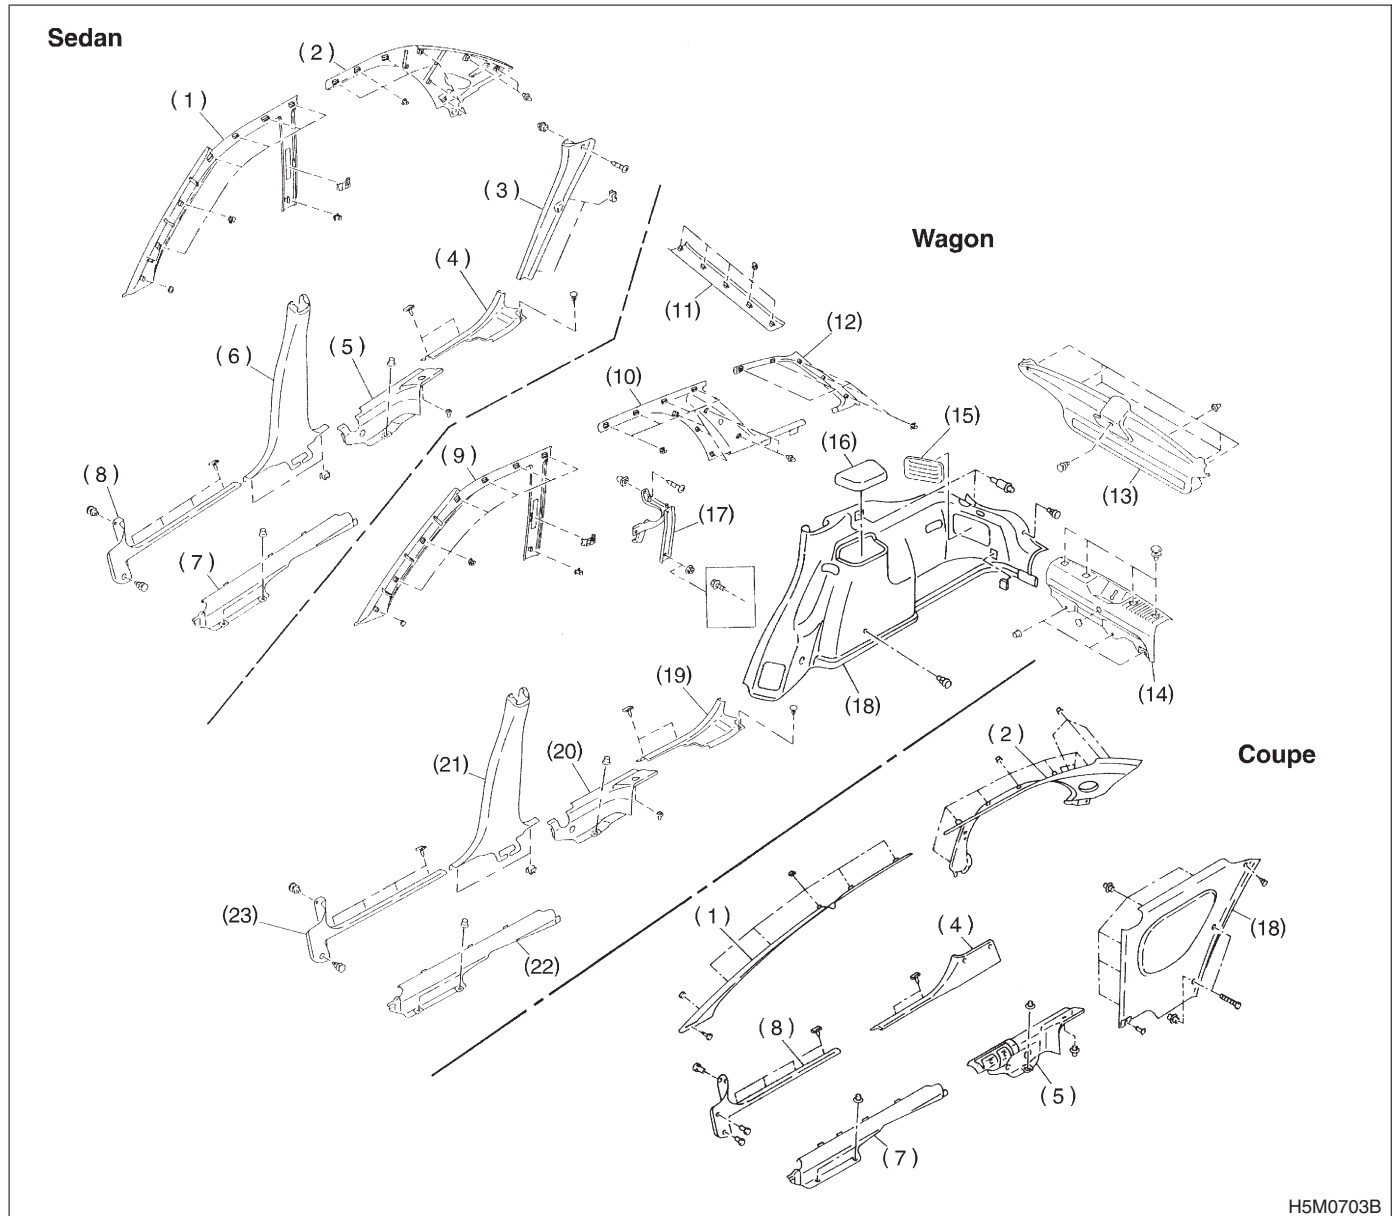


- | | | |
|---------------------------------|------------------------------------|----------------------------------|
| (1) Front pillar upper trim | (9) Front pillar upper trim | (17) Trim bracket |
| (2) Rear pillar upper trim | (10) Rear quarter upper front trim | (18) Rear quarter lower trim |
| (3) Rear pillar lower trim | (11) Rear rail trim | (19) Side sill rear upper cover |
| (4) Side sill rear upper cover | (12) Rear quarter upper rear trim | (20) Side sill rear lower cover |
| (5) Side sill rear lower cover | (13) Rear gate trim | (21) Center pillar lower trim |
| (6) Center pillar lower trim | (14) Rear skirt trim | (22) Side sill front lower cover |
| (7) Side sill front lower cover | (15) Lamp cover | (23) Front pillar lower trim |
| (8) Front pillar lower trim | (16) Cover | |

GENERAL DESCRIPTION

Exterior/Interior Trim

5. INSTRUMENT PANEL S911001A0508

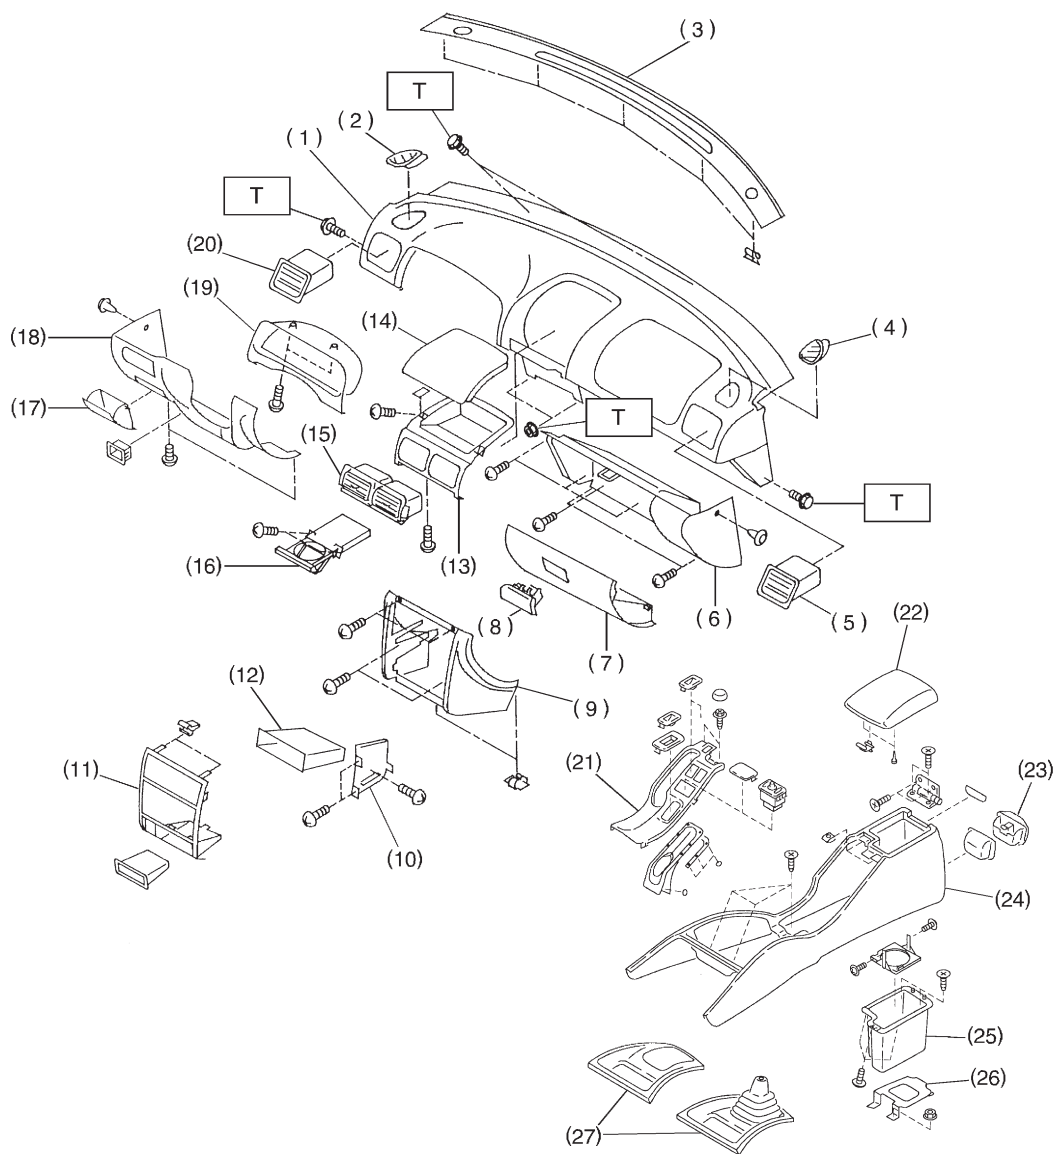


H5M0931A

- | | | |
|-------------------------------------|------------------------|------------------------|
| (1) Pad & frame | (12) Pocket | (23) Ash tray |
| (2) Grille side (D) | (13) Panel center | (24) Console box |
| (3) Front def. grille | (14) Center pocket lid | (25) Console pocket |
| (4) Grille side (P) | (15) Grille center | (26) Rear console BRKT |
| (5) Grille vent (P) | (16) Cup holder | (27) Front cover |
| (6) Glove box panel | (17) Side pocket | |
| (7) Glove box lid | (18) Lower cover ASSY | |
| (8) Knob | (19) Meter visor | |
| (9) Instrument panel center console | (20) Grille vent (D) | |
| (10) BRKT (Radio) | (21) Console cover | |
| (11) Center console cover | (22) Console lid | |

Tightening torque: N·m (kgf-m, ft-lb)
T: 7 (0.7, 5.1)

6. INNER ACCESSORIES S911001A0510

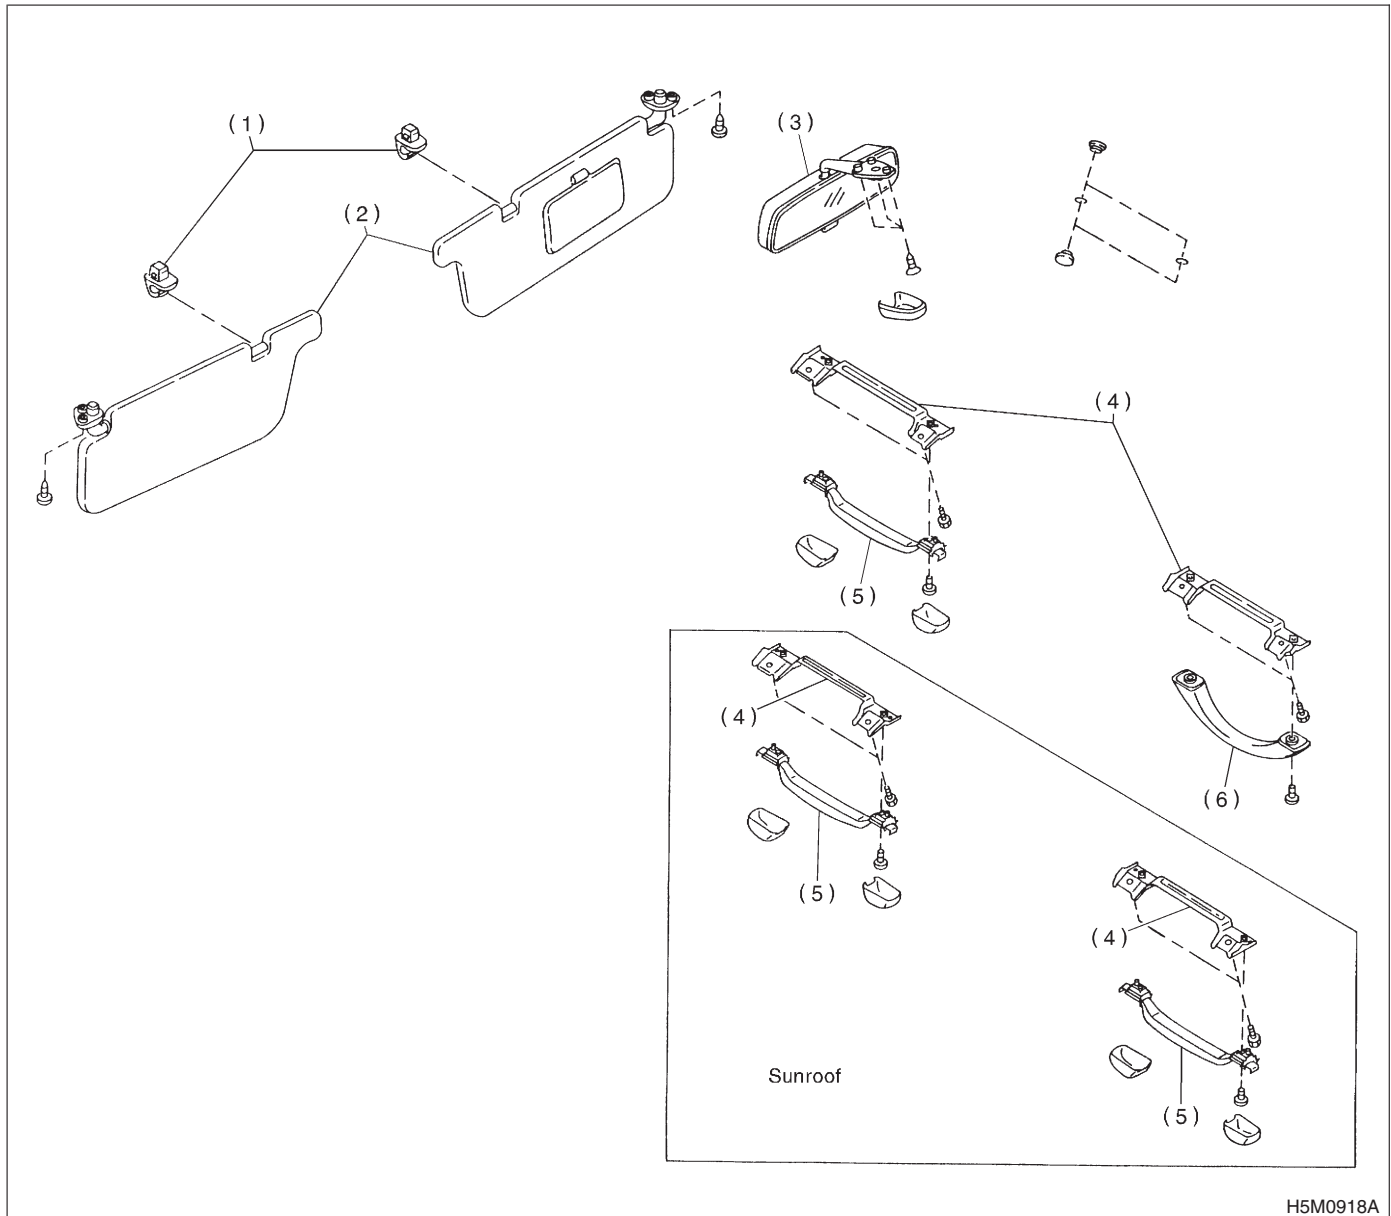

H5M0918A

- | | | |
|---------------|-------------------------|-------------------------------|
| (1) Hook | (3) Rearview mirror | (5) Assist grip (retractable) |
| (2) Sun visor | (4) Assist rail bracket | (6) Assist grip (fixed) |

GENERAL DESCRIPTION

Exterior/Interior Trim

B: PREPARATION TOOL S911001A17

1. GENERAL TOOL S911001A1701

TOOL NAME	REMARKS
Clip Remover	Used for trim removal.
Adhesive Remover	Used for side protector removal.
Primer	Used for side protector installation.
Infrared Lamp	Used for removal/installation of side protector.
Tow-sided Tape	Used for side protector installation.
TORX® T30	Used for removal/installation of crossbar.