


18. Hood Duct S911615


A: REMOVAL S911615A18

1. CENTER DUCT S911615A1801

- 1) Open the hood.
- 2) Remove clip and screws, then remove brace cover.

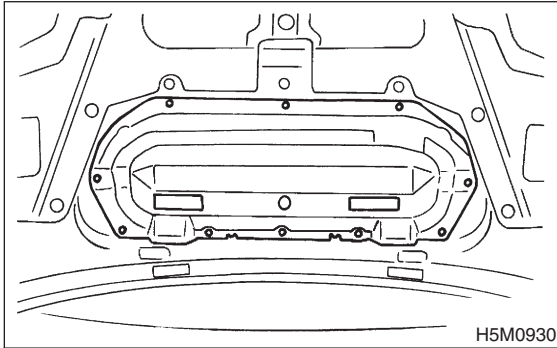


- 3) Remove six nuts.
- 4) Disconnect the two clips from hood, then remove hood duct grille.

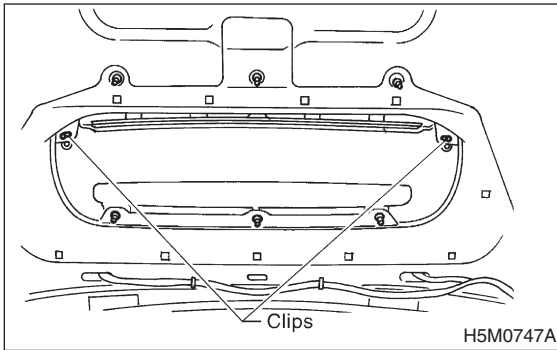

2. SIDE DUCT S911615A1802

- 1) Open the hood.
- 2) Remove four nuts.
- 3) Disconnect the two clips from brace cover, then remove brace cover.

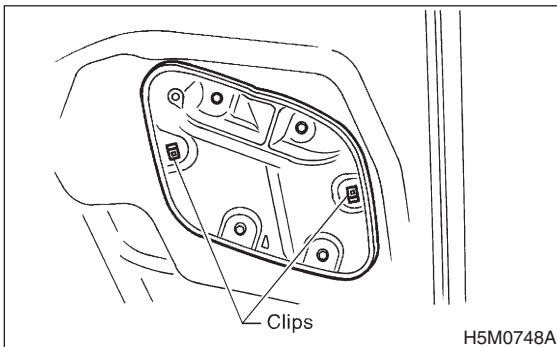

- 4) Remove duct grille.

B: INSTALLATION S911615A11

1. CENTER DUCT S911615A1101

Install in the reverse order of removal.

2. SIDE DUCT S911615A1102

Install in the reverse order of removal.