



8. Spoiler S911385

A: REMOVAL S911385A18

- 1) Remove stoppers from both sides of trunk lid.

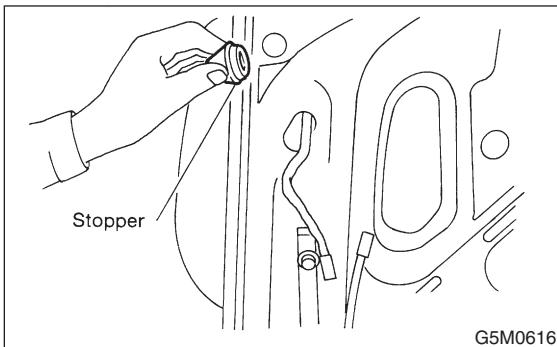


- 2) Disconnect high-mount stop light connector.

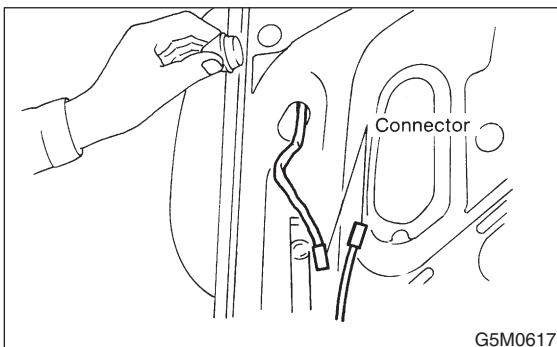

- 3) Remove nuts from rear spoiler.

CAUTION:

Be careful not to drop nuts into box section of trunk lid.

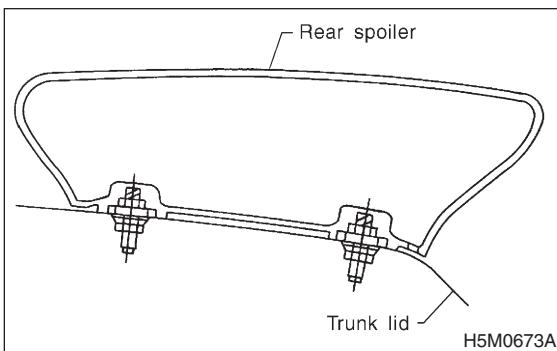

- 4) Lift rear spoiler and unfasten clips.

- 5) Remove spoiler from trunk lid.

CAUTION:

Be careful not to damage trunk lid.

B: INSTALLATION S911385A11

Install in the reverse order of removal.

Tightening torque:

7.4 N·m (0.75 kgf·m, 5.4 ft-lb)