


13. Upper Inner Trim S911384

A: REMOVAL S911384A1801

1. FRONT PILLAR UPPER TRIM PANEL


S911384A180101

- 1) Remove center pillar lower trim panel.
- 2) Remove seat belt anchor bolts.
- 3) Pry pawls off body flange of front pillar upper trim panel using screwdriver.
- 4) Remove clips which hold front pillar upper trim panel, and lift trim panel out by moving it toward the compartment.

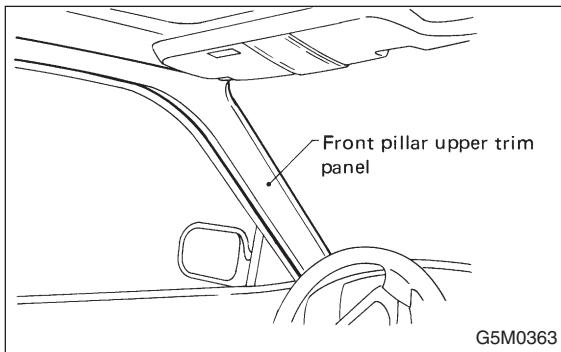

2. REAR PILLAR UPPER TRIM PANEL (SEDAN) S911384A180102

- 1) Remove rear seat cushion and backrest.
- 2) Remove tapping screw from rear pillar lower trim panel, and remove trim panel by sliding it forward.
- 3) Remove front pillar upper trim end.
- 4) Pry the pawl off front end using screwdriver.
- 5) Remove clips which hold rear pillar upper trim, and remove trim panel by sliding it forward.

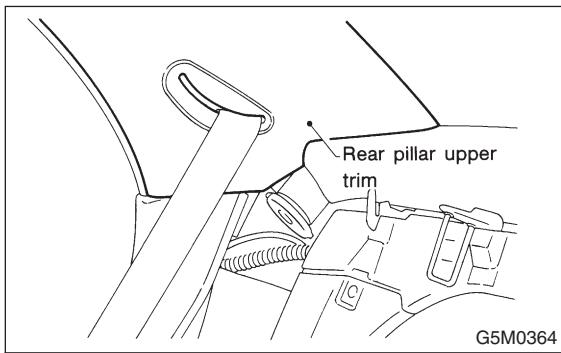

B: INSTALLATION S911384A11

1. FRONT PILLAR UPPER TRIM PANEL

S911384A1101

Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of front pillar upper trim panel to body flange.

2. REAR PILLAR UPPER TRIM PANEL (SEDAN) S911384A1102

Install in the reverse order of removal.

CAUTION:

Be sure to securely hook pawls of rear pillar upper trim panel to body flange.