


GENERAL DESCRIPTION

Glass/Windows/Mirrors

1. General Description S905001

A: COMPONENT S905001A05

1. FIXED GLASS S905001A0506

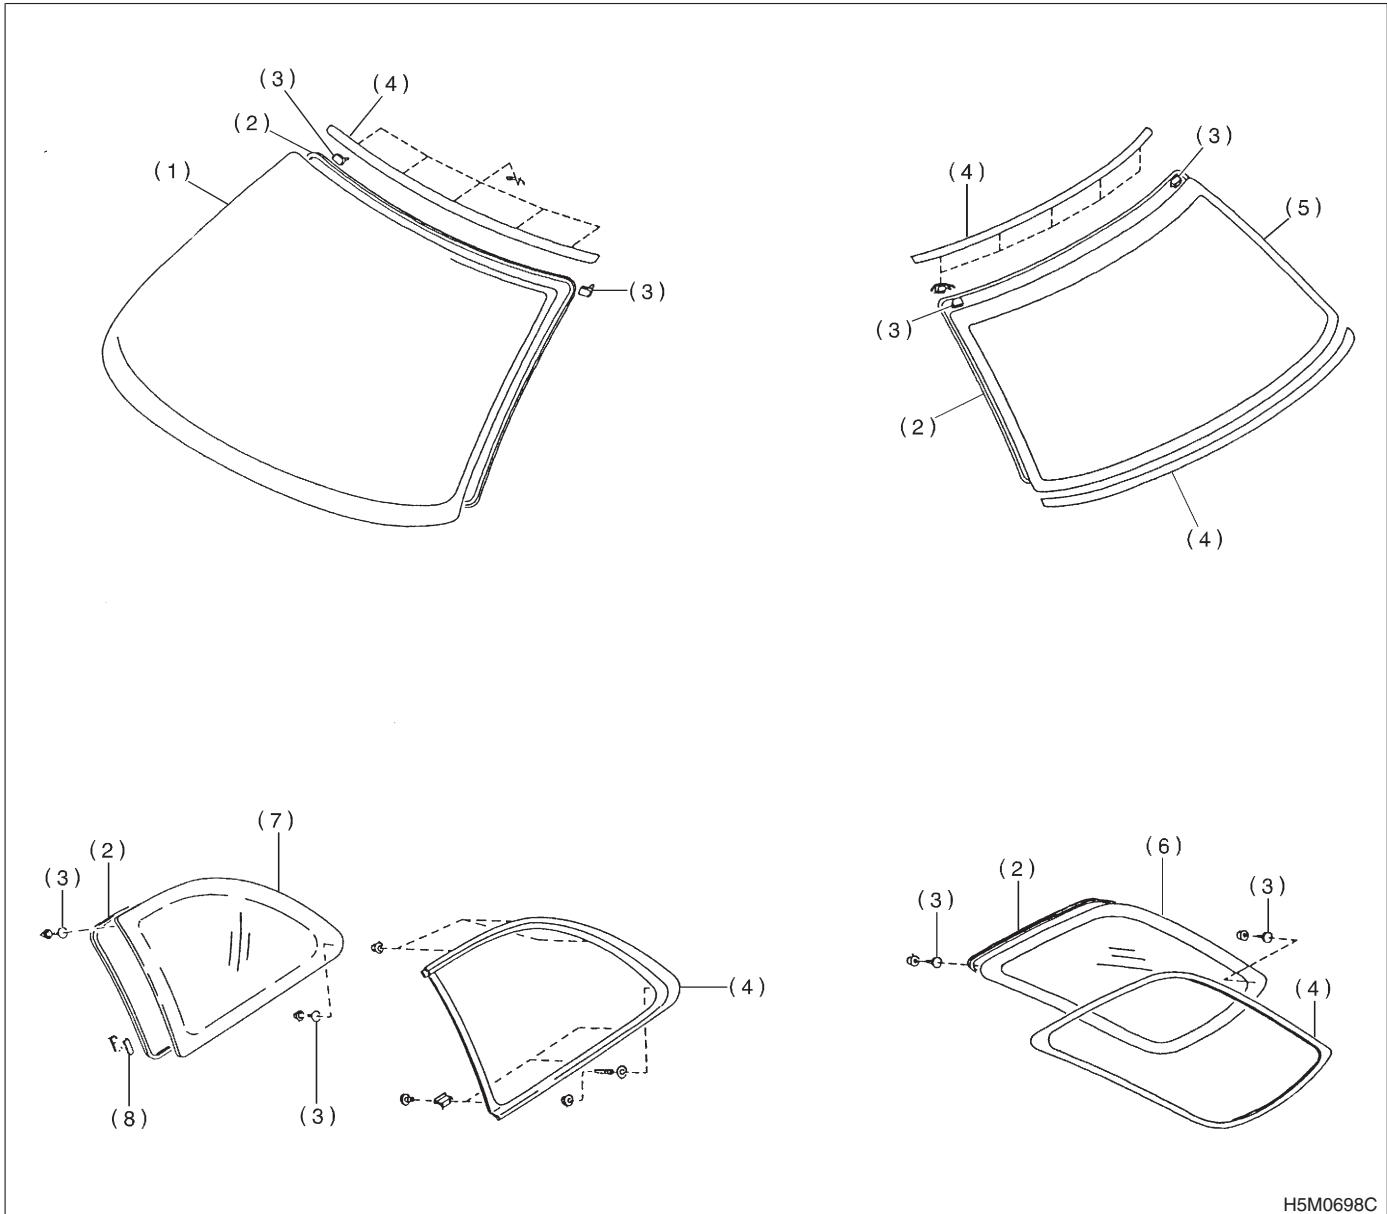

H5M0698C

- (1) Windshield glass
- (2) Dam rubber
- (3) Locate pin


- (4) Molding
- (5) Rear window glass
- (6) Rear quarter glass (Wagon)

- (7) Rear quarter glass (Coupe)
- (8) Fastener

GENERAL DESCRIPTION

Glass/Windows/Mirrors

2. FRONT DOOR GLASS S905001A0503

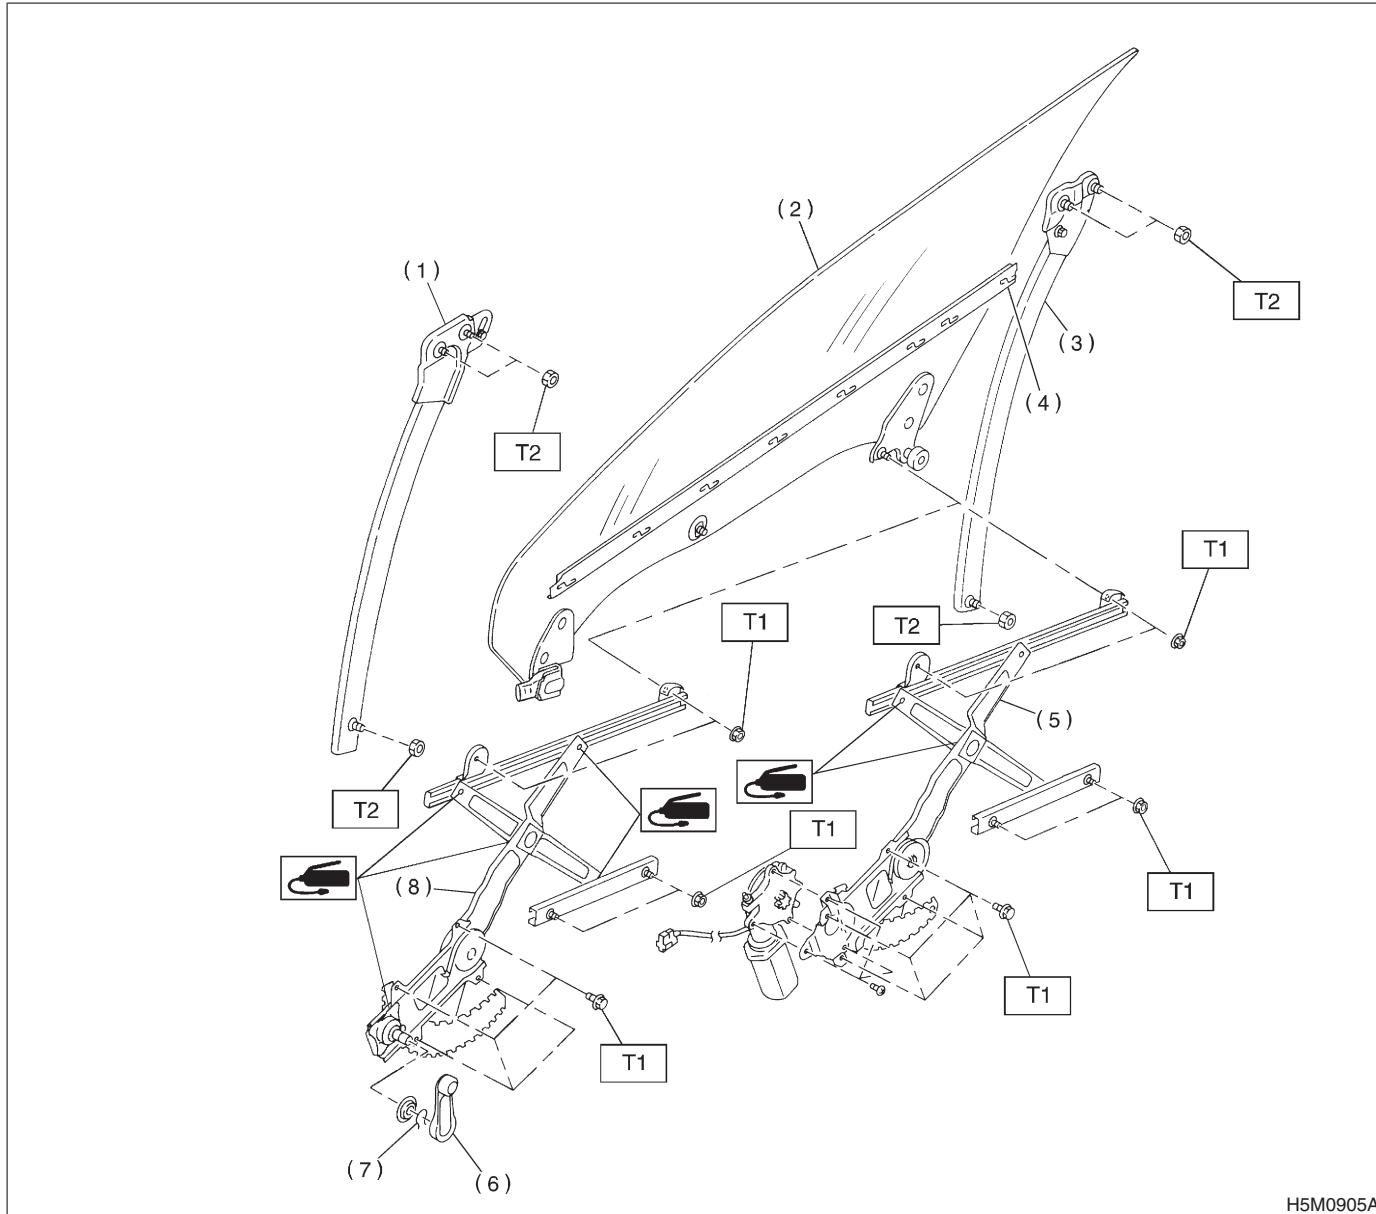

- (1) Door sash (Front)
- (2) Glass
- (3) Door sash (Rear)
- (4) Weatherstrip (Inner)
- (5) Regulator and motor ASSY
- (6) Regulator handle
(Except power window)
- (7) Retainer spring
- (8) Regulator ASSY

Tightening torque: N·m (kgf·m, ft·lb)


T1: 7.4 (0.75, 5.4)

T2: 14 (1.4, 10.1)

GENERAL DESCRIPTION

Glass/Windows/Mirrors

3. REAR DOOR GLASS S905001A0504

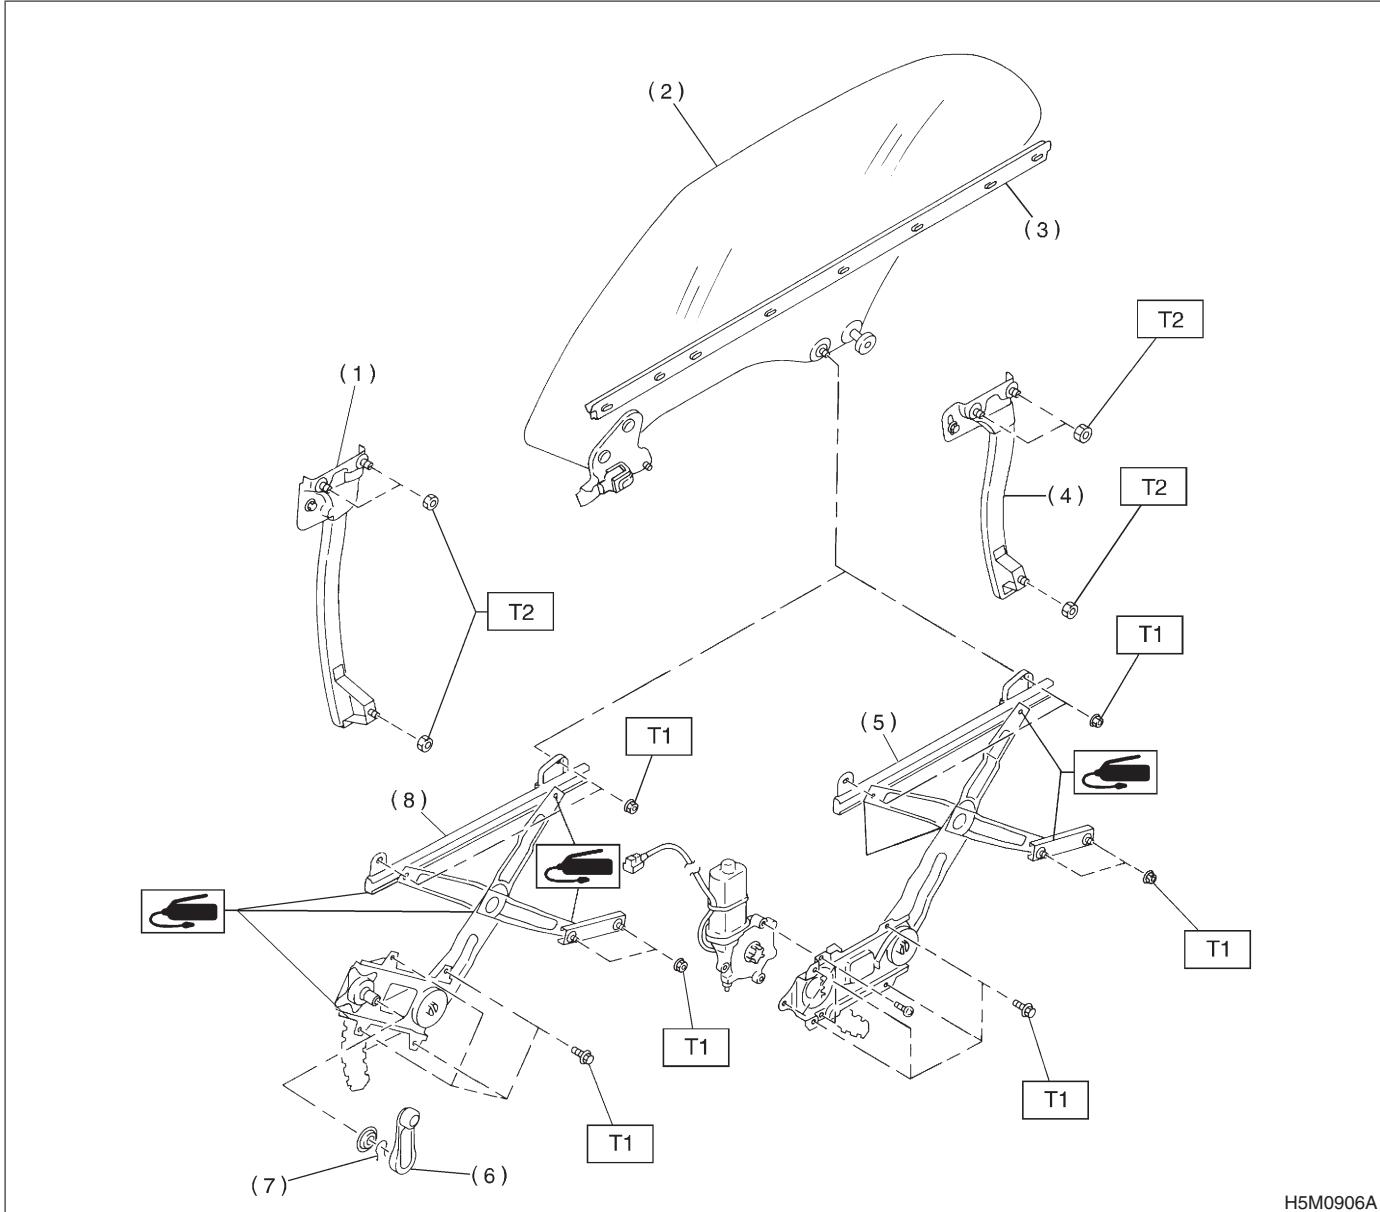

H5M0906A

- (1) Door sash (Front)
- (2) Glass
- (3) Weatherstrip (Inner)
- (4) Door sash (Rear)
- (5) Regulator and motor ASSY
- (6) Regulator handle
(Except power window)
- (7) Retainer spring
- (8) Regulator ASSY

Tightening torque: N·m (kgf·m, ft·lb)

T1: 7.4 (0.75, 5.4)

T2: 14 (1.4, 10.1)

B: CAUTION S905001A03

- When electrical connectors are disconnected, always conduct an operational check after connecting them again.
- Avoid impact and damage to the glass.

C: PREPARATION TOOL S905001A17

1. GENERAL TOOL S905001A1701

TOOL NAME	REMARKS
Circuit Tester	Used for measuring resistance, voltage and ampere.
Piano Wire	Used for window glass removal.
Windshield Knife	Used for window glass removal.