


## 2. Combination Meter Assembly

S907335


### A: REMOVAL

S907335A18

- 1) Move steering wheel most down.
- 2) Remove screws which secure visor and remove visor.

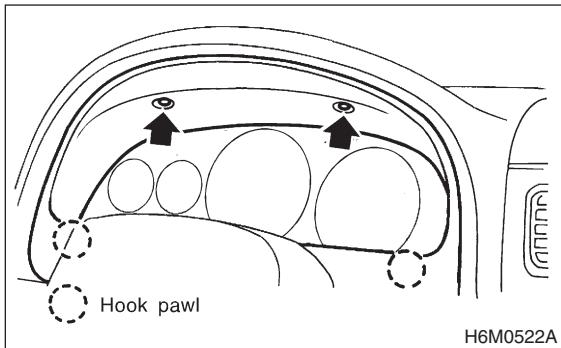

- 3) Remove screws which secure combination meter, and pull combination meter out.

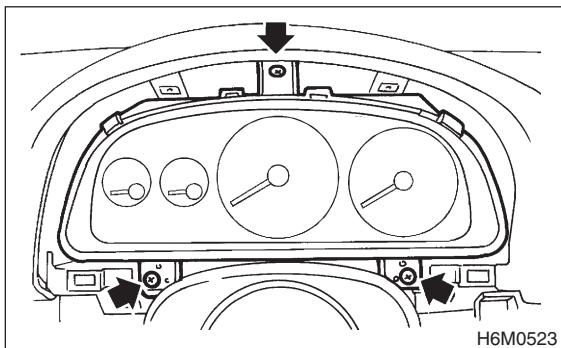

- 4) Disconnect connector from back of combination meter.

### B: INSTALLATION

S907335A11

Install in the reverse order of removal.

#### CAUTION:


When installing combination meter, be sure to connect connectors to backside of combination meter.

### C: LOCATION

S907335A13

#### 1. COMBINATION METER BULB

S907335A1301

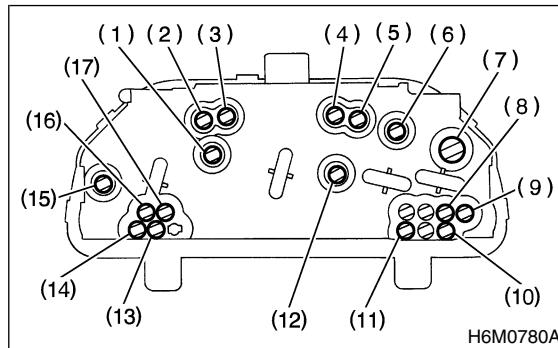

- (1) Speedometer and tachometer
- (2) HI-beam
- (3) Turn RH
- (4) Turn LH
- (5) Airbag
- (6) Clock
- (7) Fuel and temperature gauge
- (8) ABS
- (9) Low fuel
- (10) FWD
- (11) AT oil temp.
- (12) Speedometer
- (13) Check engine
- (14) Charge
- (15) Tachometer
- (16) Brake
- (17) Oil pressure