

GENERAL DESCRIPTION

Instrumentation/Driver Info

1. General Description S907001

A: SPECIFICATIONS S907001E49

Combination meter	Speedometer	Electric pulse type
	Temperature gauge	Thermistor cross coil type
	Fuel gauge	Resistance cross coil type
	Tachometer	Electric pulse type
	Turn signal indicator light	12 V — 1.4 W
	Charge indicator light	12 V — 1.4 W
	Oil pressure indicator light	12 V — 1.4 W
	ABS warning light	12 V — 1.4 W
	CHECK ENGINE warning light (Malfunction indicator light)	12 V — 1.4 W
	Hi-beam indicator light	12 V — 1.4 W
	Door open warning light	12 V — 1.4 W (LED)
	Seat belt warning light	12 V — 1.4 W (LED)
	Brake fluid and parking brake warning light	12 V — 1.4 W
	FWD indicator light	12 V — 1.4 W
	AIRBAG warning light	12 V — 1.4 W
	Meter illumination light	12 V — 3.4 W, 3.0 W, 1.4 W
	AT OIL TEMP. warning light	12 V — 1.4 W

B: CAUTION S907001A03

- Be careful not to damage meters and instrument panel.
- Be careful not to damage meter glasses.
- Make sure that electrical connector is connected securely.
- After installation, make sure that each meter operates normally.
- Use gloves to avoid damage and getting fingerprints on the glass surface and meter surfaces.
- Do not apply excessive force to circuit plate.
- Do not drop or otherwise apply impact.